Mamiya

PARTS CATALOG
CLARIFICATION CHART

for

Mamiya C330 Professional *f*

and

Mamiya C330 Professional

Revised Edition

P.C.78-5-C330F

P.C.78-5-C330

C.C.78-5-C330F

C.C.78-5-C330

Mamiya
CAMERA CO., LTD
TOKYO, JAPAN

MMC330F

EXPLODED VIEWS

Mamiya C330 Professional f

NOTE : The parts with its parts number in square are exclusively used for the C330f.

Mamiya

Mamiya C330f Professional

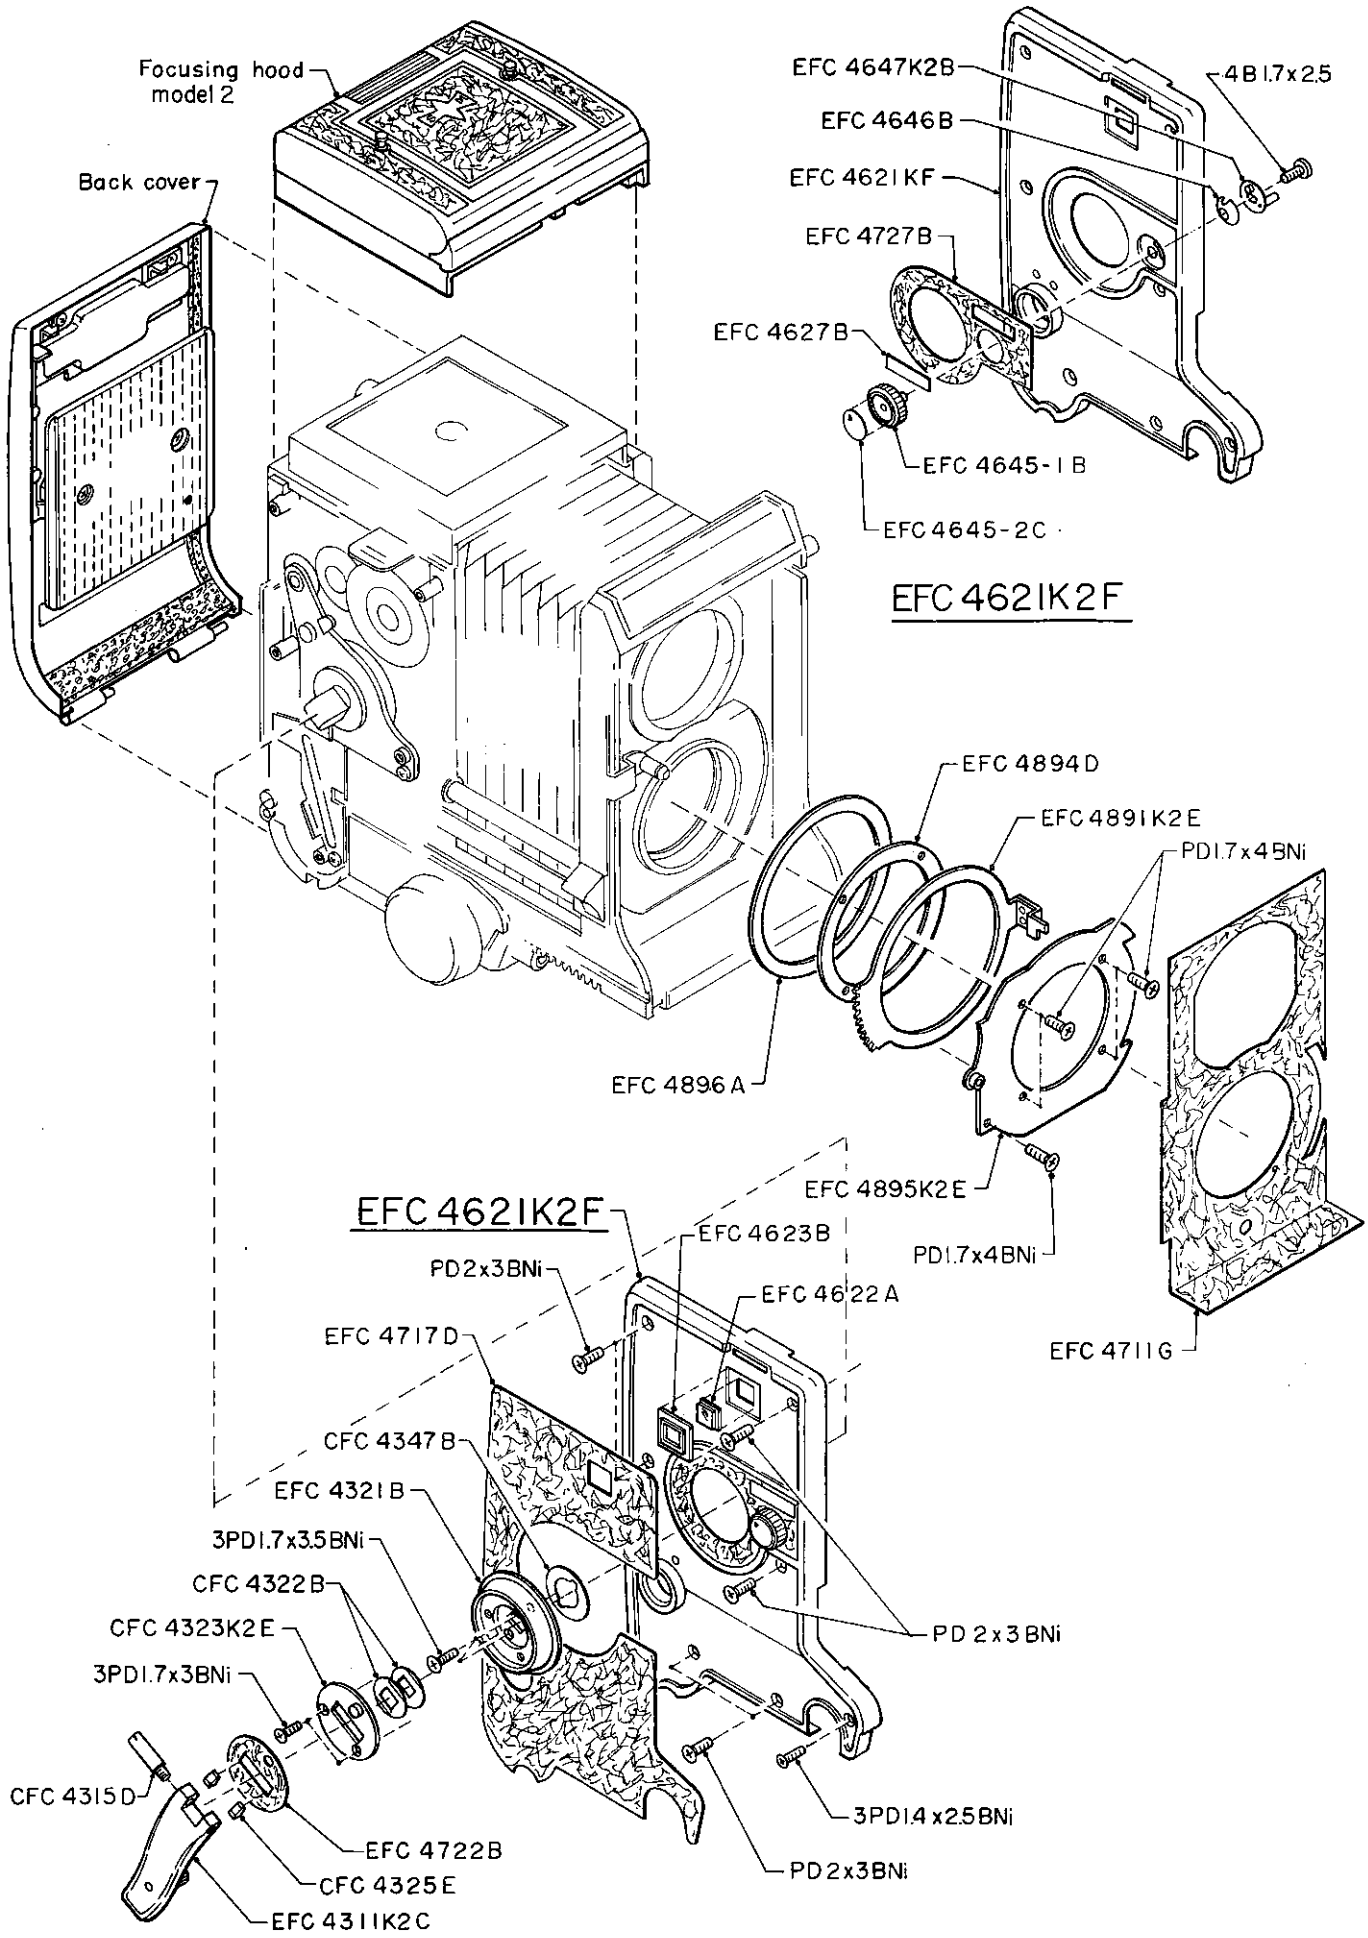

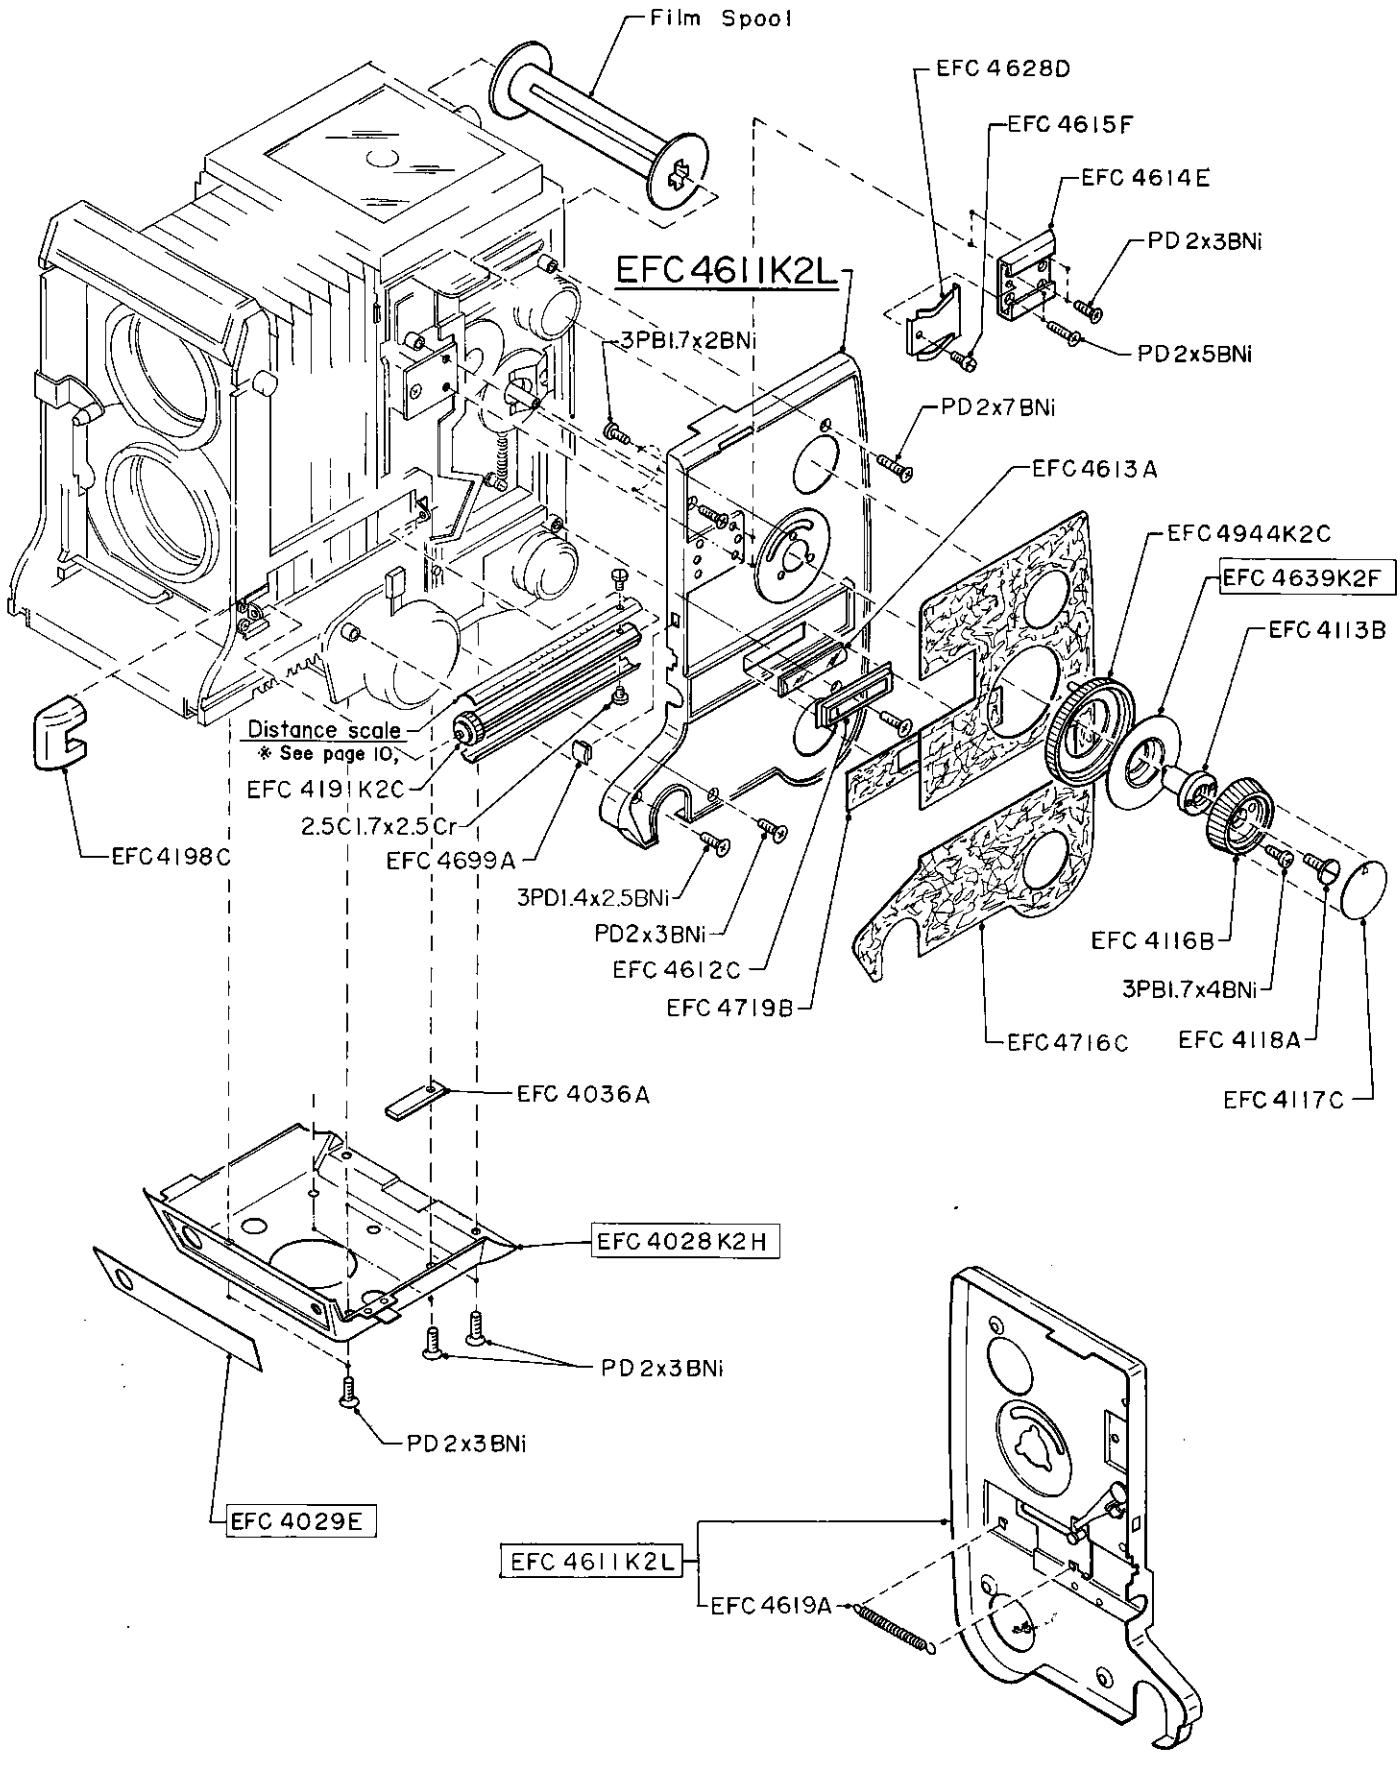
Film Spool
EFC 4628D
EFC 4615F
EFC 4614E
PD 2x3BNi
PD 2x5BNi
EFC 4611K2L
3PBI.7x2BNi
PD 2x7BNi
EFC 4613A
EFC 4944K2C
EFC 4639K2F
EFC 4113B
Distance scale
* See page 10,
EFC 4191K2C
2.5CI.7x2.5Cr
EFC 4198C
EFC 4699A
3PDI.4x2.5BNi
PD2x3BNi
EFC 4612C
EFC 4719B
EFC 4116B
3PBI.7x4BNi
EFC 4716C
EFC 4118A
EFC 4117C
EFC 4036A
EFC 4028K2H
PD 2x3BNi
PD 2x3BNi
EFC 4029E
EFC 4611K2L
EFC 4619A

EFC4611K2L

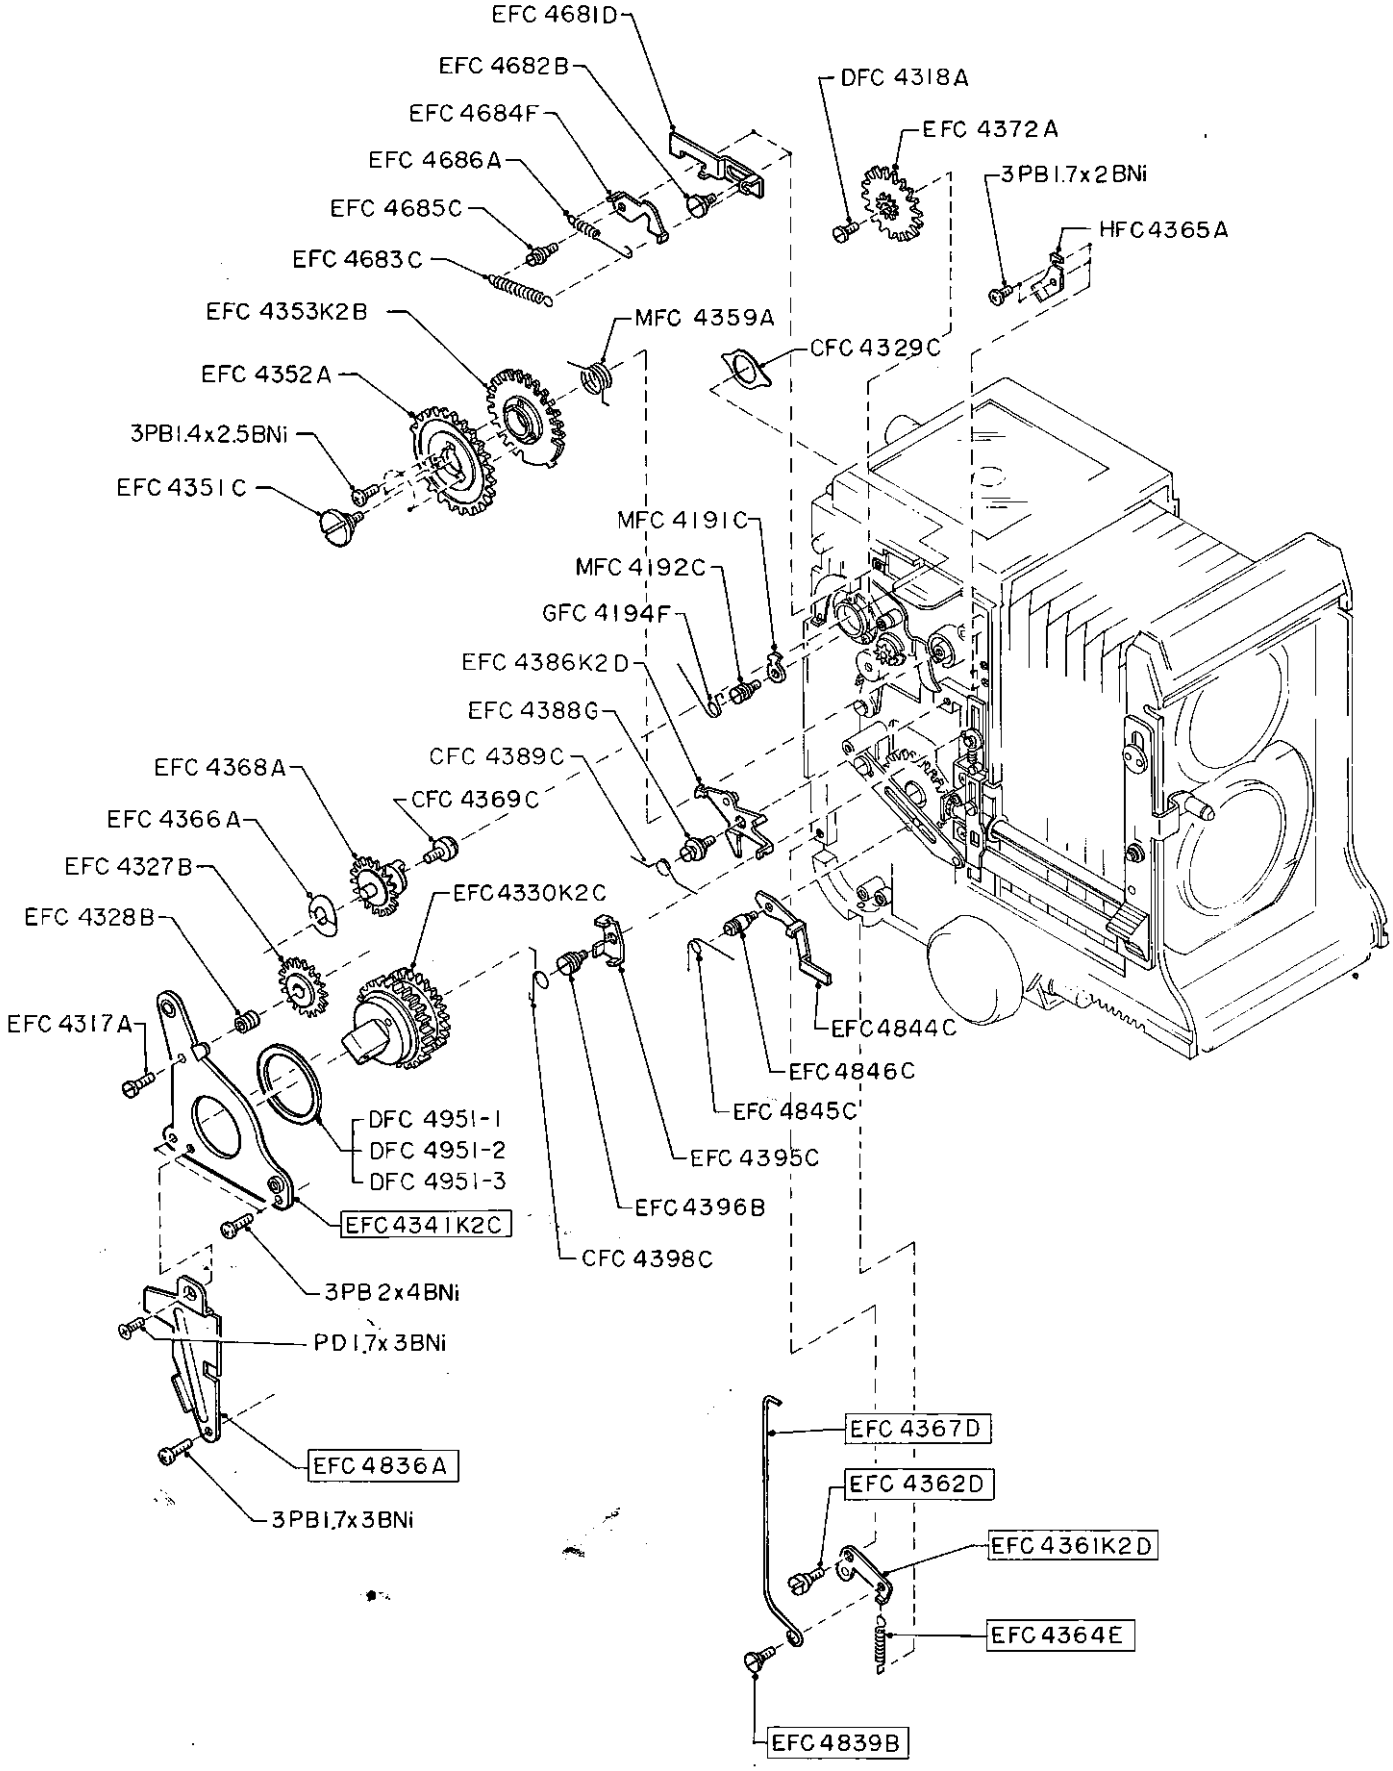
EFC 4681D
EFC 4682B
EFC 4684F
EFC 4686A
EFC 4685C
EFC 4683C
EFC 4353K2B
EFC 4352A
3PB1.4x2.5BNi
EFC 4351C
MFC 4359A
DFC 4318A
EFC 4372A
3PB1.7x2BNi
HFC4365A
CFC 4329C
MFC 4191C
MFC 4192C
GFC 4194F
EFC 4386K2D
EFC 4388G
CFC 4389C
EFC 4368A
CFC 4369C
EFC 4366A
EFC 4327B
EFC 4328B
EFC4330K2C
EFC 4317A
DFC 4951-1
DFC 4951-2
DFC 4951-3
EFC4341K2C
3PB 2x4BNi
PD1.7x3BNi
EFC 4836A
3PB1.7x3BNi
EFC4844C
EFC 4846C
EFC 4845C
EFC 4395C
EFC4396B
CFC 4398C
EFC 4367D
EFC 4362D
EFC 4361K2D
EFC 4364E
EFC 4839B

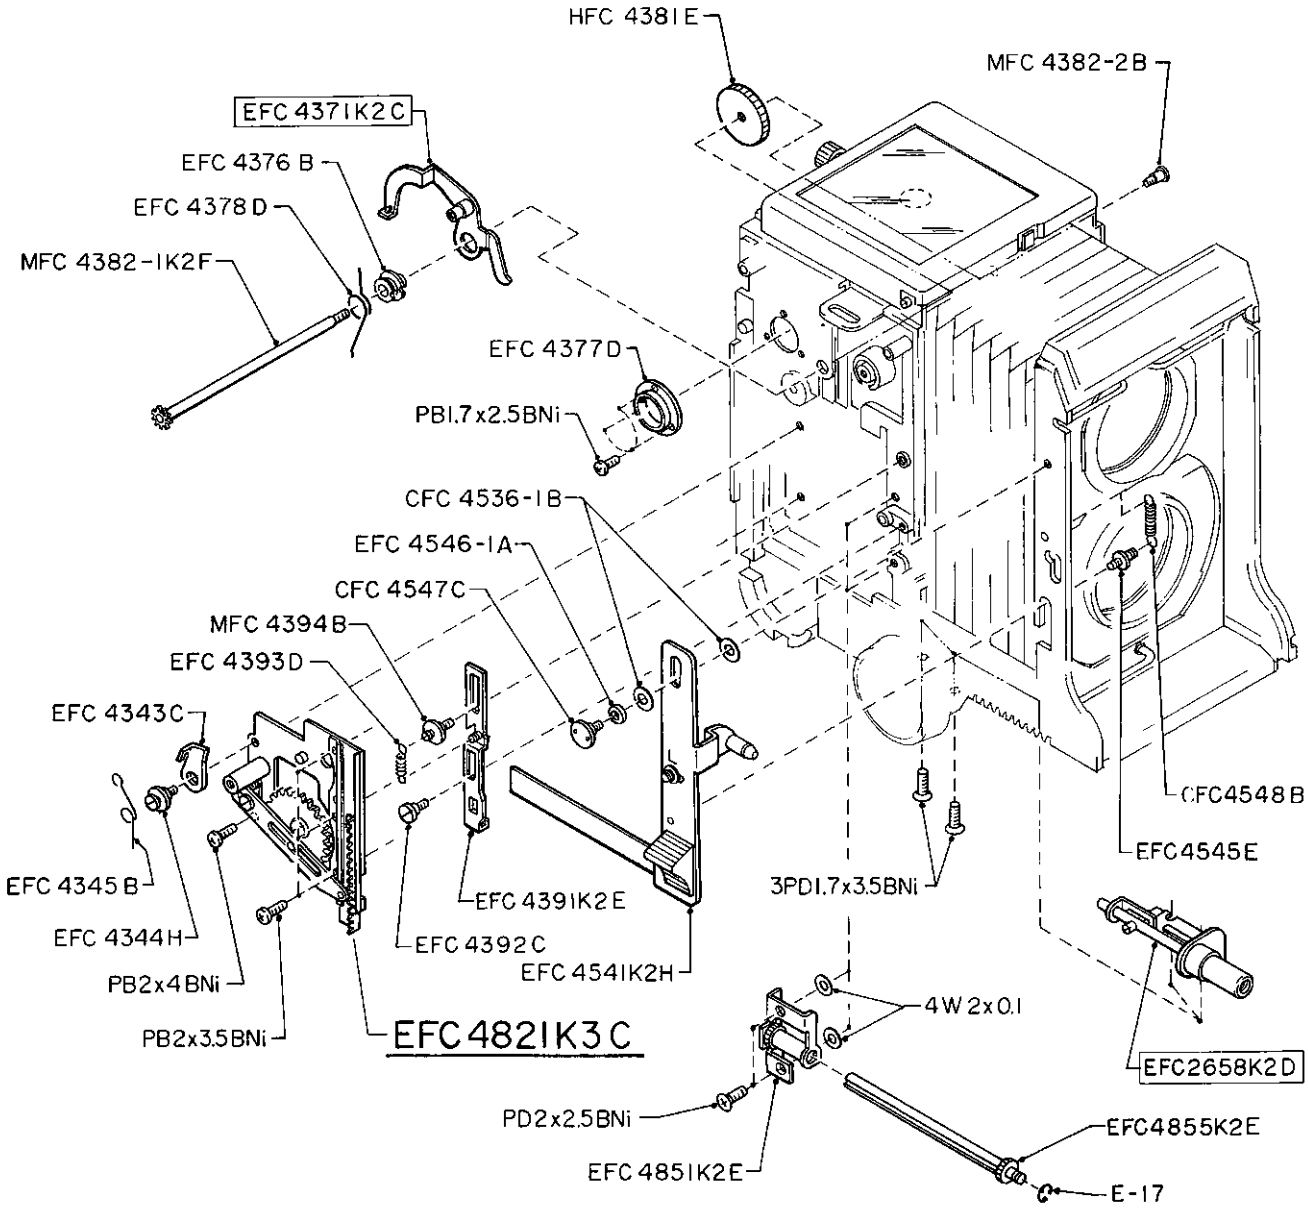
HFC 4381E
MFC 4382-2B
EFC 4371K2C
EFC 4376 B
EFC 4378D
MFC 4382-1K2F
EFC 4377D
PB1.7x2.5BNi
CFC 4536-1B
EFC 4546-1A
CFC 4547C
MFC 4394B
EFC 4393D
EFC 4343C
EFC 4345 B
EFC 4344H
PB2x4BNi
PB2x3.5BNi
EFC 4391K2E
EFC 4392C
EFC 4541K2H
EFC 4821K3C
CFC4548B
EFC4545E
3PD1.7x3.5BNi
4W 2x0.1
EFC2658K2D
PD2x2.5BNi
EFC 4851K2E
EFC4855K2E
E-17

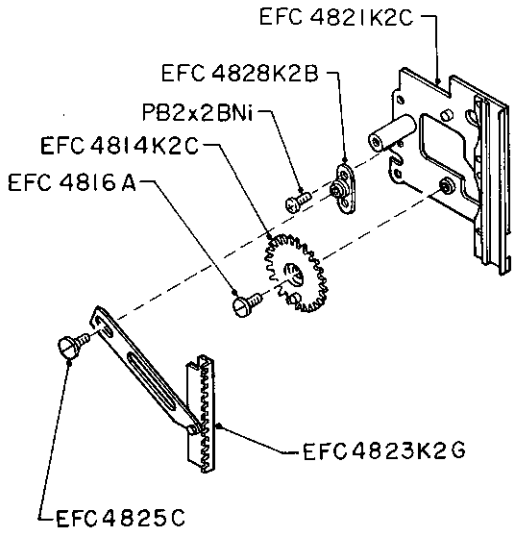
EFC 4821K2C
EFC 4828K2B
PB2x2BNi
EFC 4814K2C
EFC 4816A
EFC4823K2G
EFC4825C

EFC 4821K3C

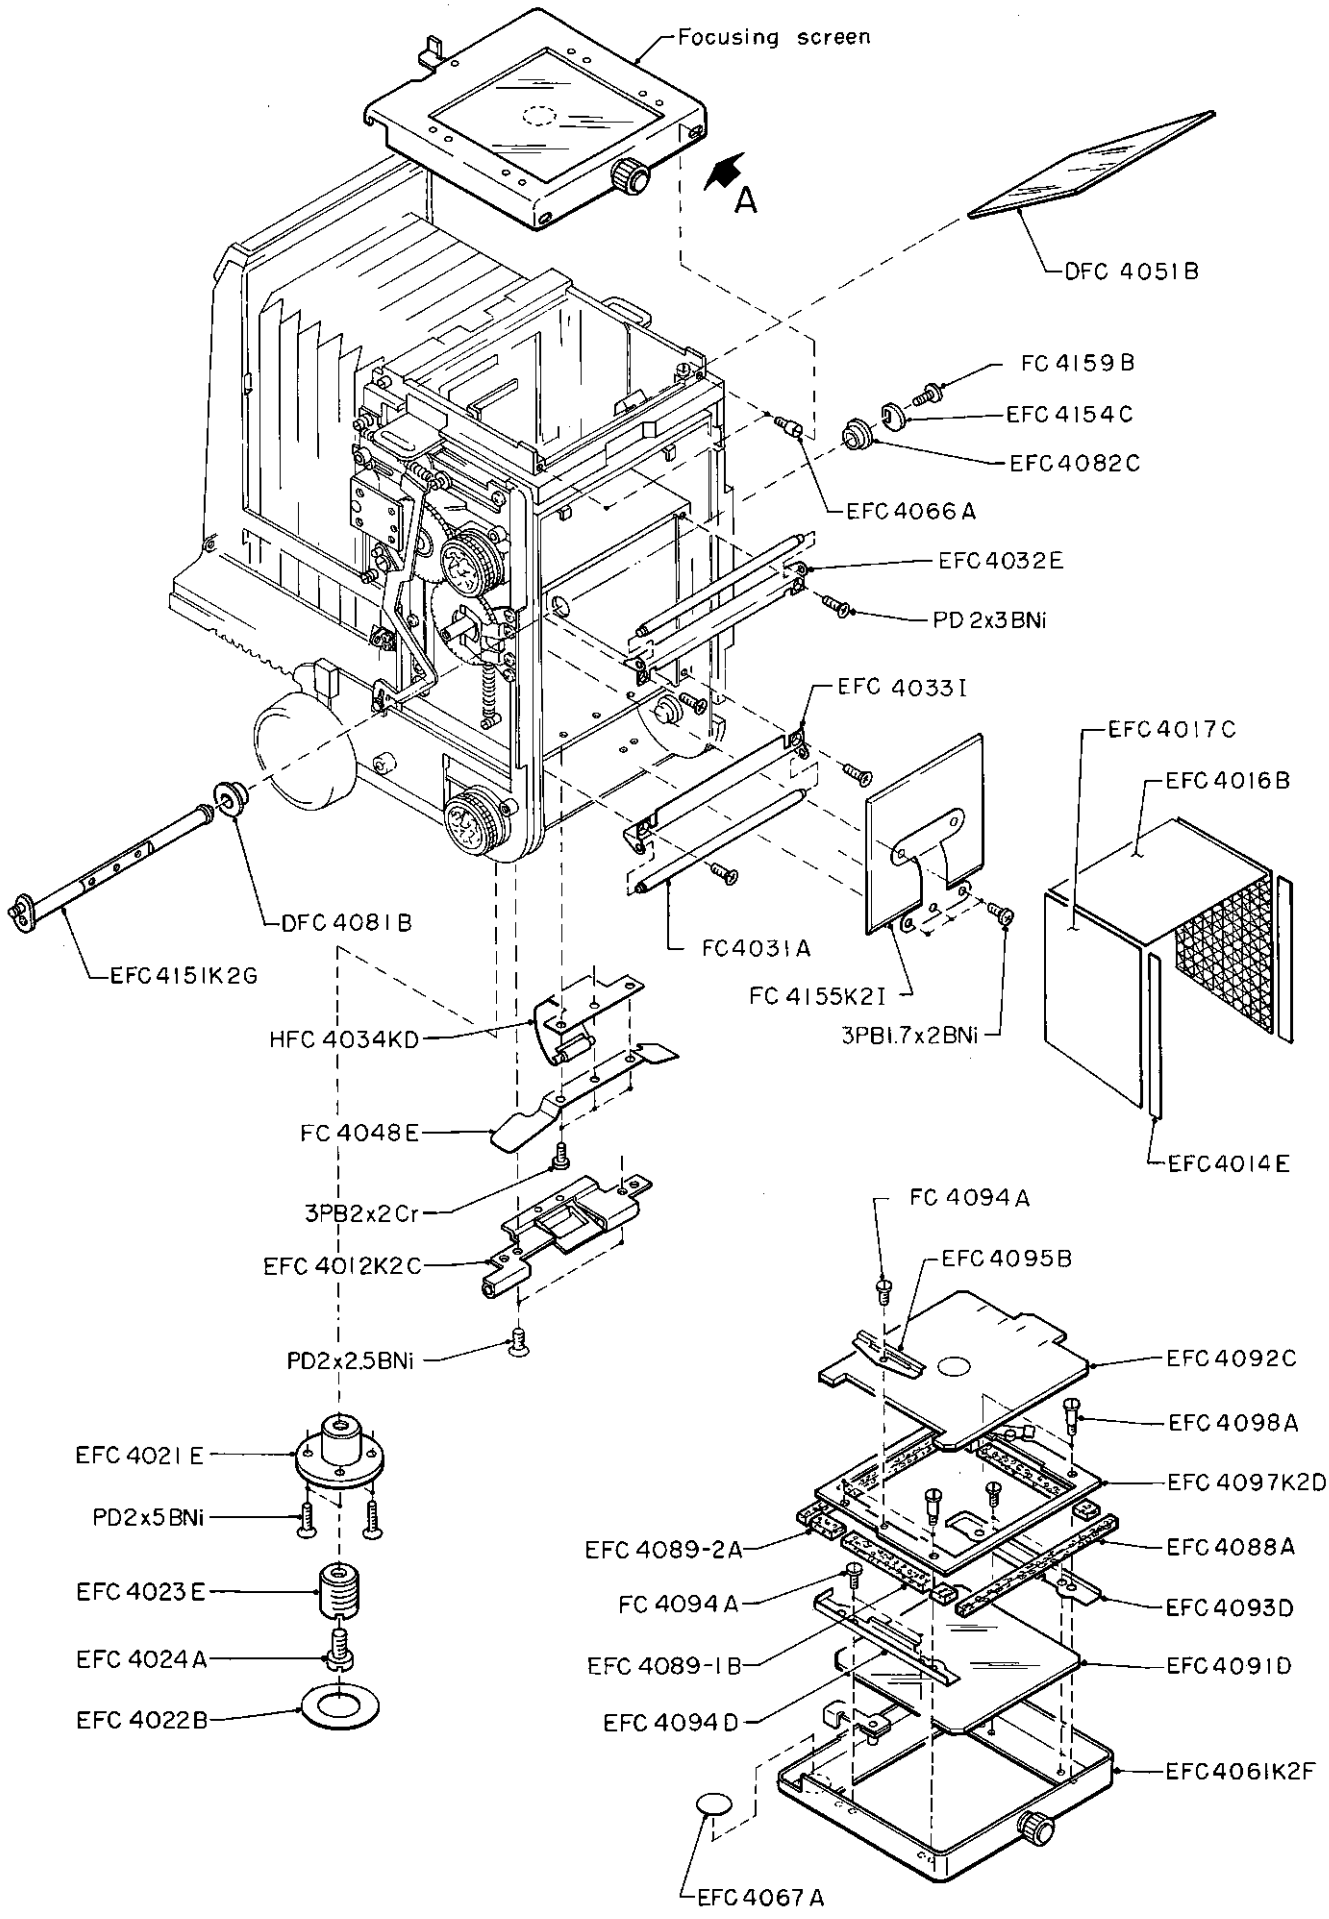
Focusing screen
A
DFC 4051B
FC 4159B
EFC 4154C
EFC 4082C
EFC 4066A
EFC 4032E
PD 2x3BNi
EFC 4033I
EFC 4017C
EFC 4016B
DFC 4081B
EFC 4151K2G
FC 4031A
FC 4155K2I
3PB1.7x2BNi
EFC 4014E
HFC 4034KD
FC 4048E
3PB2x2Cr
EFC 4012K2C
PD2x2.5BNi
FC 4094A
EFC 4095B
EFC 4092C
EFC 4098A
EFC 4097K2D
EFC 4089-2A
EFC 4088A
FC 4094A
EFC 4093D
EFC 4089-1B
EFC 4091D
EFC 4094D
EFC 4061K2F
EFC 4021E
PD2x5BNi
EFC 4023E
EFC 4024A
EFC 4022B
EFC 4067A

DETAIL "A"

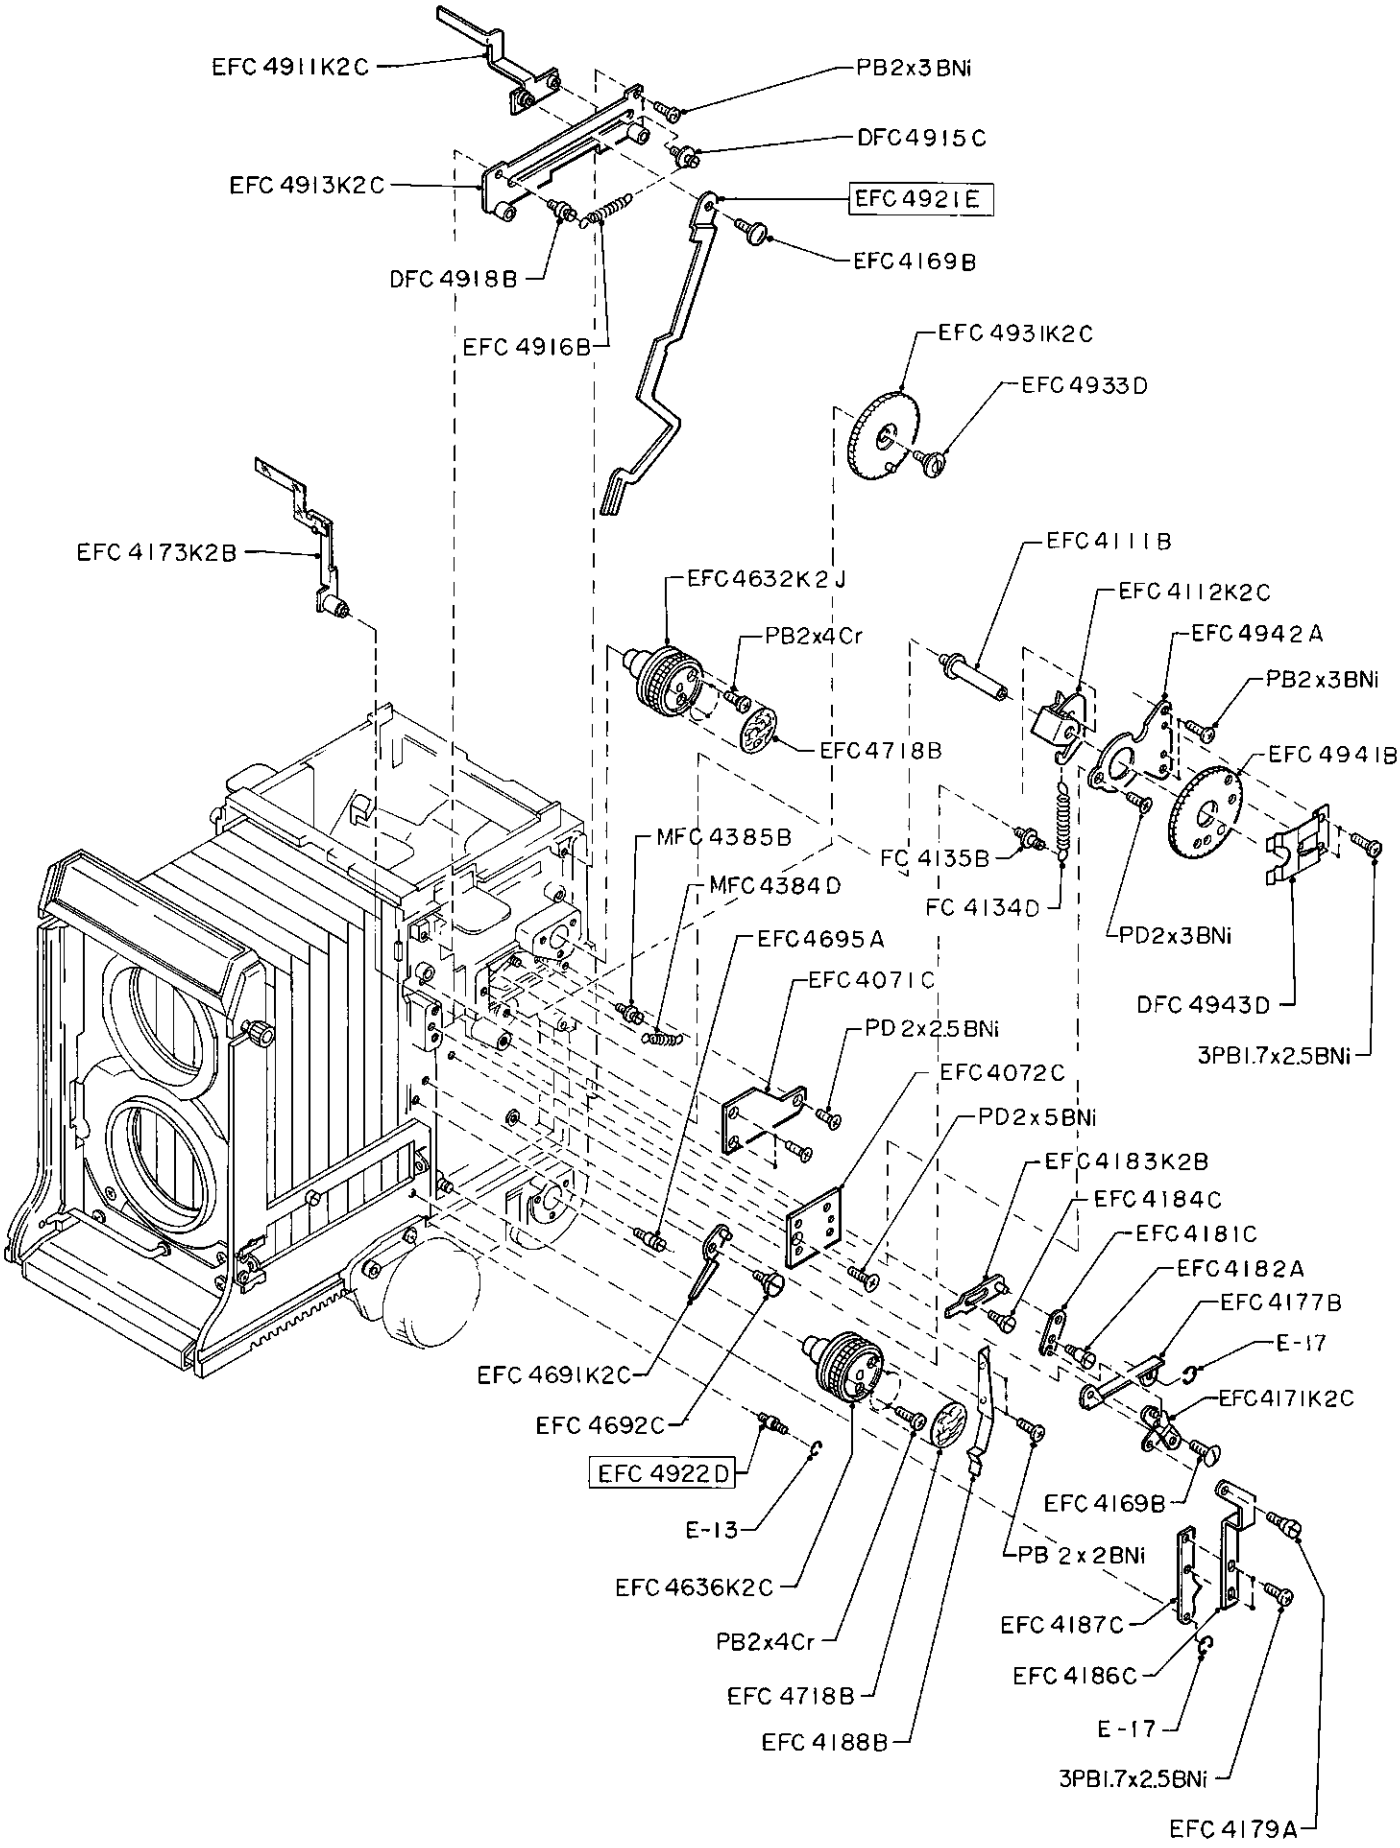
EFC 4911K2C
PB2x3BNi
DFC4915C
EFC 4913K2C
EFC 4921E
EFC4169B
DFC 4918B
EFC 4916B
EFC 4931K2C
EFC4933D
EFC 4173K2B
EFC4632K2J
PB2x4Cr
EFC4718B
EFC 4111B
EFC 4112K2C
EFC4942A
PB2x3BNi
EFC 4941B
MFC 4385B
MFC 4384D
FC 4135B
FC 4134D
PD2x3BNi
DFC 4943D
3PB1.7x2.5BNi
EFC4695A
EFC 4071C
PD 2x2.5BNi
EFC4072C
PD2x5BNi
EFC 4183K2B
EFC 4184C
EFC4181C
EFC4182A
EFC4177B
E-17
EFC4171K2C
EFC 4691K2C
EFC 4692C
EFC 4922D
E-13
EFC 4636K2C
PB2x4Cr
EFC 4718B
EFC 4188B
EFC 4169B
PB 2x2BNi
EFC 4187C
EFC 4186C
E-17
3PB1.7x2.5BNi
EFC 4179A

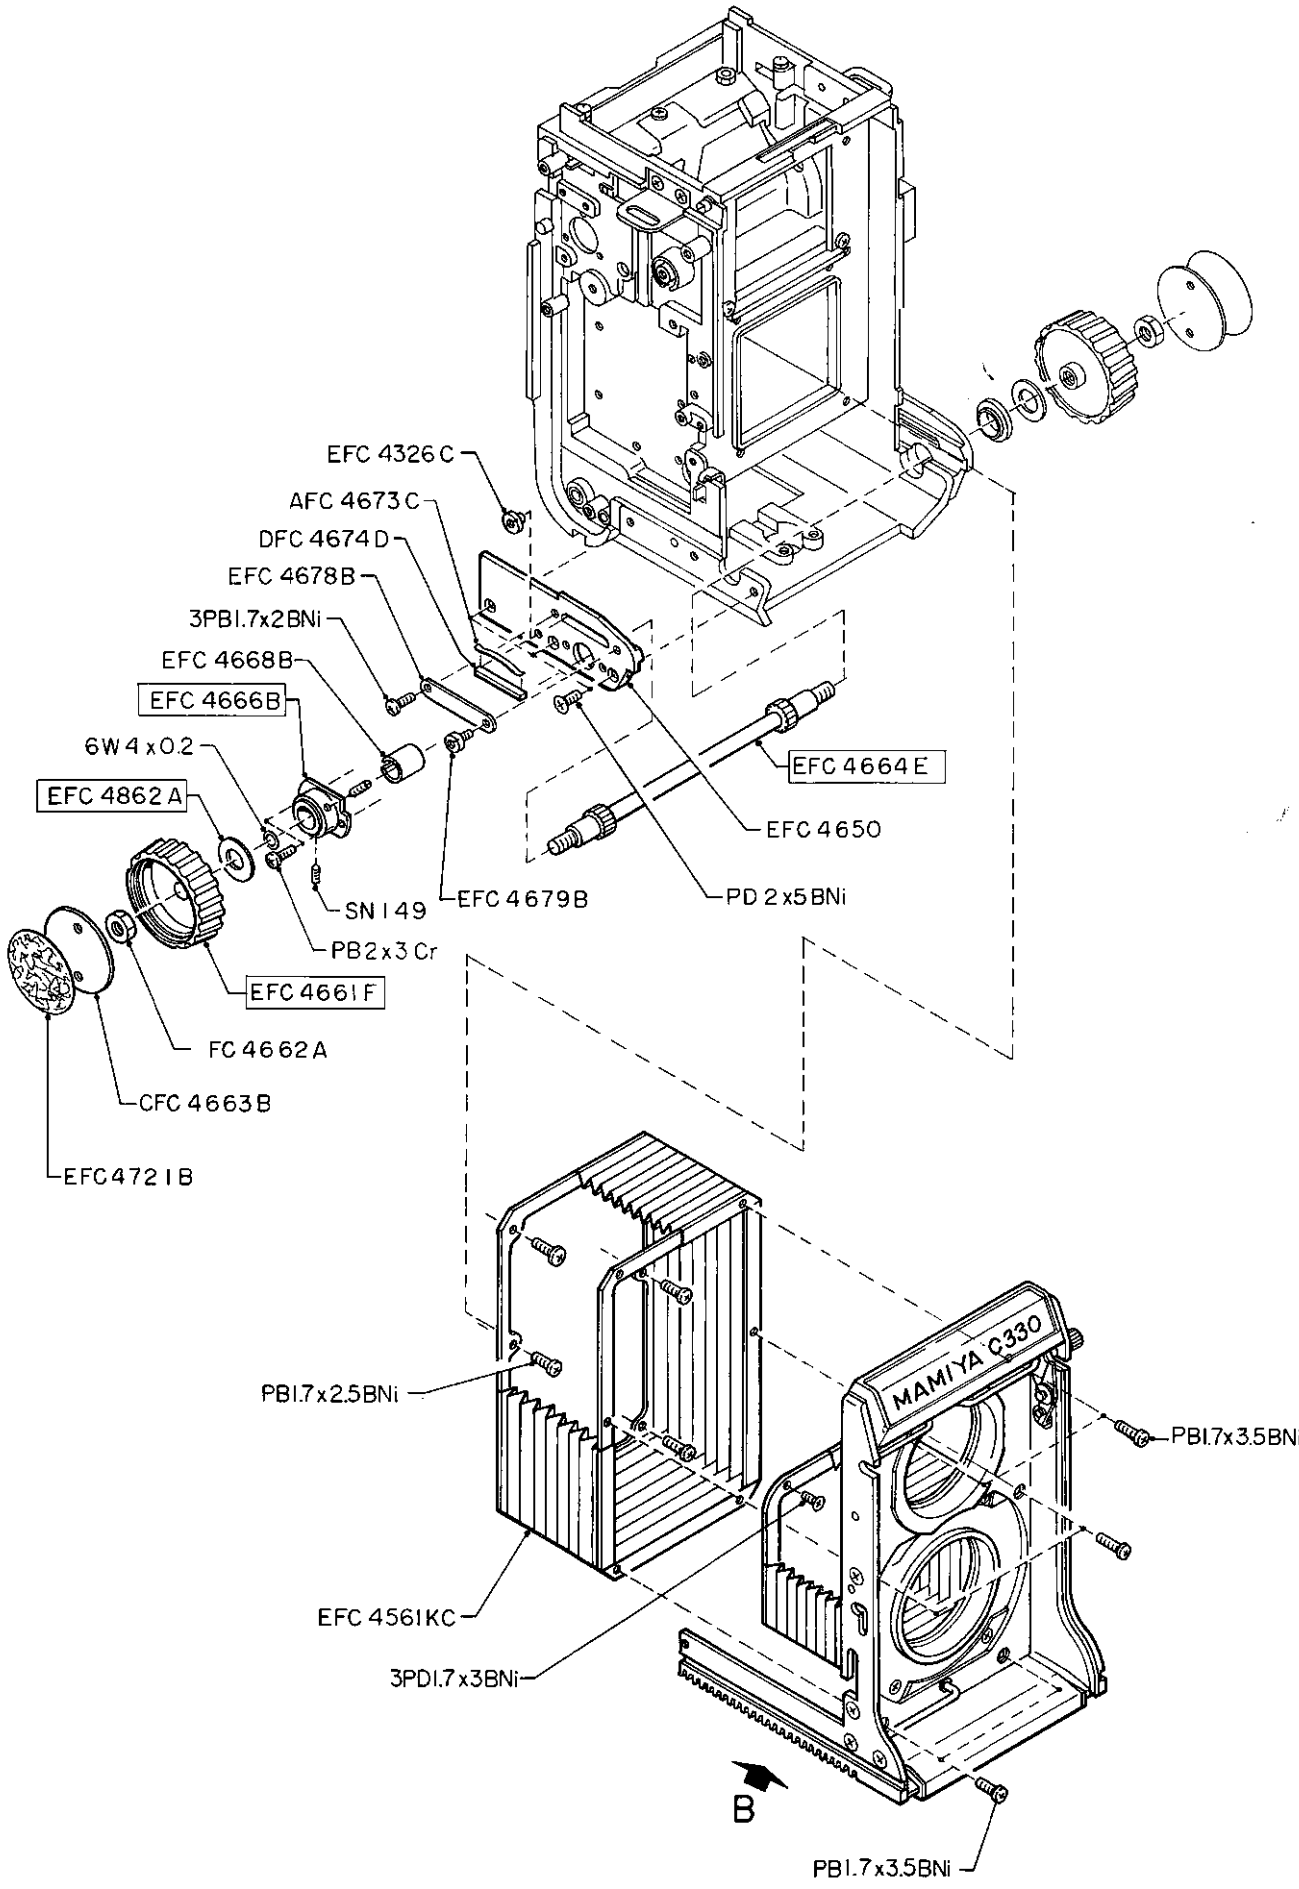
EFC 4326 C
AFC 4673 C
DFC 4674 D
EFC 4678 B
3PB1.7x2BNi
EFC 4668 B
EFC 4666 B
6W 4 x 0.2
EFC 4862 A
SN 1 49
PB 2 x 3 Cr
EFC 4661 F
FC 4662 A
CFC 4663 B
EFC 4721 B
EFC 4679 B
PD 2 x 5 BNi
EFC 4650
EFC 4664 E
PB1.7x2.5BNi
EFC 4561 KC
3PD1.7x3BNi
MAMIYA C330
PB1.7x3.5BNi
B
PB1.7x3.5BNi

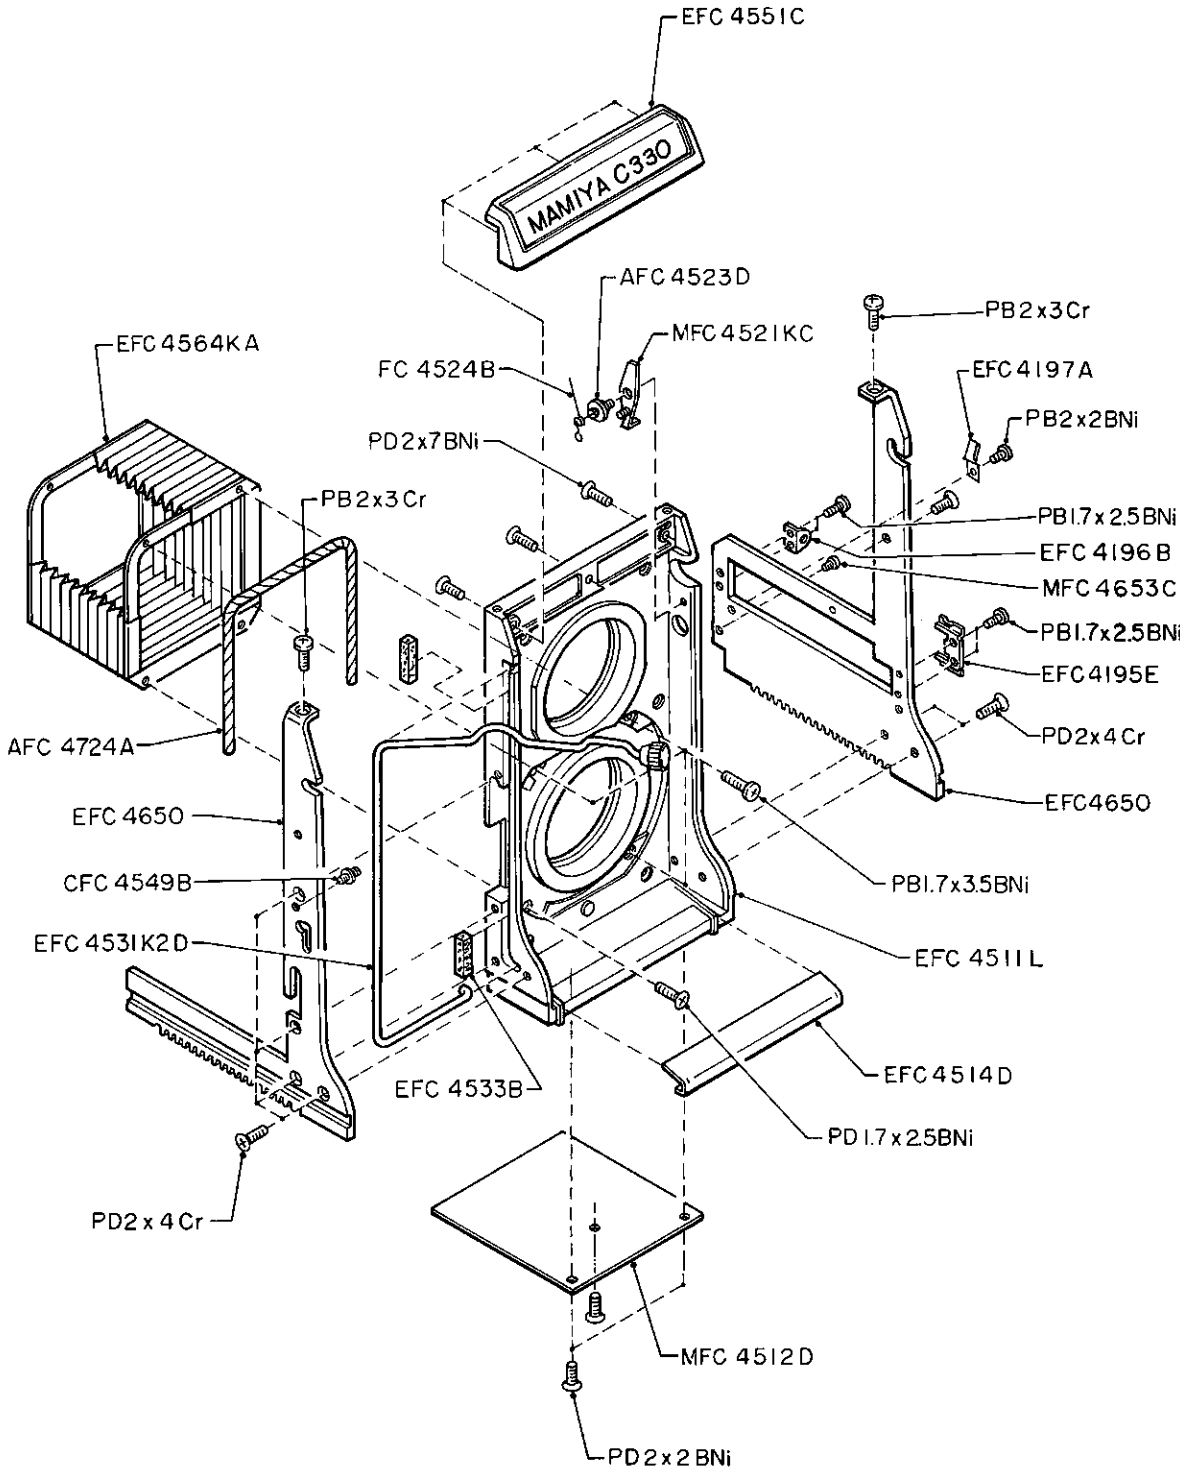
EFC 4551C
MAMIYA C330
AFC 4523D
MFC 4521KC
FC 4524B
EFC 4564KA
PD2x7BNi
PB2x3Cr
AFC 4724A
EFC 4650
CFC 4549B
EFC 4531K2D
EFC 4533B
PD2 x 4Cr
MFC 4512D
PD2x2BNi
PB2x3Cr
EFC 4197A
PB2x2BNi
PB1.7x2.5BNi
EFC 4196B
MFC 4653C
PB1.7x2.5BNi
EFC 4195E
PD2x4Cr
EFC4650
PB1.7x3.5BNi
EFC 4511L
EFC 4514D
PD1.7x2.5BNi

DETAIL "B"

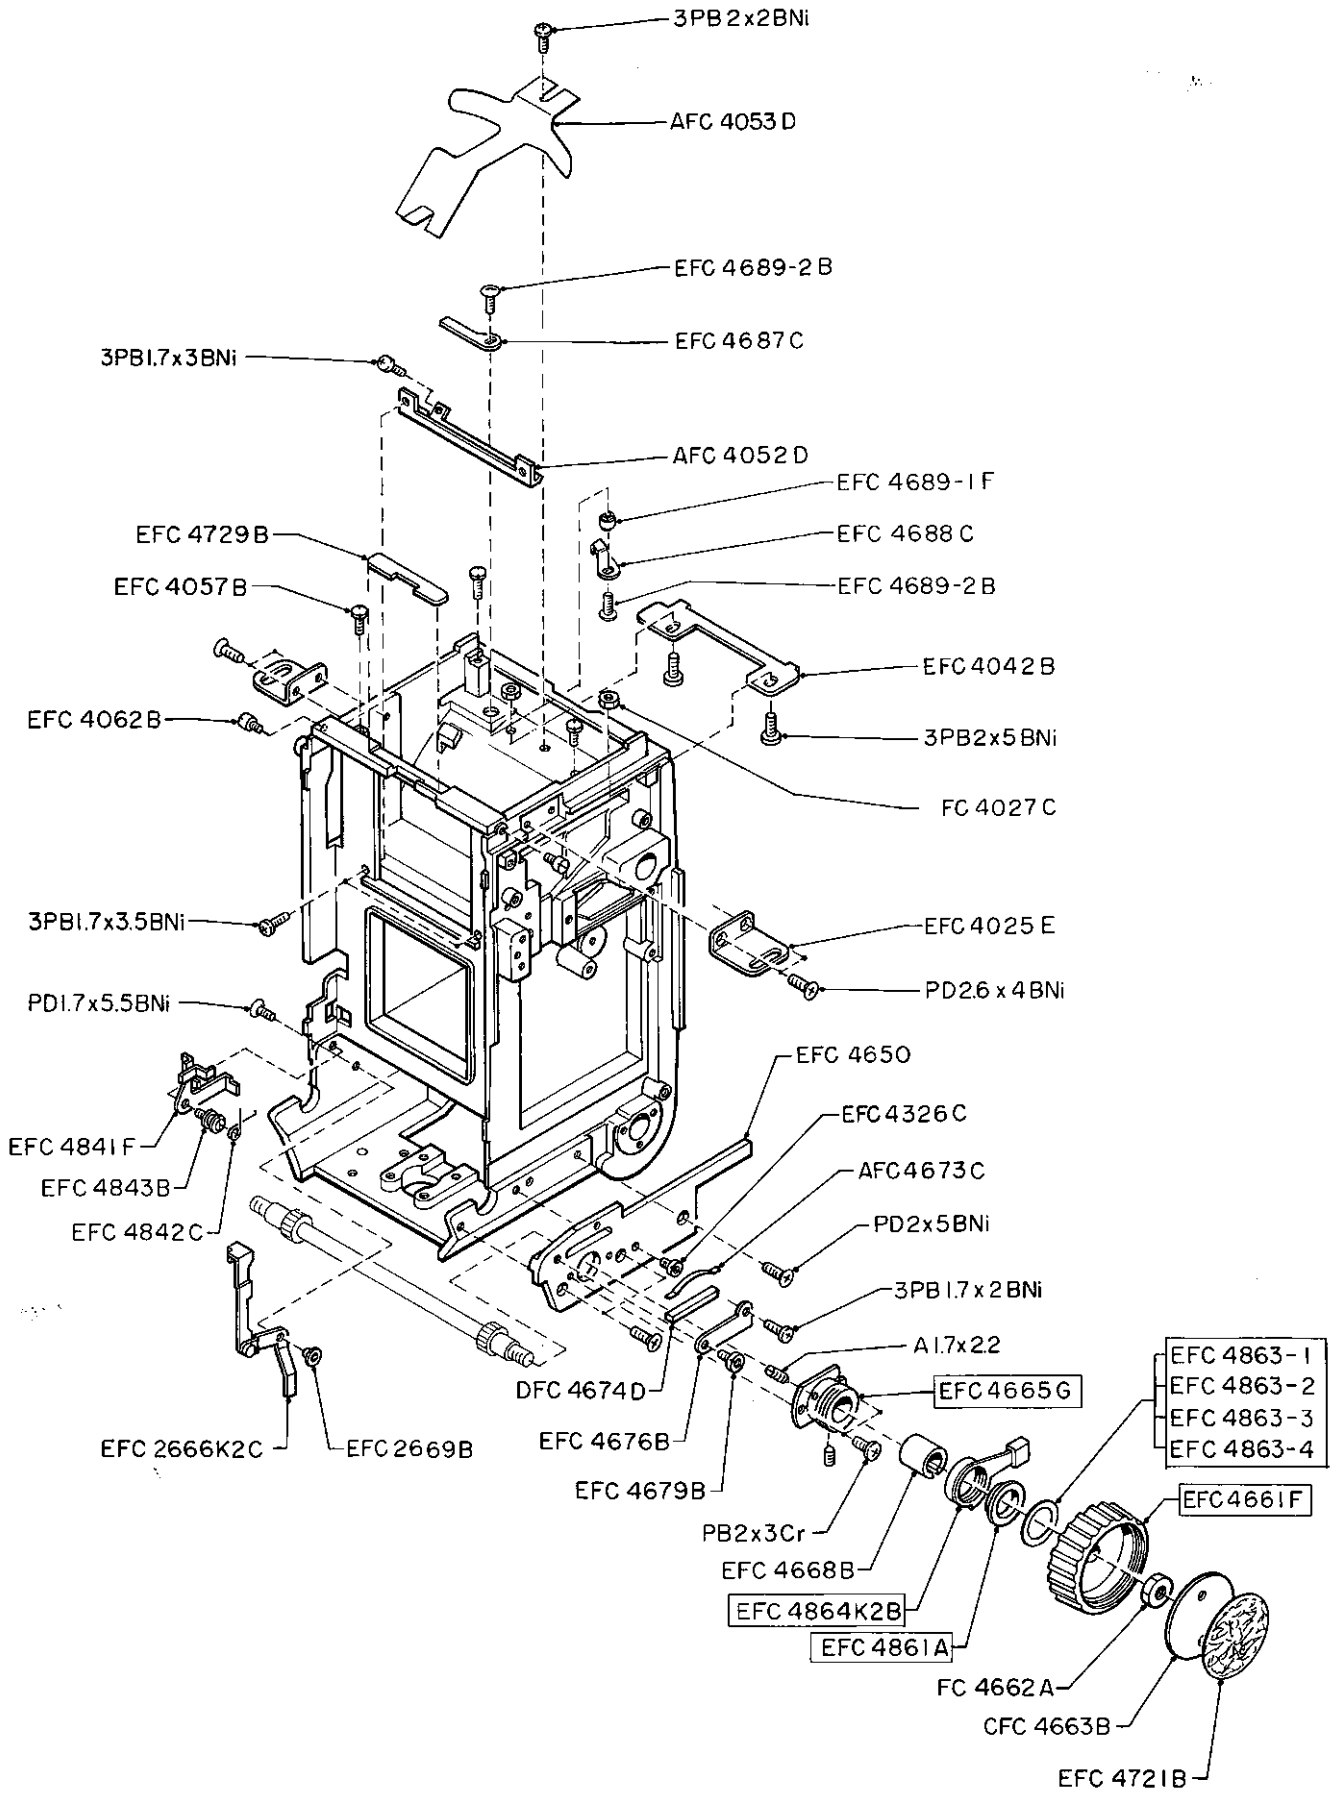
3PB2x2BNi
AFC 4053D
EFC 4689-2B
EFC 4687C
3PB1.7x3BNi
AFC 4052D
EFC 4689-1F
EFC 4729B
EFC 4688C
EFC 4057B
EFC 4689-2B
EFC 4042B
EFC 4062B
3PB2x5BNi
FC 4027C
3PB1.7x3.5BNi
EFC 4025E
PD1.7x5.5BNi
PD2.6x4BNi
EFC 4650
EFC 4841F
EFC 4326C
EFC 4843B
AFC 4673C
EFC 4842C
PD2x5BNi
3PB1.7x2BNi
A1.7x2.2
EFC 4863-1
EFC 4863-2
EFC 4863-3
EFC 4863-4
DFC 4674D
EFC 4665G
EFC 4676B
EFC 4679B
EFC 4661F
PB2x3Cr
EFC 4668B
EFC 4864K2B
EFC 4861A
EFC 2666K2C
EFC 2669B
FC 4662A
CFC 4663B
EFC 4721B

Back cover standard

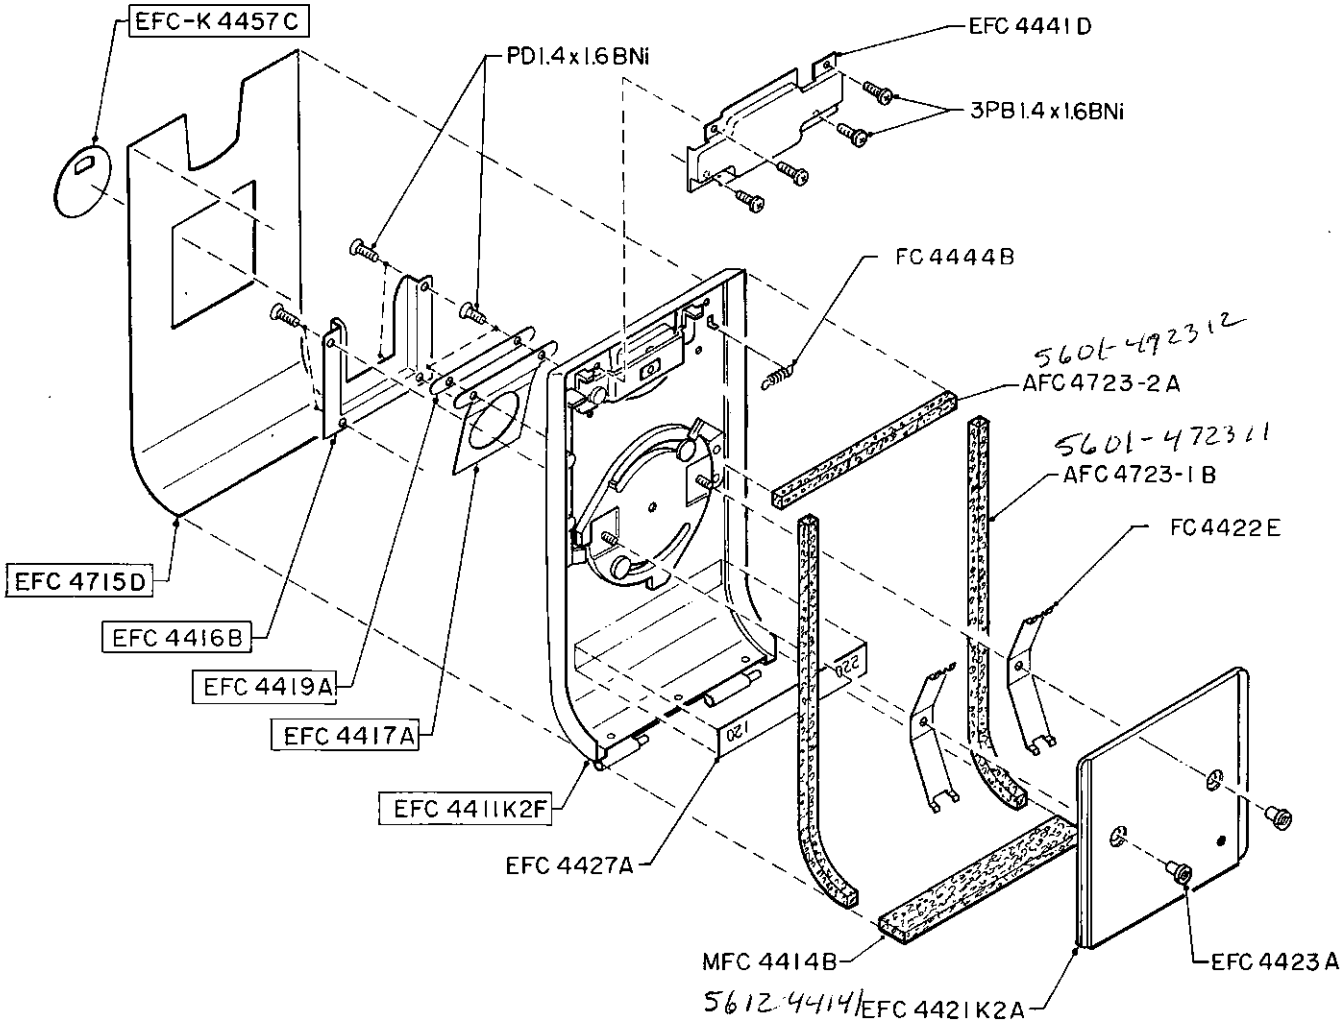

Distance scale Meter

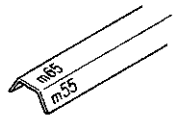

EFC 5311B

180 55
m65
m80

EFC 5312C

m105 p.ps
m135
m250

EFC 5313A

m105
m135
m250

Distance scale Feet



EFC 5321C

180 55	feet
65mm	feet
80mm	feet

EFC 5323A

105mm	feet
135mm	feet
250mm	feet

EFC 5324A

105 p.ps	feet
135mm	feet
250mm	feet

Focusing hood model 2

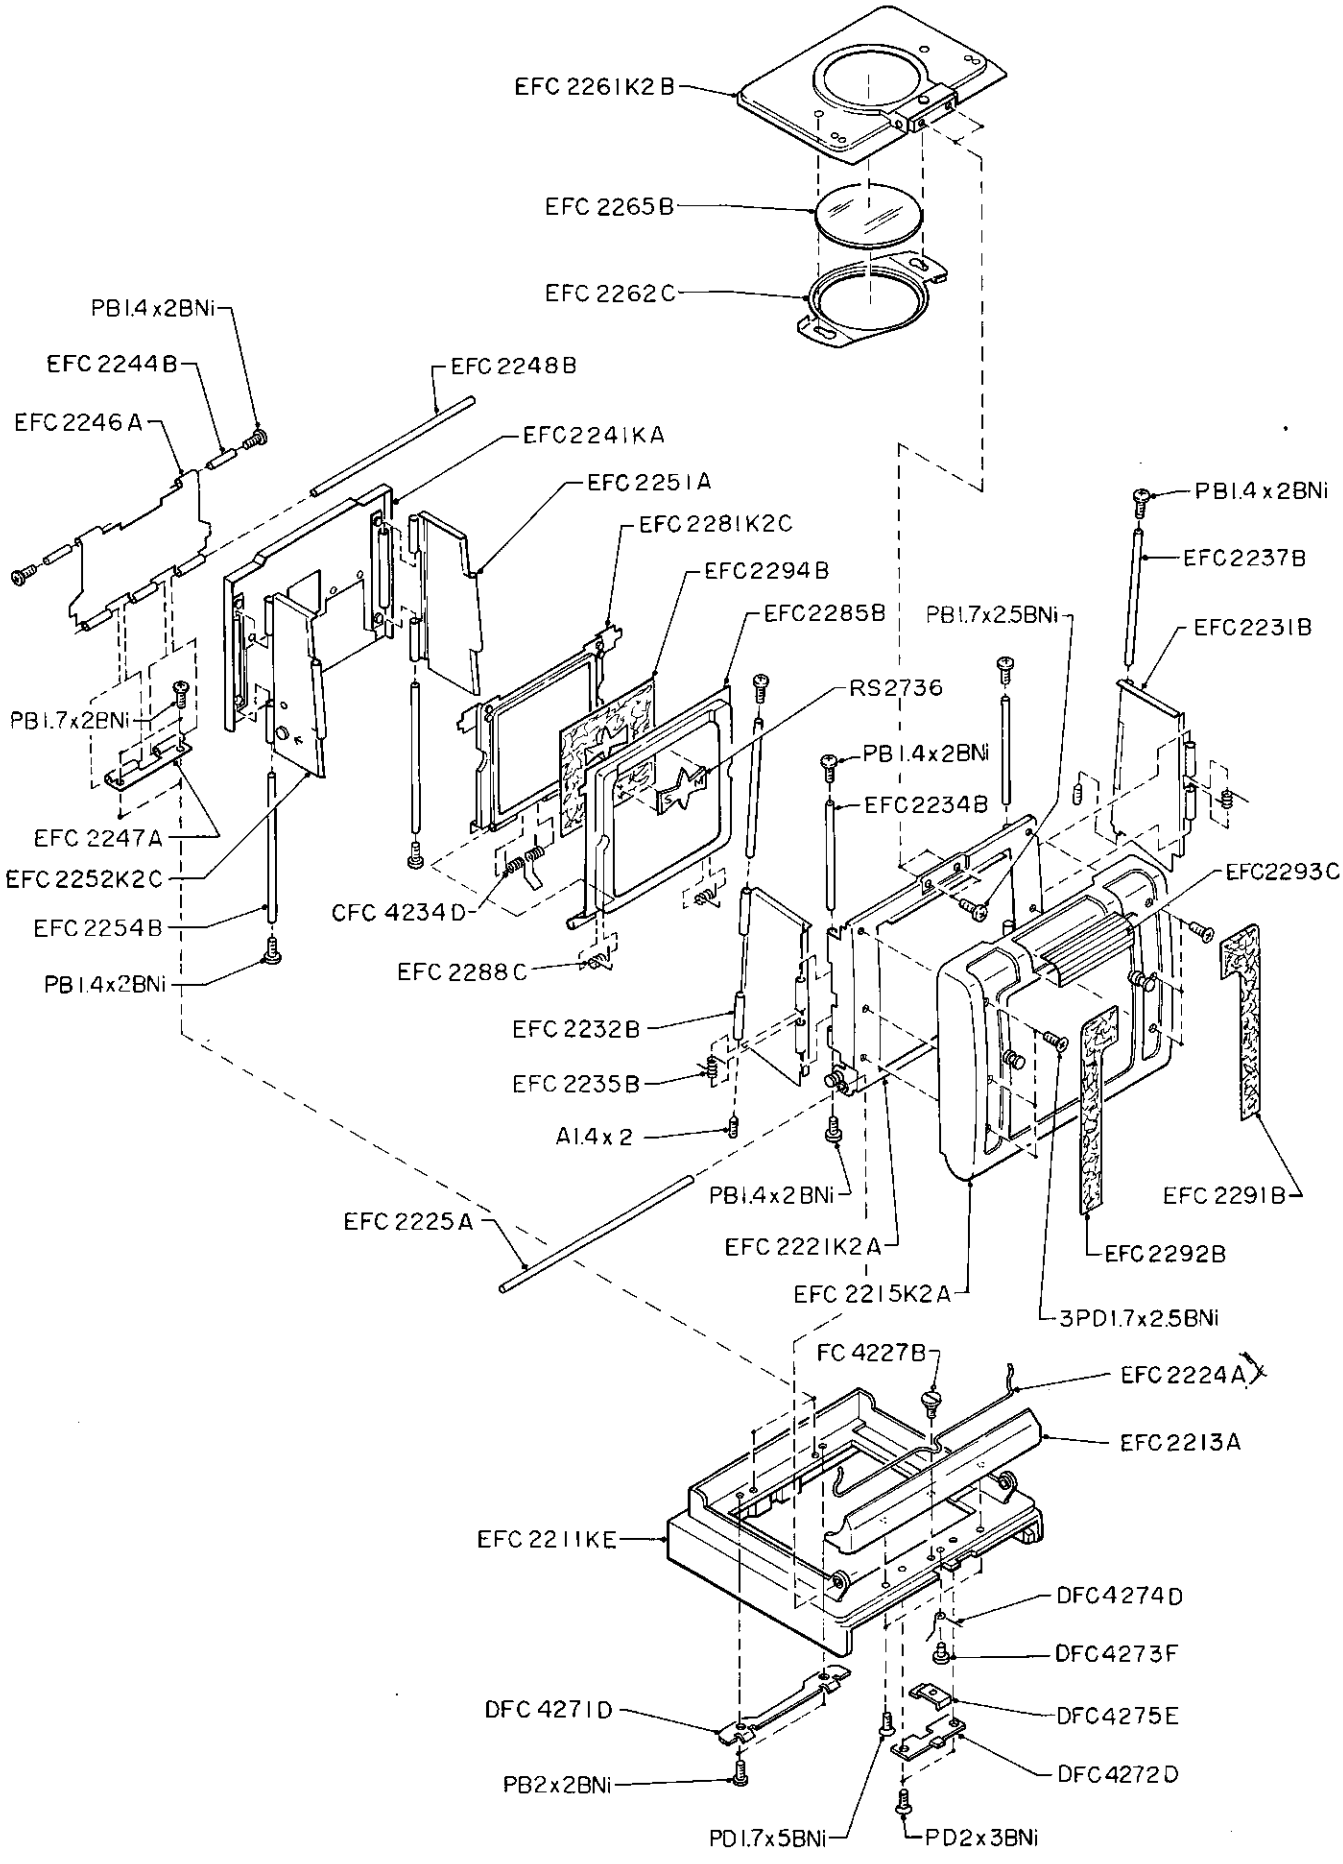

PARTS LIST

Mamiya C330 Professional f

Mamiya

NOTE : The parts with its parts number in square
are exclusively used for the C330f.

Parts No.	Description	Pcs.	Ref. Page
EFC2658K2D	Shutter button bracket assy.	1	4
EFC2666K2C	Joint	1	9
EFC2669B	Hub	1	9
EFC4012K2C	Hinge assy.	1	5
EFC4014E	Plate	2	5
EFC4016B	Reflection absorber paper	1	5
EFC4017C	Reflection absorber paper	2	5
EFC4021E	Tripod socket	1	5
EFC4022B	Leatherette	1	5
EFC4023E	Tripod socket adapter 1/4"	1	5
EFC4024A	Screw	1	5
EFC4025E	Strap loop	2	9
EFC4028K2H	Bottom cover	1	2
EFC4029E	Name plate	1	2
EFC4032E	Bracket	1	5
EFC4033I	Bracket	1	5
EFC4036A	Plate	1	2
EFC4042B	Catch plate	1	9
EFC4057B	Adjusting screw	3	9
EFC4061K2F	Frame focusing screen	1	5
EFC4062B	Screw	2	9
EFC4066A	Guide screw	2	5
EFC4067A	Level	1	5
EFC4071C	Cover	1	6
EFC4072C	Base	1	6
EFC4082C	Sleeve bush	1	5
EFC4088A	Cushion	2	5
EFC4089-1B	Cushion	2	5
EFC4089-2A	Cushion	4	5
EFC4091D	Dustproof glass	1	5
EFC4092C	Fresnel lens	1	5
EFC4093D	Glass holder	1	5
EFC4094D	Glass holder	1	5
EFC4095B	Fresnel holder	1	5
EFC4097K2D	Frame for fresnel lens	1	5

Parts No.	Description	Pcs.	Ref. Page
EFC4098A	Shoulder screw	4	5
EFC4111B	Lock crank shaft	1	6
EFC4112K2C	Lock crank assy.	1	6
EFC4113B	Shaft	1	2
EFC4116B	Knob	1	2
EFC4117C	Knob cover	1	2
EFC4118A	Screw	1	2
EFC4151K2G	Light-tight flap shaft	1	5
EFC4154C	Safety base	1	5
EFC4169B	Screw	2	6
EFC4171K2C	Base plate	1	6
EFC4173K2B	Red warning signal	1	6
EFC4177B	Lock plate	1	6
EFC4179A	Shoulder screw	1	6
EFC4181C	Lever	1	6
EFC4182A	Shoulder screw	1	6
EFC4183K2B	Slide plate	1	6
EFC4184C	Shoulder screw	1	6
EFC4186C	Linking bar	1	6
EFC4187C	Linking bar	1	6
EFC4188B	Spring	1	6
EFC4191K2C	Scale bar assy.	1	2
EFC4195E	Scale holder	1	8
EFC4196B	Scale holder	1	8
EFC4197A	Spring	1	8
EFC4198C	Scale cover	1	2
EFC4311K2C	Winding crank	1	1
EFC4317A	Screw	1	3
EFC4321B	Coupling base	1	1
EFC4326C	Boss	2	7.9
EFC4327B	Idle gear	1	3
EFC4328B	Hub	1	3
EFC4330K2C	Winding gear assy.	1	3
EFC4341K2C	Winding base plate	1	3
EFC4343C	Pawl	1	4

Parts No.	Description	Pcs.	Ref. Page
EFC4344H	Anchor	1	4
EFC4345B	Spring	1	4
EFC4351C	Shoulder screw	1	3
EFC4352A	Counter	1	3
EFC4353K2B	Counter dividing device	1	3
EFC4361K2D	Counter rist	1	3
EFC4362D	Shoulder screw	1	3
EFC4364E	Spring	1	3
EFC4366A	Friction washer	1	3
EFC4367D	Linking rod	1	3
EFC4368A	Take-up gear	1	3
EFC4371K2C	Release lever	1	4
EFC4372A	Gear	1	3
EFC4376B	Flanged screw	1	4
EFC4377D	Gear shaft hub	1	4
EFC4378D	Spring	1	4
EFC4386K2D	Winding stop lever	1	3
EFC4388G	Guide screw	1	3
EFC4391K2E	Winding stop rest lever	1	4
EFC4392C	Guide screw	1	4
EFC4393D	Spring	1	4
EFC4395C	Stopper	1	3
EFC4396B	Shoulder screw	1	3
EFC4511L	Front panel	1	8
EFC4514D	Front cover	1	8
EFC4531K2D	Wire spring	1	8
EFC4533B	Packing strip	2	8
EFC4541K2H	L shape slider assy.	1	4
EFC4545E	Shoulder screw	1	4
EFC4546-1A	Collar	1	4
EFC4551C	Name plate	1	8
EFC4561KC	Large bellows	1	7
EFC4564KA	Small bellows	1	8
EFC4611K2L	Right panel assy.	1	2
EFC4612C	Frame	1	2

Parts No.	Description	Pcs.	Ref. Page
EFC4613A	Distanec scale window	1	2
EFC4614E	Accessory shoe	1	2
EFC4615F	Stopper	1	2
EFC4619A	Spring	1	2
EFC4621K2F	Left panel assy.	1	1
EFC4621KF	Left panel	1	1
EFC4622A	Window	1	1
EFC4623B	Frame	1	1
EFC4627B	Plate	1	1
EFC4628D	Shoe cover	1	2
EFC4632K2J	S P knob assy. Upper	1	6
EFC4636K2C	S P knob assy. Lower	1	6
EFC4639K2F	Lock unlock disc	1	2
EFC4645-1B	Knob	1	1
EFC4645-2C	Cover	1	1
EFC4646B	Spring	1	1
EFC4647K2B	Change-over lever	1	1
EFC4650	Rack plate unit	4	7,8,9
EFC4661F	Focusing knob	2	7,9
EFC4664E	Pinion shaft	1	7
EFC4665G	Pinion shaft hub	1	9
EFC4666B	Pinion shaft hub	1	7
EFC4668B	Pipe	2	7,9
EFC4676B	Cover plate	1	9
EFC4678B	Cover plate left	1	7
EFC4679B	Stud	2	7,9
EFC4681D	Change plate "120,220"	1	3
EFC4682B	Screw	1	3
EFC4683C	Spring	1	3
EFC4684F	Lever	1	3
EFC4685C	Shaft	1	3
EFC4686A	Spring	1	3
EFC4687C	Change Lever	1	9
EFC4688C	Click Lever	1	9
EFC4689-1F	Hub	1	9

Parts No.	Description	Pcs.	Ref. Page
EFC4689-2B	Screw	2	9
EFC4691K2C	Moving plate	1	6
EFC4692C	Shoulder screw	1	6
EFC4695A	Stopper	1	6
EFC4699A	Cover	1	2
EFC4711G	Leatherette	1	1
EFC4716C	Leatherette	1	2
EFC4717D	Leatherette	1	1
EFC4718B	Leatherette	2	6
EFC4719B	Leatherette	1	2
EFC4721B	Leatherette	2	7,9
EFC4722B	Leatherette	1	1
EFC4727B	Leatherette	1	1
EFC4729B	Plate	1	9
EFC4814K2C	Gear	1	4
EFC4816A	Screw	1	4
EFC4821K3C	Shutter cocking gear train	1	4
EFC4821K2C	Base plate	1	4
EFC4823K2G	Rack plate	1	4
EFC4825C	Screw	1	4
EFC4828K2B	Adjusting hub	1	4
EFC4836A	Protect plate	1	3
EFC4839B	Shoulder screw	1	3
EFC4841F	Safety lever	1	9
EFC4842C	Spring	1	9
EFC4843B	Screw	1	9
EFC4844C	Release lever	1	3
EFC4845C	Spring	1	3
EFC4846C	Screw	1	3
EFC4851K2E	Cocking link gear	1	4
EFC4855K2E	Cocking shaft	1	4
EFC4861A	Setting ring	1	9
EFC4862A	Washer	1	7
EFC4863-1	Adjusting washer t=0.1	1to2	9
EFC4863-2	Adjusting Washer t=0.2	1to2	9

Parts No.	Description	Pcs.	Ref. Page
EFC4863B-3	Adjusting washer t=0.5	1to2	9
EFC4863-4	Adjusting washer t=0.8	1to2	9
EFC4864K2B	Focusing fixing lever	1	9
EFC4891K2E	Cocking ring	1	1
EFC4894D	Ring	1	1
EFC4895K2E	Rim plate	1	1
EFC4896A	Washer	1	1
EFC4911K2C	Parallax indicator	1	6
EFC4913K2C	Guide rail	1	6
EFC4916B	Spring	1	6
EFC4921E	Linking bar	1	6
EFC4922D	Stopper	1	6
EFC4931K2C	Parallax gear No.2	1	6
EFC4933D	Shoulder screw	1	6
EFC4941B	Parallax gear No.1	1	6
EFC4942A	Base plate	1	6
EFC4944K2C	Change-over ring	1	2
EFC5311B	Scale meter (55,65,80,180)	1	10
EFC5312C	Scale meter (105D,DS,135,250)	1	10
EFC5313A	Scal meter (105,135,250)	1	10
EFC5321C	Scale feet (55,65,80,180)	1	10
EFC5323A	Scale feet (105,135,250)	1	10
EFC5324A	Scale feet (105D,DS,135,250)	1	10
AFC4052D	Bracket for mirrer	1	9
AFC4053D	Spring for mirrer	1	9
AFC4523D	Shoulder screw	1	8
AFC4673C	Brake spring	2	7,9
AFC4724A	Woolen yarn	1	8
CFC4315D	Pin	1	1
CFC4322B	Friction spring	2	1
CFC4323K2E	Lid	1	1
CFC4325E	Friction piece	2	1
CFC4329C	Pointer	1	3
CFC4347B	Washer	1to3	1
CFC4369C	Screw	1	3

Parts No.	Description	Pcs.	Ref. Page
CFC4389C	Spring	1	3
CFC4398C	Spring	1	3
CFC4536-1B	Plastic washer	2	4
CFC4547C	Screw	1	4
CFC4548B	Spring	1	4
CFC4549B	Anchor	1	8
CFC4663B	Disk	2	7,9
DFC4051B	Mirror	1	5
DFC4081B	Sleeve bush	1	5
DFC4318A	Screw	1	3
DFC4674D	Brake bar	2	7,9
DFC4915C	Anchor	1	6
DFC4918B	Anchor	1	6
DFC4943D	Leaf spring	1	6
DFC4951-1	Washer t=0.1	1to3	3
DFC4951-2	Washer t=0.05	1to3	3
DFC4951-3	Washer t=0.2	1to3	3
FC4027C	Nut	2	9
FC4031A	Film roller	2	5
FC4048E	Leaf spring	1	5
FC4094A	Screw	5	5
FC4134D	Spring	1	6
FC4135B	Ancher	1	6
FC4155K2I	Light-tight flap assy.	1	5
FC4159B	Screw	1	5
FC4524B	Spring	1	8
FC4662A	Nut	2	7,9
GFC4194F	Spring	1	3
HFC4034KD	T-spring	1	5
HFC4365A	Stopper	1	3
HFC4381E	Friction milled wheel	1	4
MFC4191C	Pawl	1	3
MFC4192C	Shoulder screw	1	3
MFC4359A	Spring	1	3
MFC4382-1K2F	Friction wheel shaft	1	4

Parts No.	Description	Pcs.	Ref. Page
MEC4382-2B	Screw	1	4
MFC4384D	Spring	1	6
MFC4385B	Ancher	1	6
MFC4394B	Ancher	1	4
MFC4512D	Bottom cover	1	8
MFC4521KC	Safety lever	1	8
MFC4653C	Stopper	1	8
SN149	Set screw	2	7
A1.7x2.2	Set screw	2	9
PB1.7x2.5BNi	Screw for EFC4195E	2	8
	for EFC4196B	2	8
	for EFC4377D	3	4
	for EFC4561KC	6	7
PB1.7x3.5BNi	Screw for EFC4511L	3	8
PB2x2BNi	Screw for EFC4188B	2	6
	for EFC4197A	1	8
	for EFC4828K2B	1	4
PB2x3BNi	Screw for EFC4913K2	1	6
	for EFC4942A	2	6
PB2x3Cr	Screw for EFC4650(Right)	1	8
	for EFC4650(Left)	1	8
	for EFC4665G	2	9
	for EFC4666B	2	7
PB2x3.5BNi	Screw for EFC4821K3C	3	4
PB2x4BNi	Screw for EFC4821K3C	1	4
PB2x4Cr	Screw for EFC4632K2J	3	6
	for EFC4636K2C	3	6
PD1.7x2.5BNi	Screw for EFC4511L	1	8
PD1.7x3BNi	Screw for EFC4836A	1	3
PD1.7x4BNi	Screw for EFC4895K2E	5	1
PD1.7x5.5BNi	Screw for EFC2666K2C	1	9
PD2x2BNi	Screw for MFC4512D	3	8
PD2x2.5BNi	Screw for EFC4012K2C	2	5
	for EFC4071C	3	6
	for EFC4851K2E	2	4

Parts No.	Description	Pcs.	Ref. Page
PD2x3BNi	Screw for EFC4028K2H	6	2
	for EFC4032E	2	5
	for EFC4033I	2	5
	for EFC4614E	2	2
	for EFC4611K2L	2	2
	for EFC 4621K2F	6	1
	for EFC4942A	1	6
PD2x4Cr	Screw for EFC4650(Right)	3	8
	for EFC4650(Left)	4	8
PD2x5BNi	Screw for EFC4021E	4	5
	for EFC4072C	1	6
	for EFC4614E	2	2
	for EFC4650	3	7
PD2x5BNi	Screw for EFC4650	3	9
PD2x7BNi	Screw for EFC4511L	3	8
	for EFC4611K2L	2	2
PD2.6x4BNi	Screw for EFC4025E	4	9
3PB1.4x2.5BNi	Screw for EFC4352A	3	3
3PB1.7x2BNi	Screw for FC4155K2I	3	5
	for HFC4365A	2	3
	for EFC4676B	1	9
	for EFC4678B	1	7
	for EFC4611K2L	3	2
3PB1.7x2.5BNi	Screw for EFC4186C	2	6
	for DFC4943D	2	6
3PB1.7x3BNi	Screw for AFC4052D	1	9
	for EFC4836A	1	3
3PB1.7x3.5BNi	Screw for AFC4052D	2	9
	for EFC4511L	6	7
3PB1.7x4BNi	Screw for EFC4116B	2	2
3PB2x2BNi	Screw for AFC4053D	1	9
3PB2x2Cr	Screw for FC4048E	3	5
3PB2x4BNi	Screw for EFC4341K2C	2	3
3PB2x5BNi	Screw for EFC4042B	2	9
3PD1.4x2.5BNi	Screw for EFC4611K2L	1	2

Parts No.	Description	Pcs.	Ref. Page
3PD1.4x2.5BNi	Screw for EFC4621K2F	1	1
3PD1.7x3BNi	Screw for CFC4323K2F	2	1
	for EFC4564KA	4	7
3PD1.7x3.5BNi	Screw for EFC2658K2D	2	4
	for EFC4321B	2	1
4B1.7x2.5	Screw for EFC4647K2B	1	1
2.5C1.7x2.5Cr	Screw for EFC4191K2C	2	2
E-13	E-ring	1	6
E-17	E-ring	1	4
	E-ring	2	6
4W2x0.1	Washer	2	4
6W4x0.2	Washer	1	7

Back cover (EFC 4400)

Parts No.	Description	Pcs.	Ref. Page
EFC4411K2F	Back cover assy.	1	10
EFC4411K2F	Back cover	1	10
EFC4416B	Memo holder	1	10
EFC4417A	Spring	1	10
EFC4419A	Plate	1	10
EFC4421K2A	Pressure plate	1	10
EFC4423A	Nut	2	10
EFC4427A	Label	1	10
EFC4441D	Lath cover	1	10
EFC4715D	Leatherette	1	10
EFC-K4457C	Disk Window	1	10
AFC4723-1B	Sealing sponge	2	10
AFC4723-2A	Sealing sponge	1	10
FC4422E	Peessusre plate spring	2	10
FC4444B	Spring	1	10
MFC4414B	Light baffle	1	10
PD1.4x1.6BNi	Screw for EFC4416B	4	10
	for EFC4419A	2	10
3PB1.4x1.6BNi	Screw for EFC4441D	4	10

Focusing Hood (EFC 22000)

Parts No.	Description	Pcs.	Ref. Page
EFC2211KE	F H base frame	1	11
EFC2213A	Front cover	1	11
EFC2215K2A	Hood cover	1	11
EFC2221K2A	Front frame	1	11
EFC2224A	Spring	1	11
EFC2225A	Shaft	1	11
EFC2231B	Side pamel	1	11
EFC2232B	Side pamel	1	11
EFC2234B	Shaft	2	11
EFC2235B	Spring	2	11
EFC2237B	Shaft	2	11
EFC2241KA	Rear pamel	1	11
EFC2244B	Shaft	2	11
EFC2246A	Flap plate	1	11
EFC2247A	Hinge plate	1	11
EFC2248B	Shaft	1	11
EFC2251A	Hood panel	1	11
EFC2252K2C	Hood panel	1	11
EFC2254B	Shaft	2	11
EFC2261K2B	Magnifying frame	1	11
EFC2262C	Magnifying lens frame	1	11
EFC2265B	Magnifying lens	1	11
EFC2281K2C	Sports finder frame	1	11
EFC2285B	Sports finder frame	1	11
EFC2288C	Spring	2	11
EFC2291B	Leatherette	1	11
EFC2292B	Leatherette	1	11
EFC2293C	Leatherette	1	11
EFC2294B	Leatherette	1	11
CFC4234D	Spring	1	11
DFC4271D	Plate holder	1	11
DFC4272D	Cover	1	11
DFC4273F	Shoulder screw	1	11
DFC4274D	Spring	1	11
DFC4275E	Holder	1	11

Parts No.	Description	Pcs.	Ref. Page
FC4227B	Shoulder screw	1	11
RS2736	Mamiya mark	1	11
A1.4x2	Screw	2	11
PB1.4x2BNi	Screw for EFC2221K2	4	11
	for EFC2231B	1	11
	for EFC2232B	1	11
PB1.4x2BNi	Screw for EFC2246A	2	11
	for EFC2251A	1	11
	for EFC2252K2C	1	11
PB1.7x2BNi	Screw for EFC2247A	2	11
PB1.7x2.5BNi	Screw for EFC2221K2A	2	11
PB2x2BNi	Screw for DFC4271D	2	11
PD1.7x5BNi	Screw for EFC2211KE	2	11
PD2x3BNi	Screw for DFC4272C	2	11
3PD1.7x2.5BNi	Screw for EFC2215K2A	6	11

EXPLODED VIEWS

Mamiya C330 Professional

Mamiya

Mamiya C330 Professional

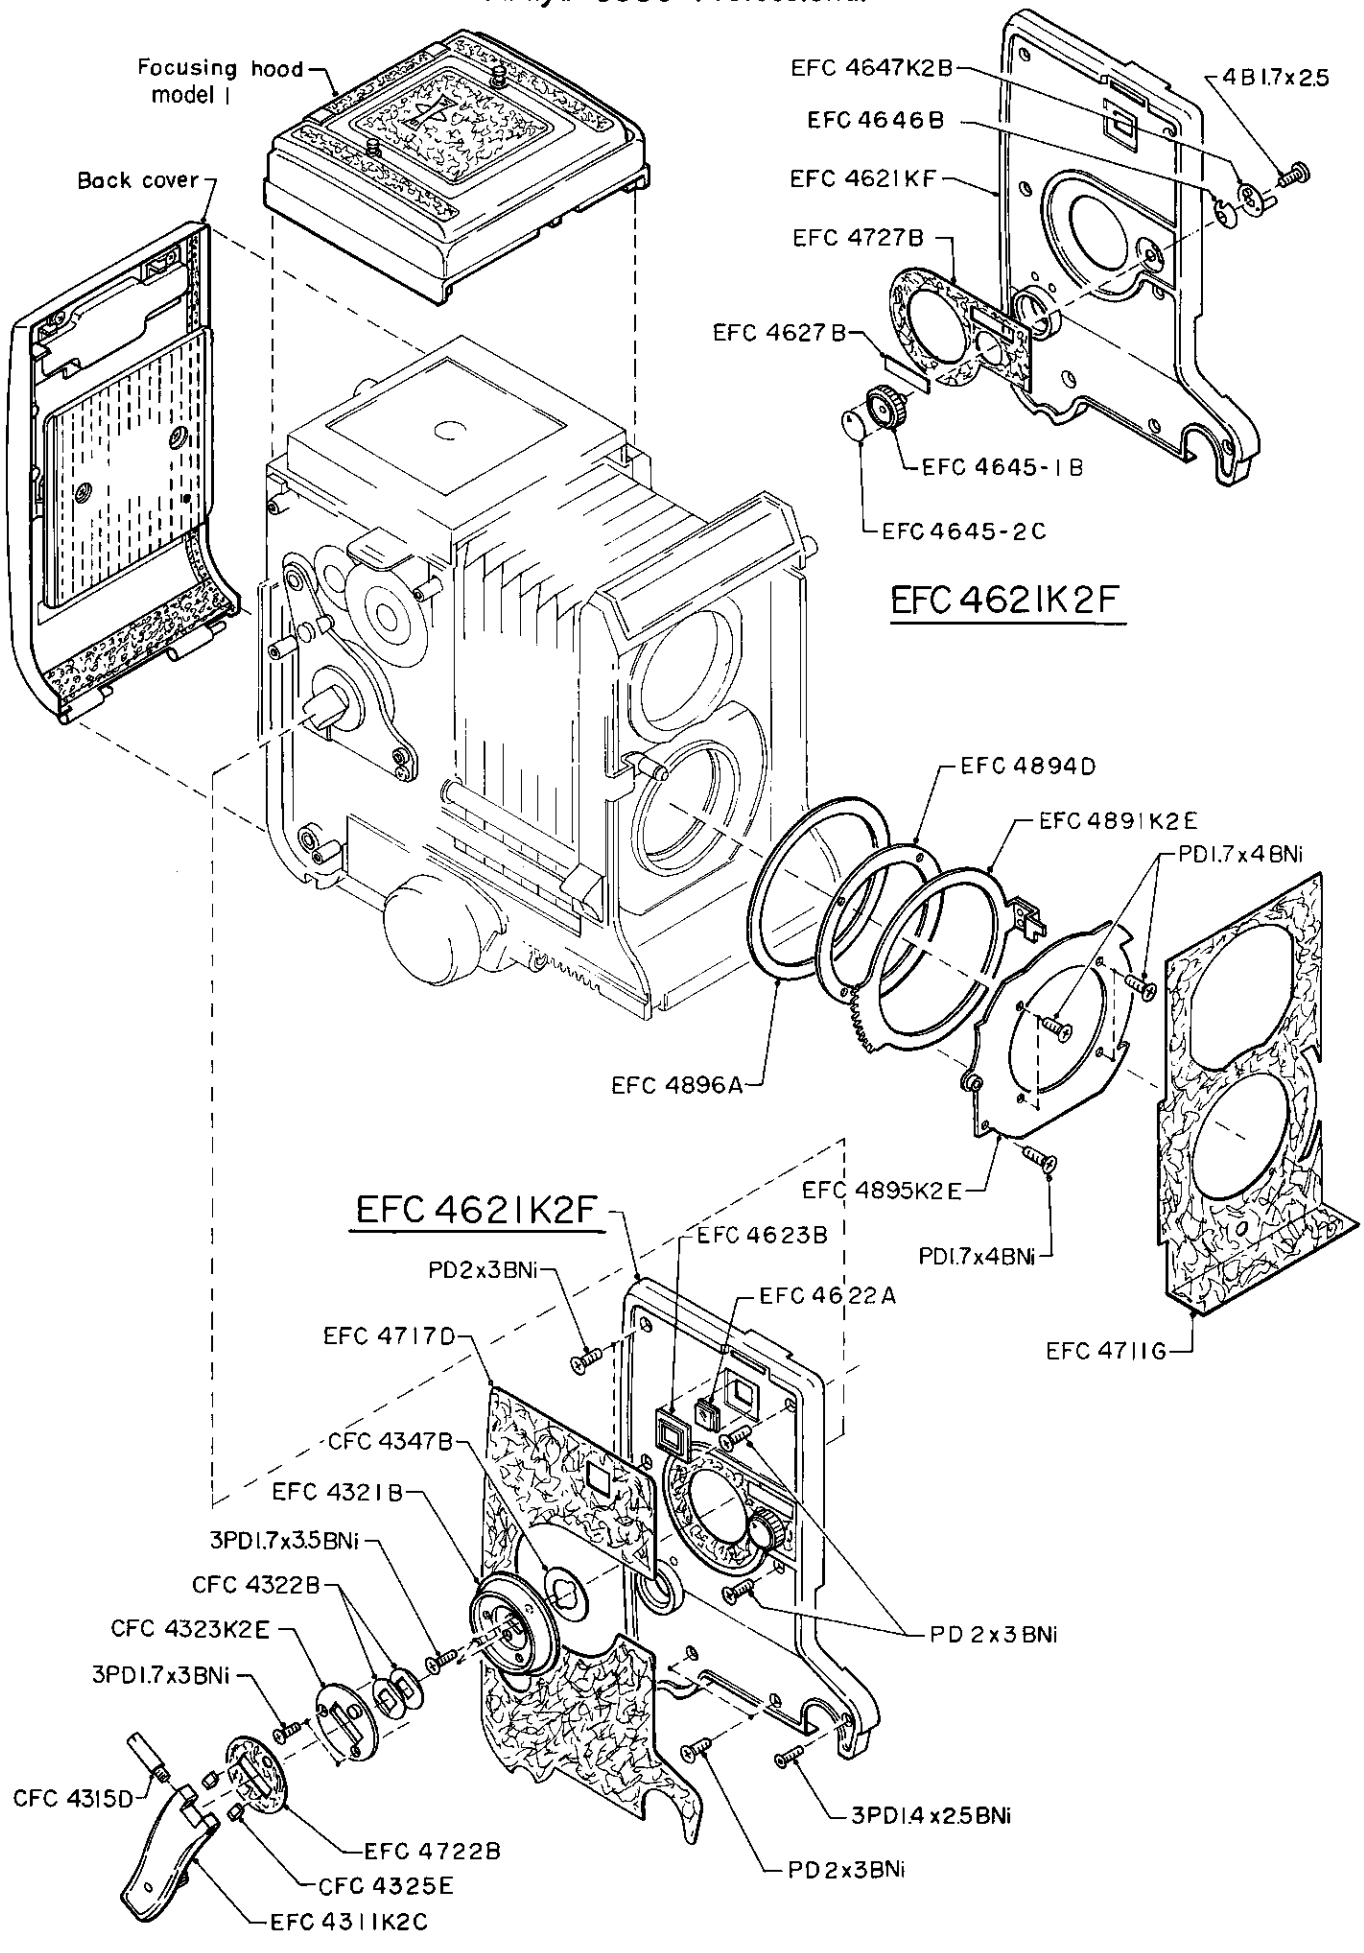

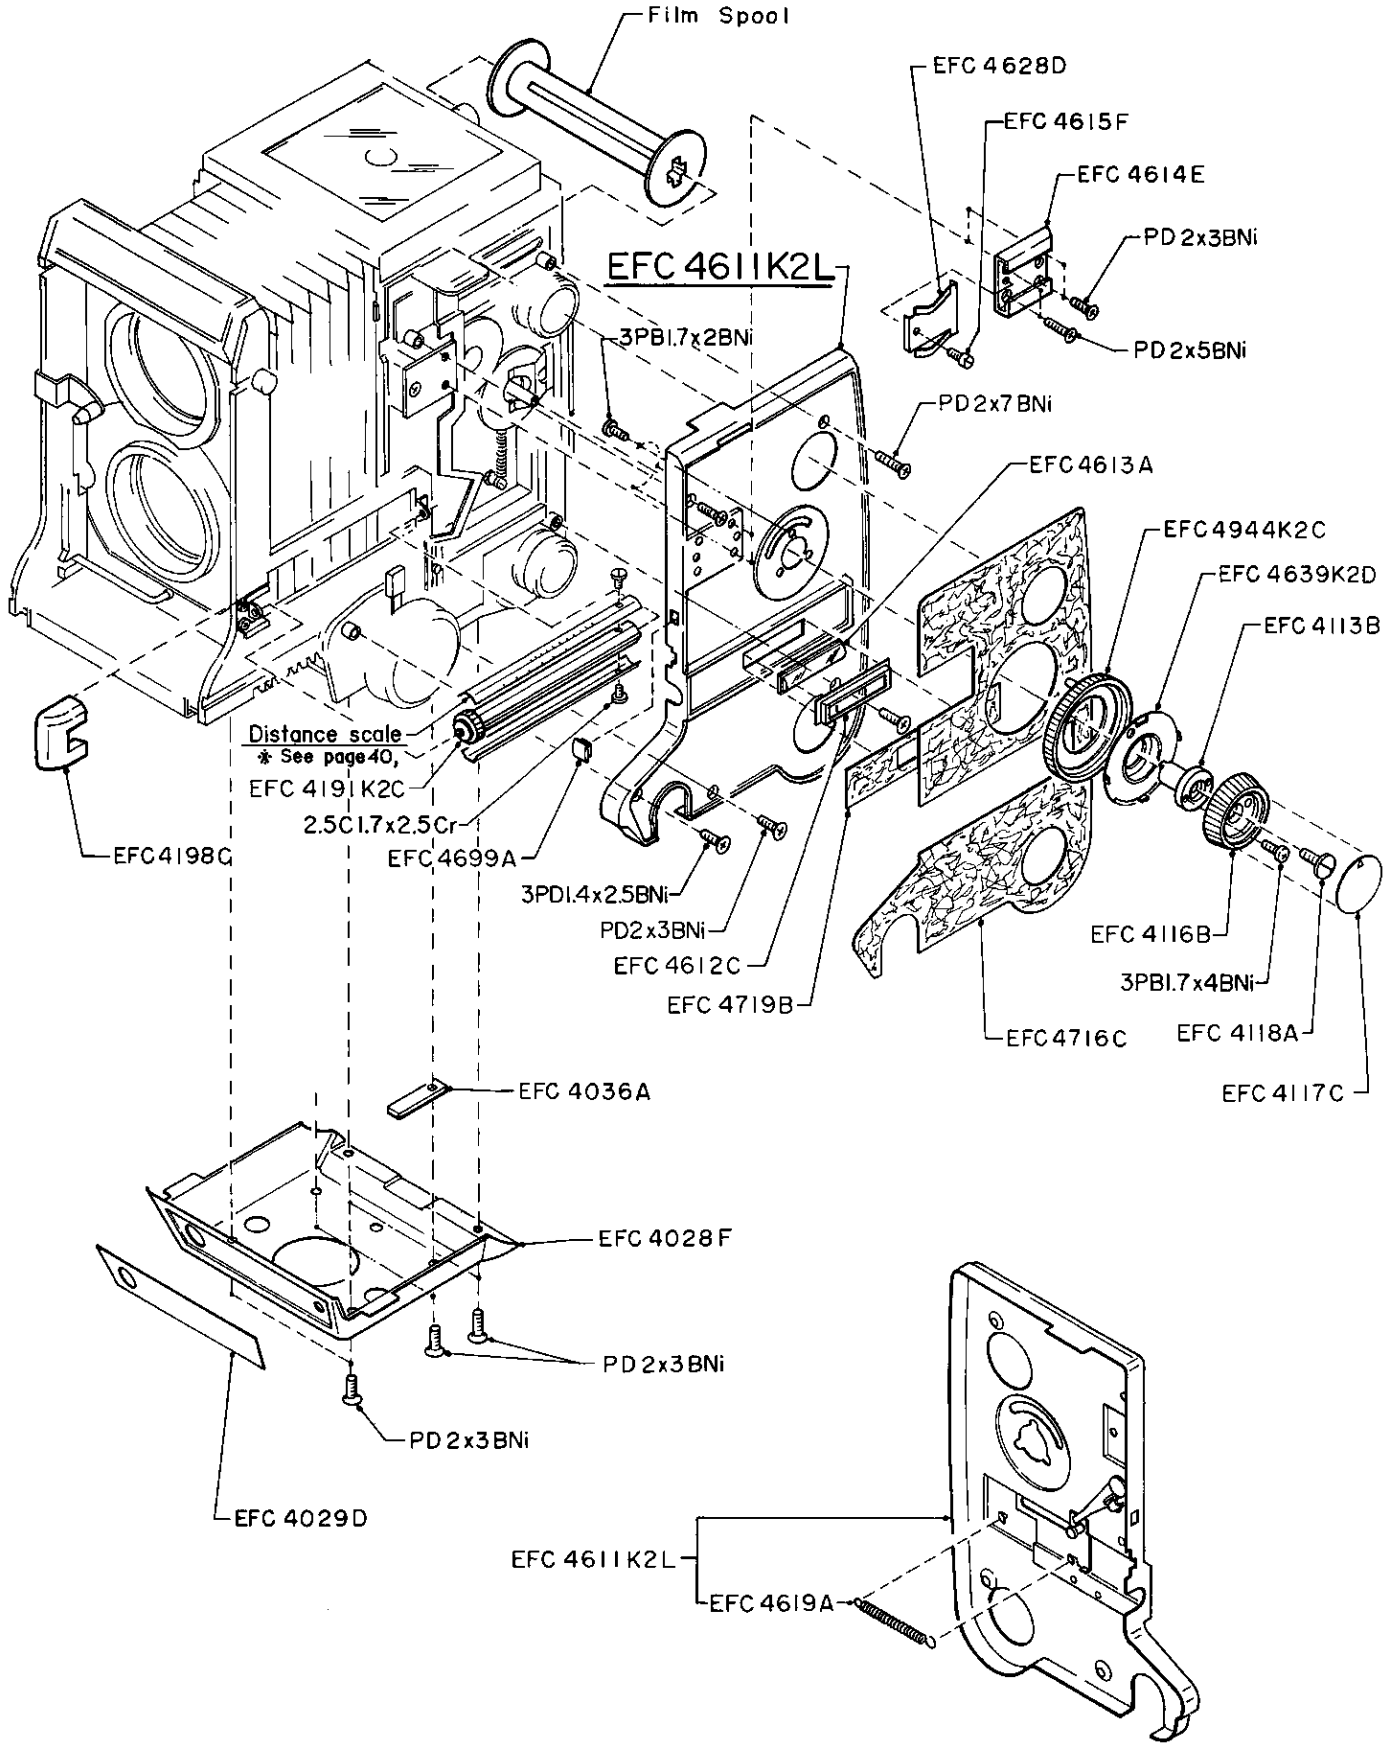
Film Spool
EFC 4628D
EFC 4615F
EFC 4614E
PD 2x3BNi
PD 2x5BNi
EFC 4611K2L
3PBI.7x2BNi
PD 2x7BNi
EFC 4613A
EFC 4944K2C
EFC 4639K2D
EFC 4113B
Distance scale
* See page 40,
EFC 4191K2C
2.5CI.7x2.5Cr
EFC 4198C
EFC 4699A
3PDI.4x2.5BNi
PD 2x3BNi
EFC 4612C
EFC 4719B
EFC 4116B
3PBI.7x4BNi
EFC 4716C
EFC 4118A
EFC 4117C
EFC 4036A
EFC 4028F
PD 2x3BNi
PD 2x3BNi
EFC 4029D
EFC 4611K2L
EFC 4619A

EFC4611K2L

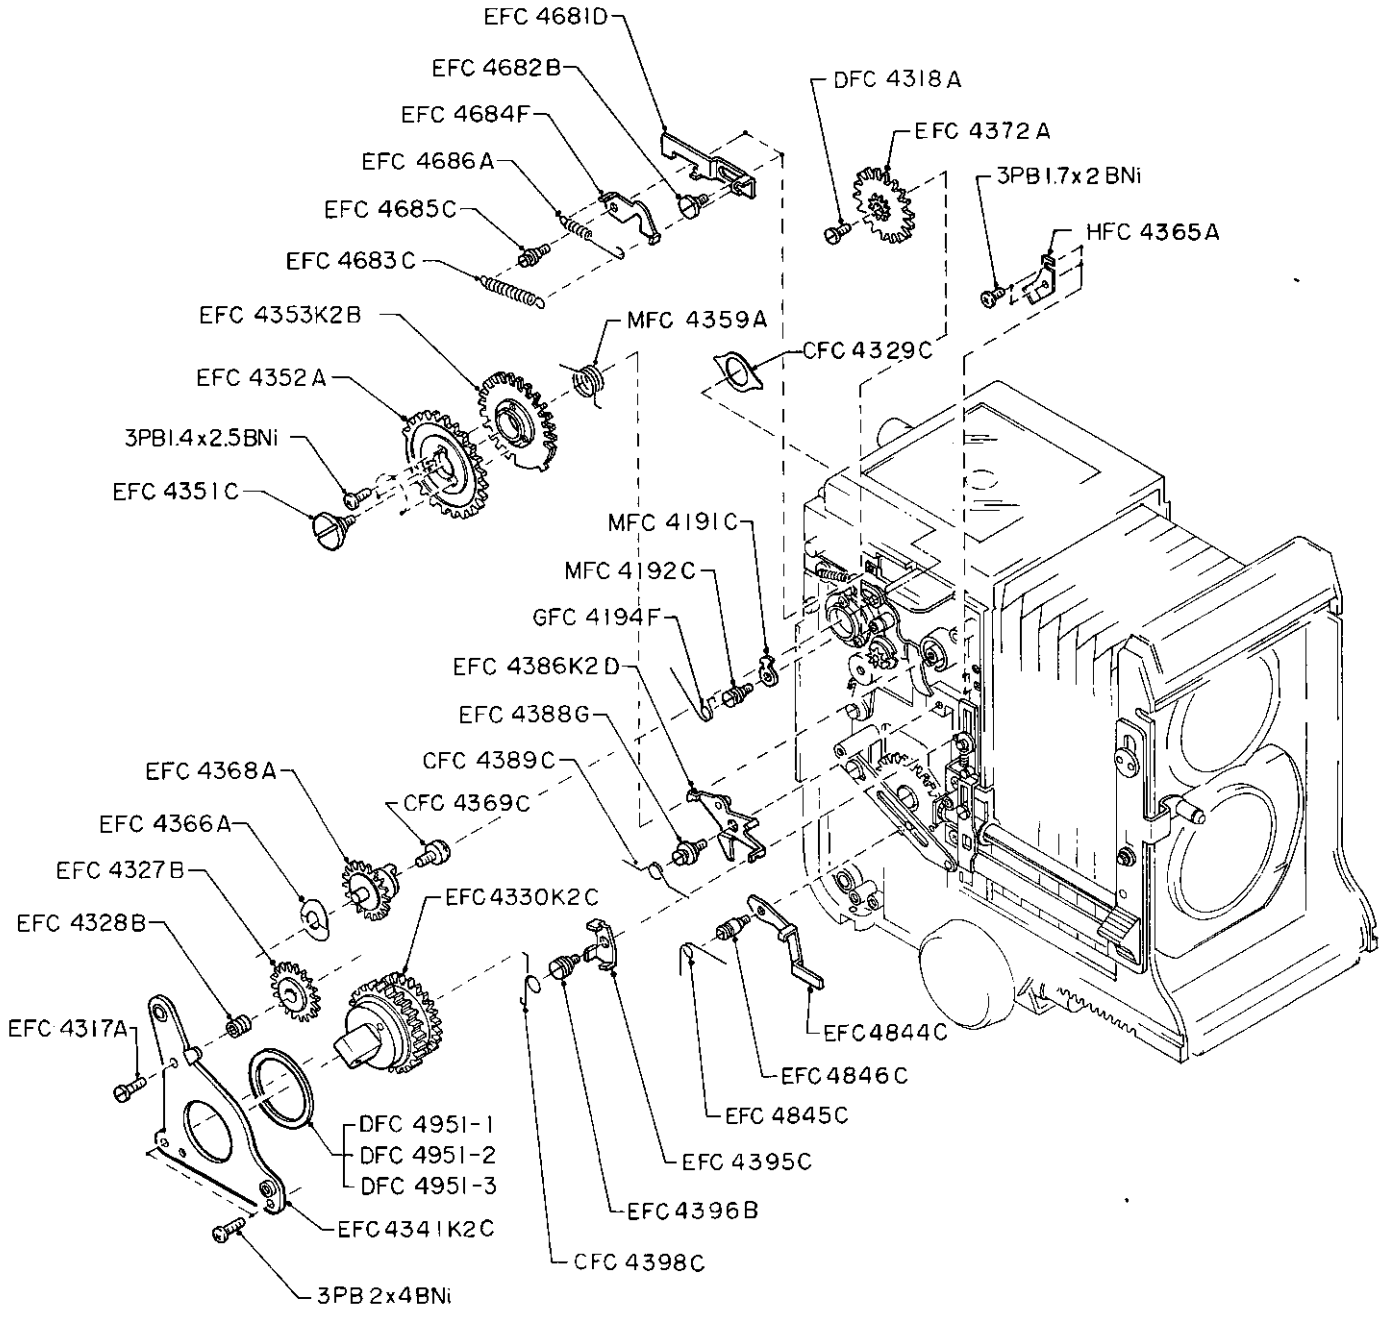
EFC 4681D
EFC 4682B
EFC 4684F
EFC 4686A
EFC 4685C
EFC 4683C
EFC 4353K2B
EFC 4352A
3PB1.4x2.5BNi
EFC 4351C
MFC 4359A
DFC 4318A
EFC 4372A
3PB1.7x2 BNi
HFC 4365A
CFC 4329C
MFC 4191C
MFC 4192C
GFC 4194F
EFC 4386K2D
EFC 4388G
CFC 4389C
EFC 4368A
CFC 4369C
EFC 4366A
EFC 4327B
EFC 4328B
EFC4330K2C
EFC 4317A
DFC 4951-1
DFC 4951-2
DFC 4951-3
EFC4341K2C
3PB 2x4BNi
CFC 4398C
EFC 4396B
EFC 4395C
EFC 4845C
EFC 4846C
EFC4844C

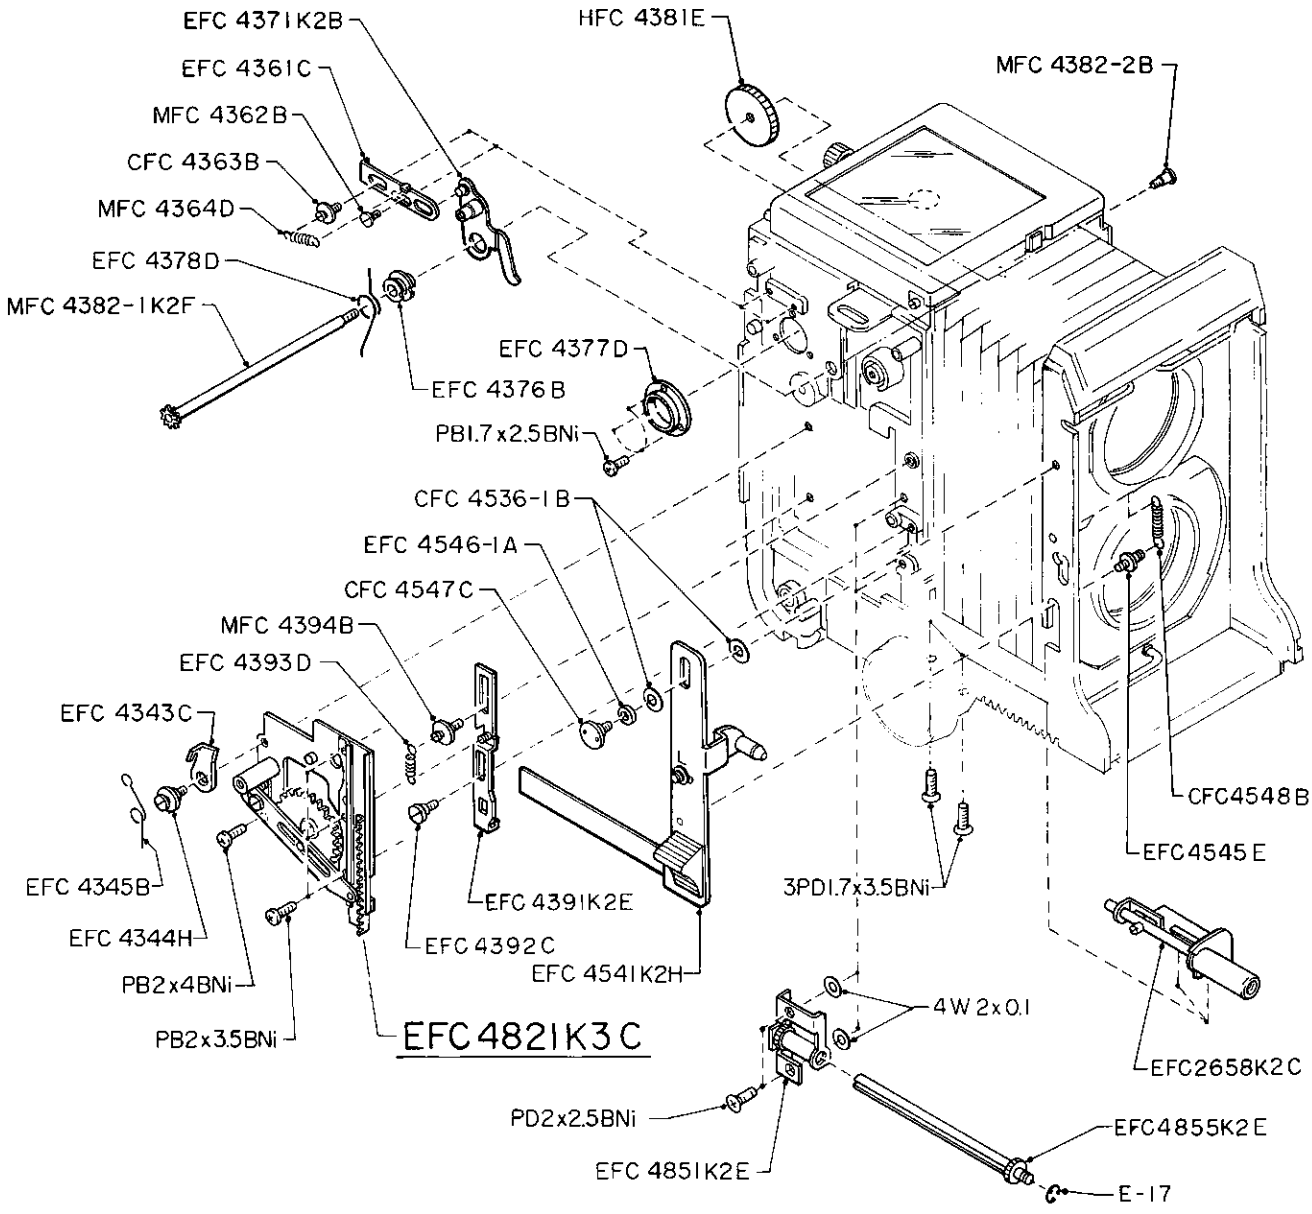
EFC 4371K2B
EFC 4361C
MFC 4362B
CFC 4363B
MFC 4364D
EFC 4378D
MFC 4382-1K2F
EFC 4376B
EFC 4377D
PB1.7x2.5BNi
HFC 4381E
MFC 4382-2B
CFC 4536-1B
EFC 4546-1A
CFC 4547C
MFC 4394B
EFC 4393D
EFC 4343C
EFC 4345B
EFC 4344H
PB2x4BNi
PB2x3.5BNi
EFC 4391K2E
EFC 4392C
EFC 4541K2H
EFC 4821K3C
3PD1.7x3.5BNi
CFC4548B
EFC4545E
4W 2x0.1
EFC2658K2C
PD2x2.5BNi
EFC 4851K2E
EFC4855K2E
E-17

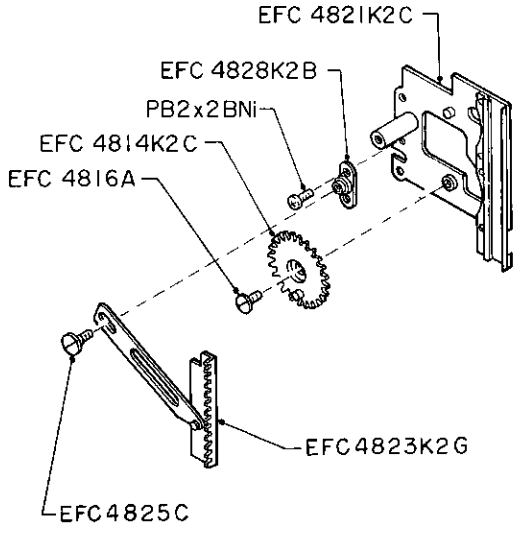
EFC 4821K2C
EFC 4828K2B
PB2x2BNi
EFC 4814K2C
EFC 4816A
EFC4823K2G
EFC4825C

EFC 4821K3C

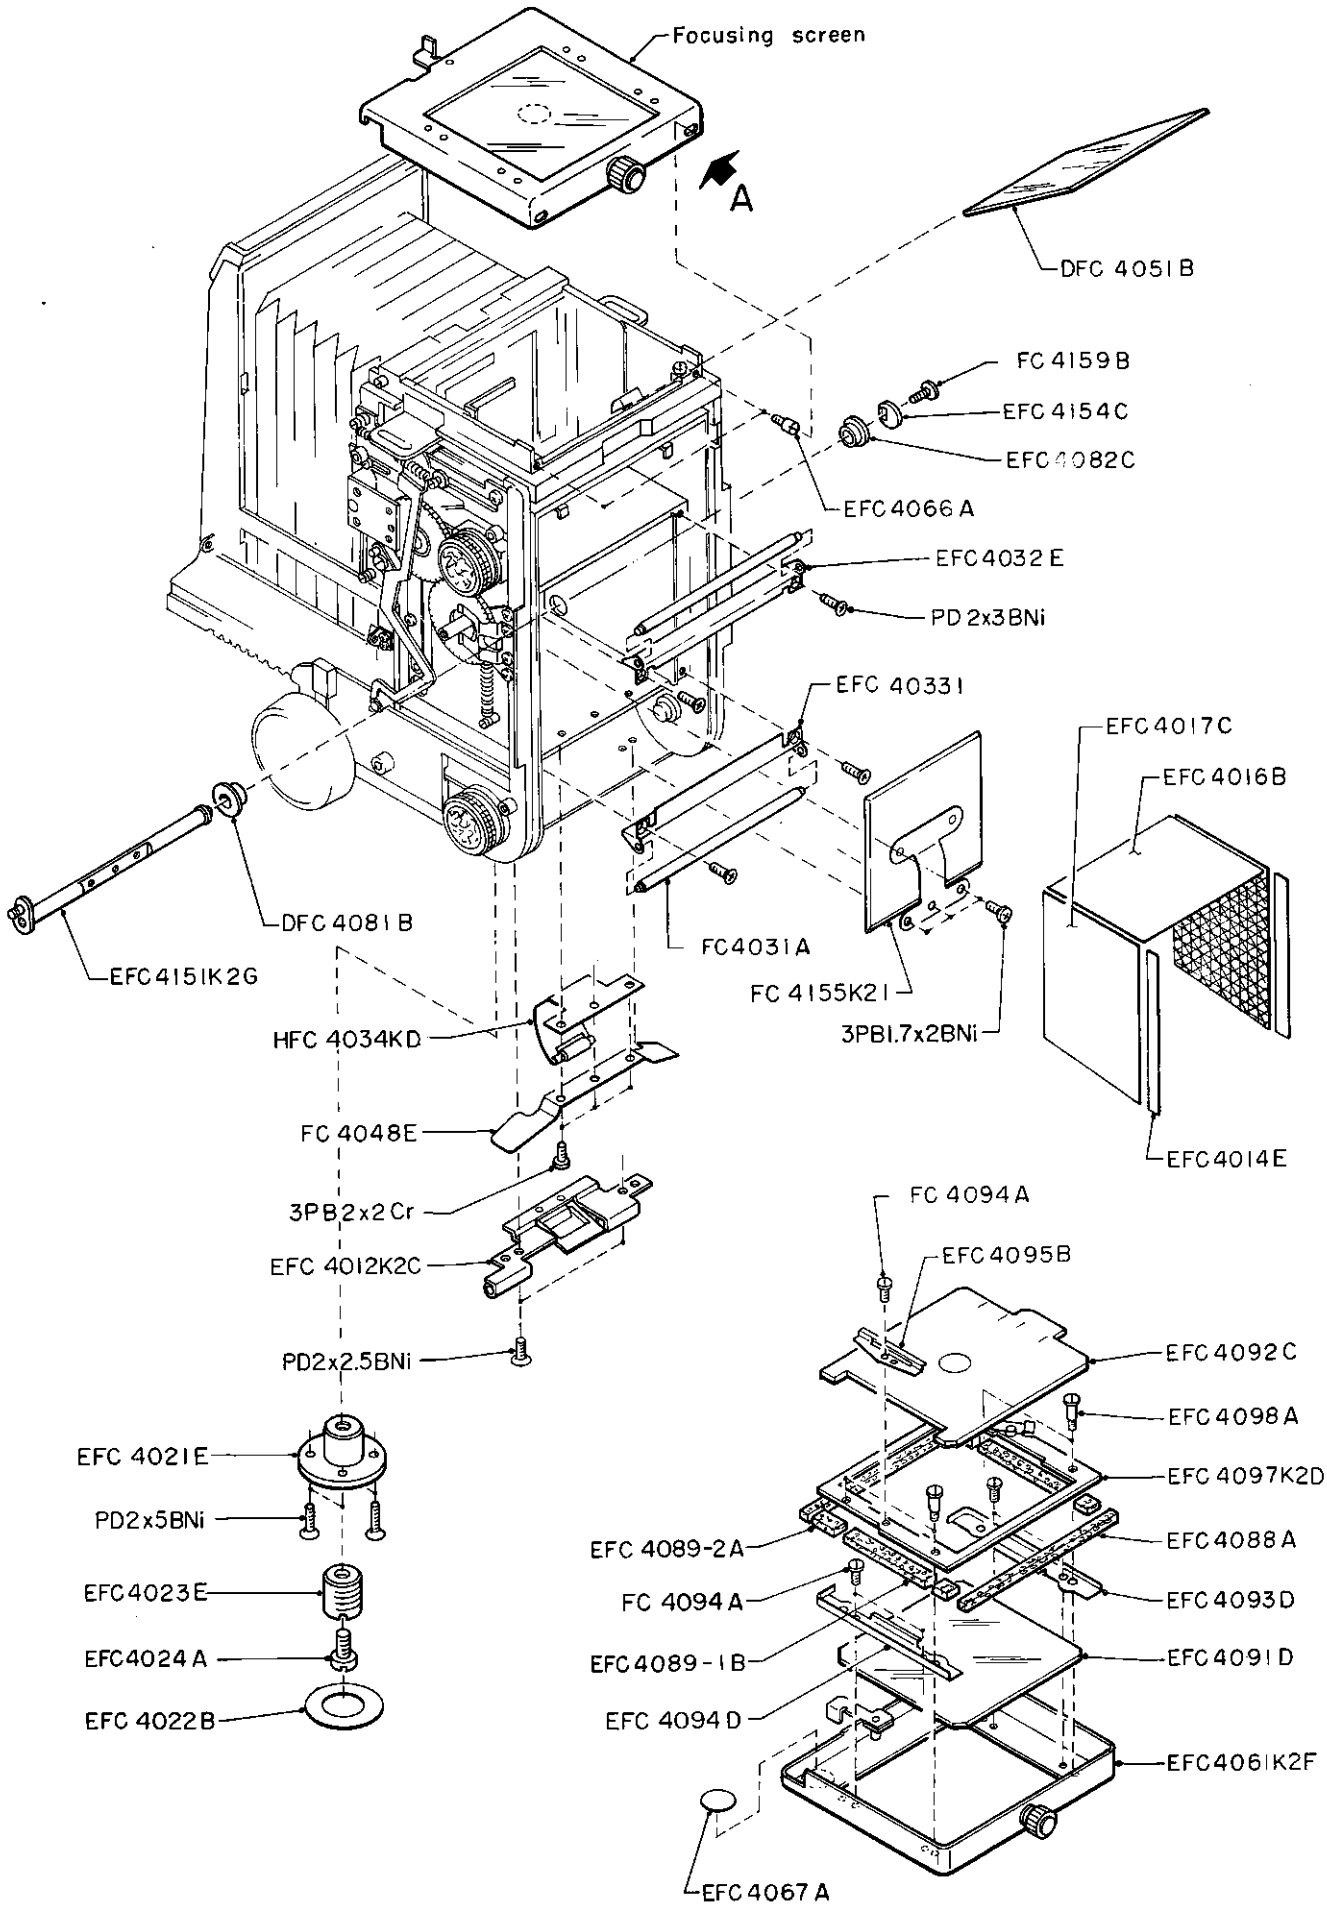
Focusing screen
A
DFC 4051B
FC 4159B
EFC 4154C
EFC 4082C
EFC 4066A
EFC 4032E
PD 2x3BNi
EFC 40331
EFC 4017C
EFC 4016B
DFC 4081B
EFC 4151K2G
FC 4031A
FC 4155K21
3PB1.7x2BNi
EFC 4014E
HFC 4034KD
FC 4048E
3PB 2x2 Cr
EFC 4012K2C
PD2x2.5BNi
FC 4094A
EFC 4095B
EFC 4092C
EFC 4098A
EFC 4097K2D
EFC 4088A
EFC 4093D
EFC 4091D
EFC 4061K2F
EFC 4067A
EFC 4089-2A
FC 4094A
EFC 4089-1B
EFC 4094D
EFC 4021E
PD2x5BNi
EFC4023E
EFC4024A
EFC 4022B

DETAIL "A"

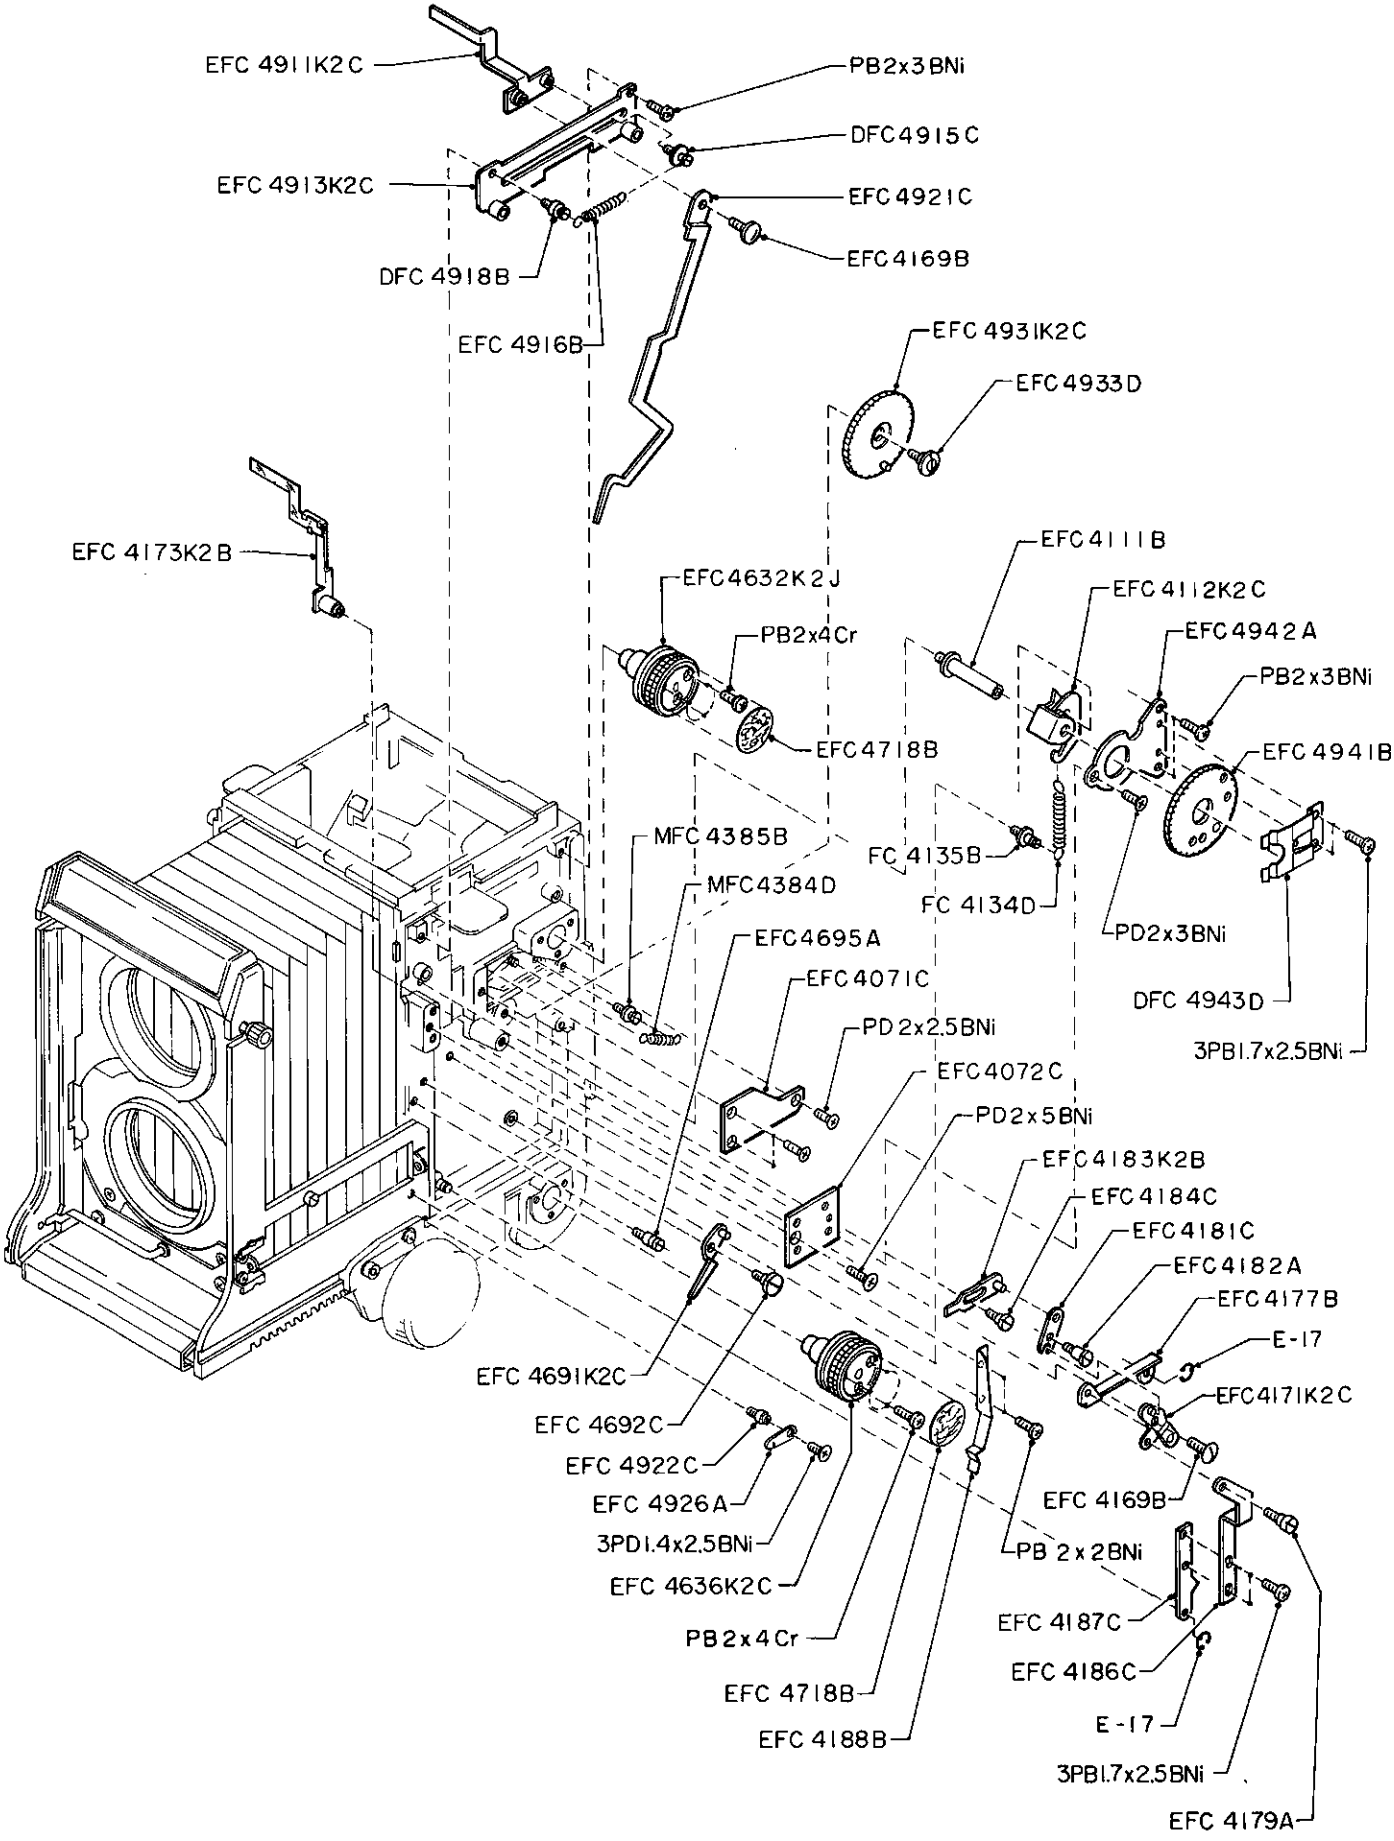
EFC 4911K2C
PB2x3BNi
DFC4915C
EFC 4913K2C
EFC4921C
EFC4169B
DFC 4918B
EFC 4916B
EFC 4931K2C
EFC4933D
EFC 4173K2B
EFC4111B
EFC4632K2J
EFC4112K2C
PB2x4Cr
EFC4942A
PB2x3BNi
EFC4718B
EFC 4941B
MFC 4385B
FC 4135B
MFC4384D
FC 4134D
EFC4695A
PD2x3BNi
EFC4071C
DFC 4943D
PD2x2.5BNi
3PB1.7x2.5BNi
EFC4072C
PD2x5BNi
EFC4183K2B
EFC4184C
EFC4181C
EFC4182A
EFC4177B
E-17
EFC 4691K2C
EFC4171K2C
EFC 4692C
EFC 4922C
EFC 4169B
EFC 4926A
3PD1.4x2.5BNi
PB 2x2BNi
EFC 4636K2C
EFC 4187C
PB2x4Cr
EFC 4186C
EFC 4718B
E-17
EFC 4188B
3PB1.7x2.5BNi
EFC 4179A

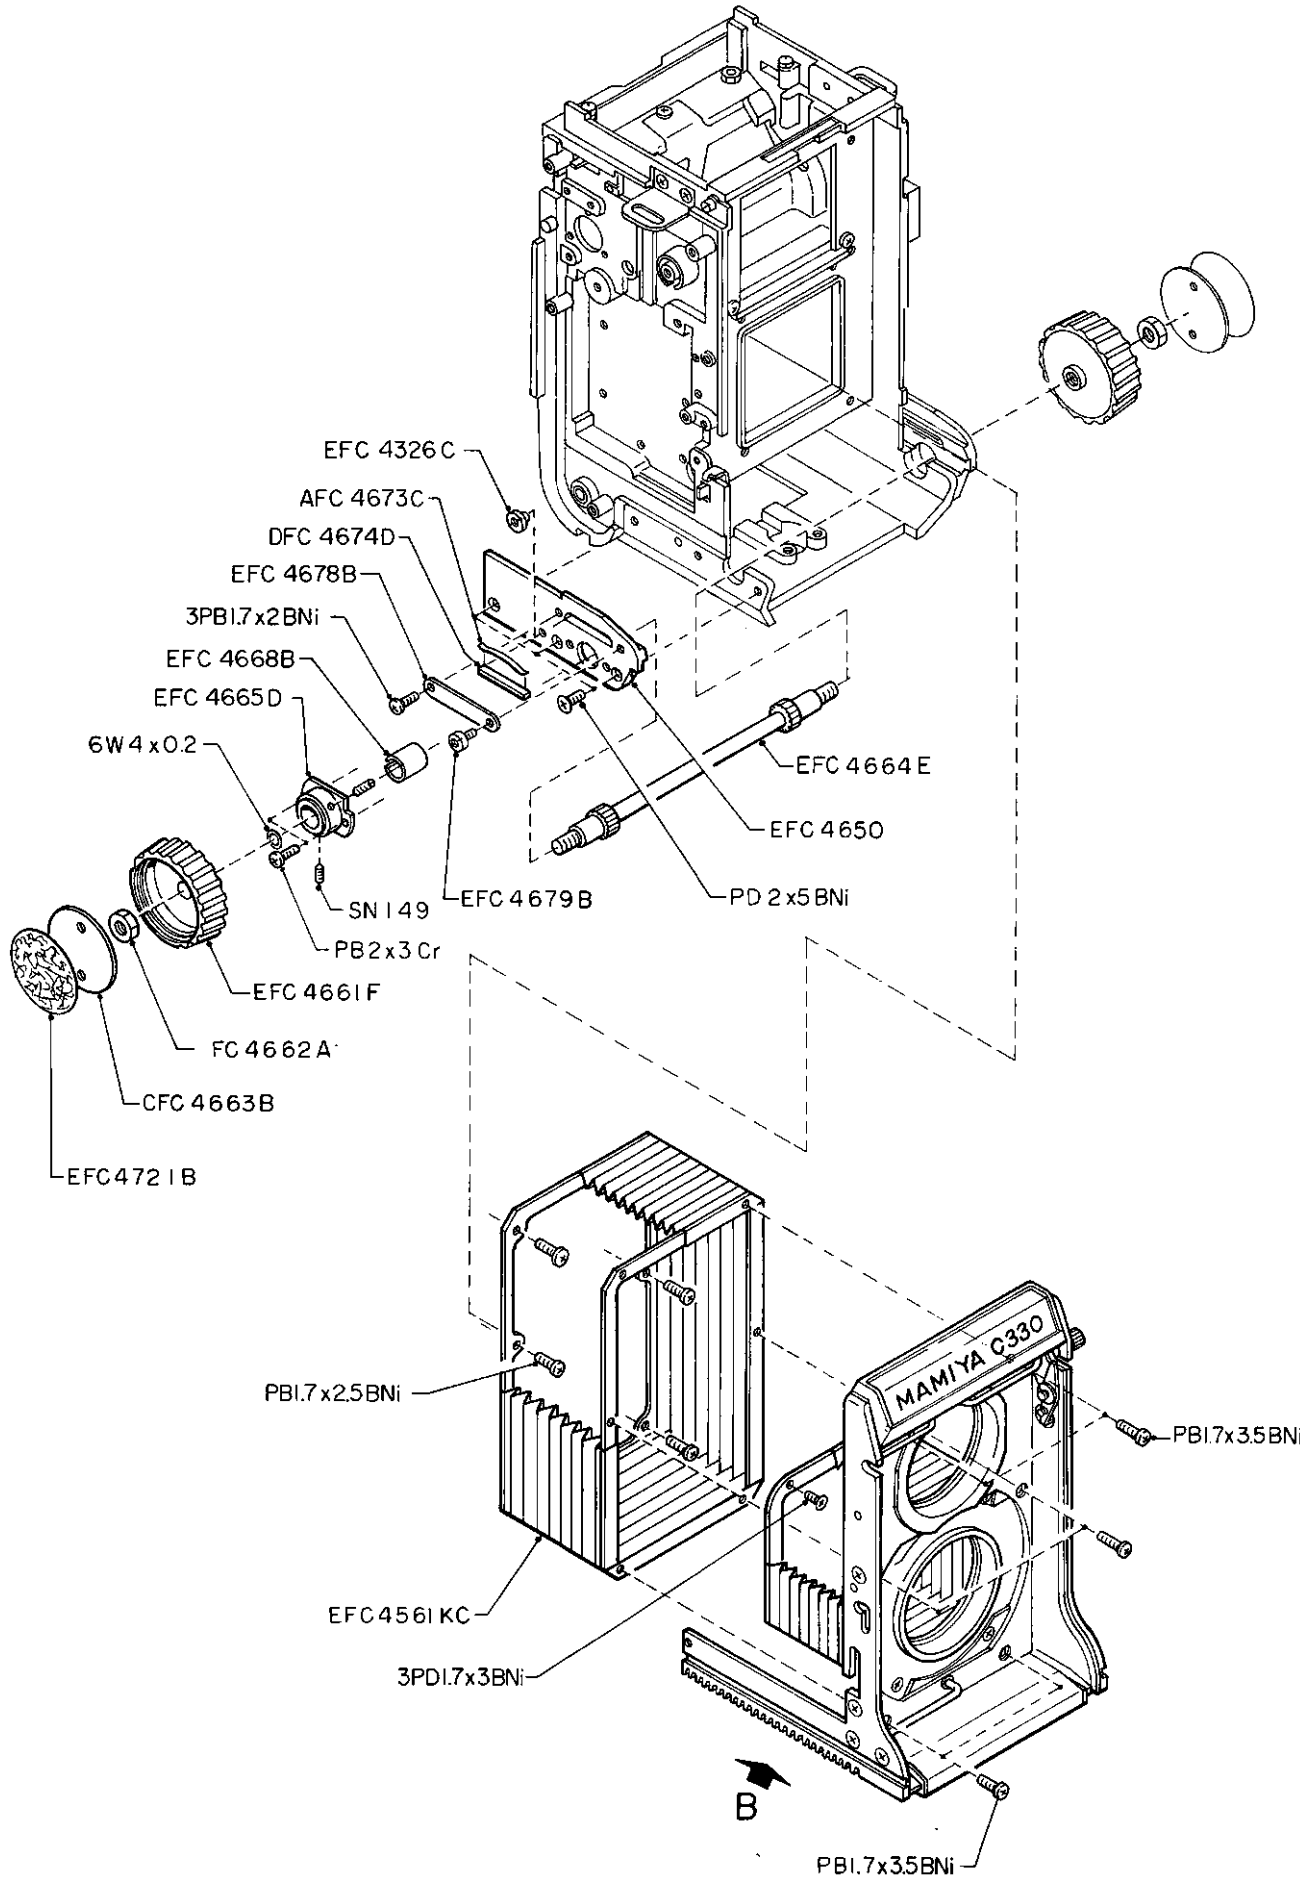
EFC 4326C
AFC 4673C
DFC 4674D
EFC 4678B
3PB1.7x2BNi
EFC 4668B
EFC 4665D
6W4x0.2
SN149
PB2x3Cr
EFC4661F
FC4662A
CFC4663B
EFC4721B
EFC4679B
PD2x5BNi
EFC4650
EFC4664E
PB1.7x2.5BNi
EFC4561KC
3PD1.7x3BNi
MAMIYA C330
PB1.7x3.5BNi
B
PB1.7x3.5BNi

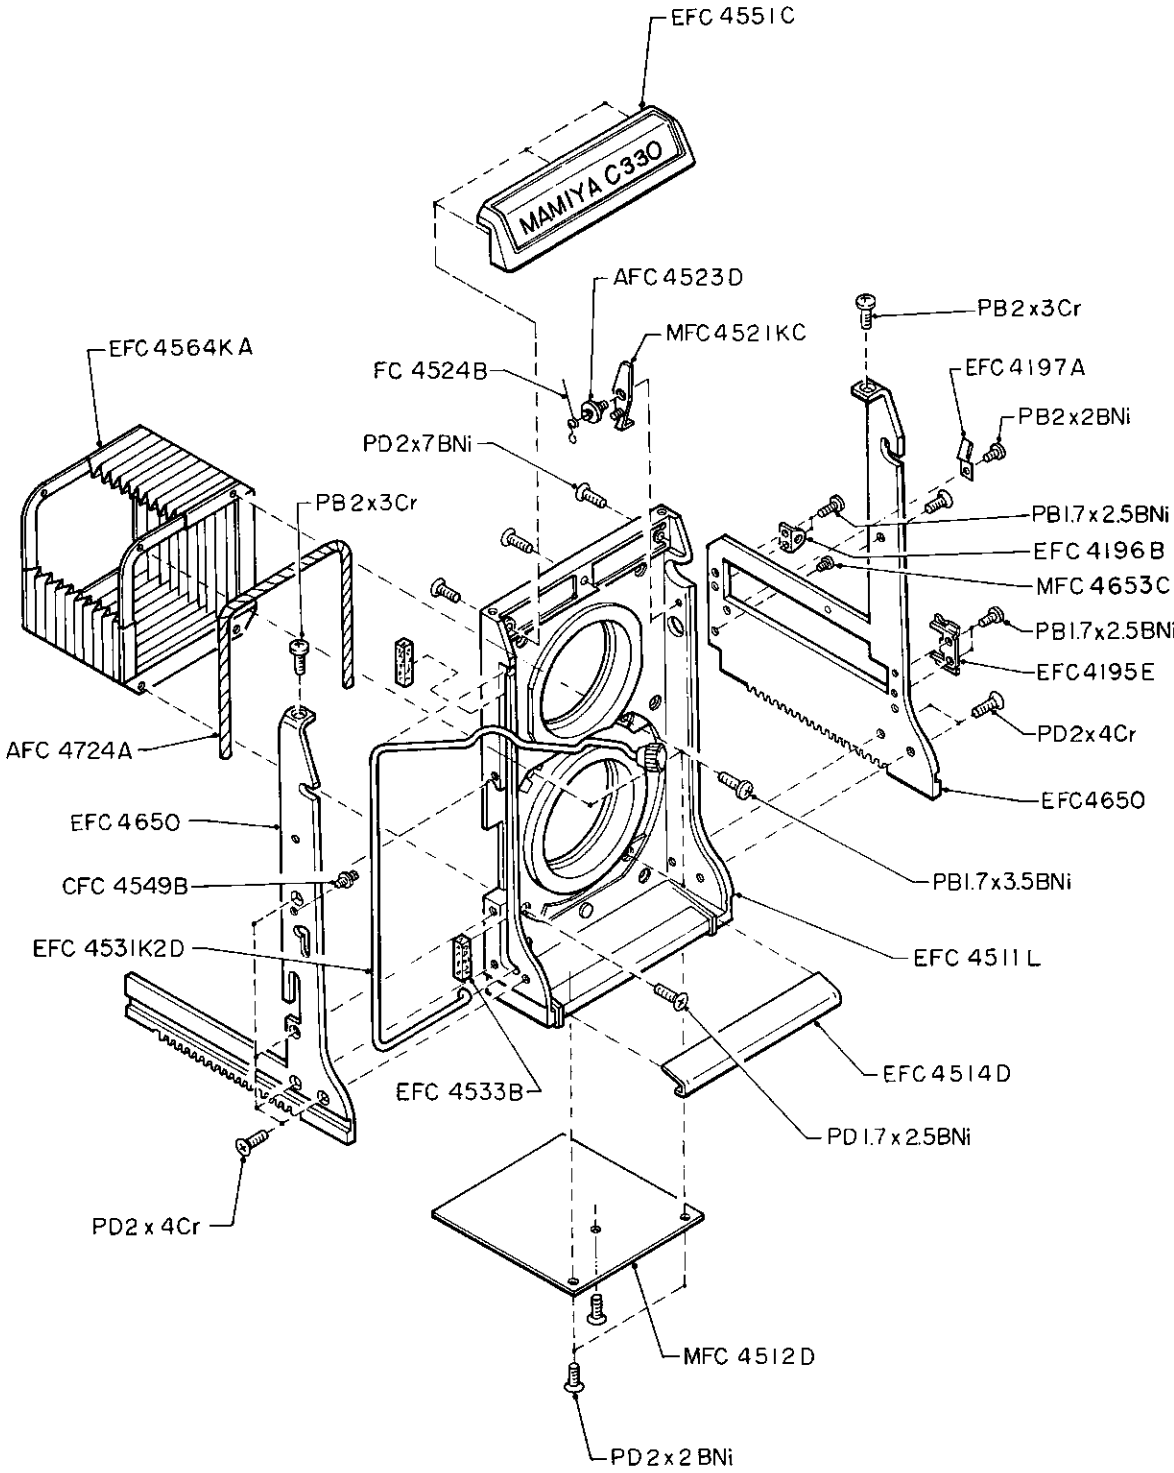
EFC 4551C
MAMIYA C330
AFC 4523D
MFC 4521KC
FC 4524B
PD2x7BNi
EFC 4564KA
PB2x3Cr
AFC 4724A
EFC 4650
CFC 4549B
EFC 4531K2D
EFC 4533B
PD2 x 4Cr
PB2x3Cr
EFC 4197A
PB2x2BNi
PB1.7x2.5BNi
EFC 4196B
MFC 4653C
PB1.7x2.5BNi
EFC4195E
PD2x4Cr
EFC4650
PB1.7x3.5BNi
EFC 4511L
EFC 4514D
PD1.7x2.5BNi
MFC 4512D
PD2x2BNi

DETAIL "B"

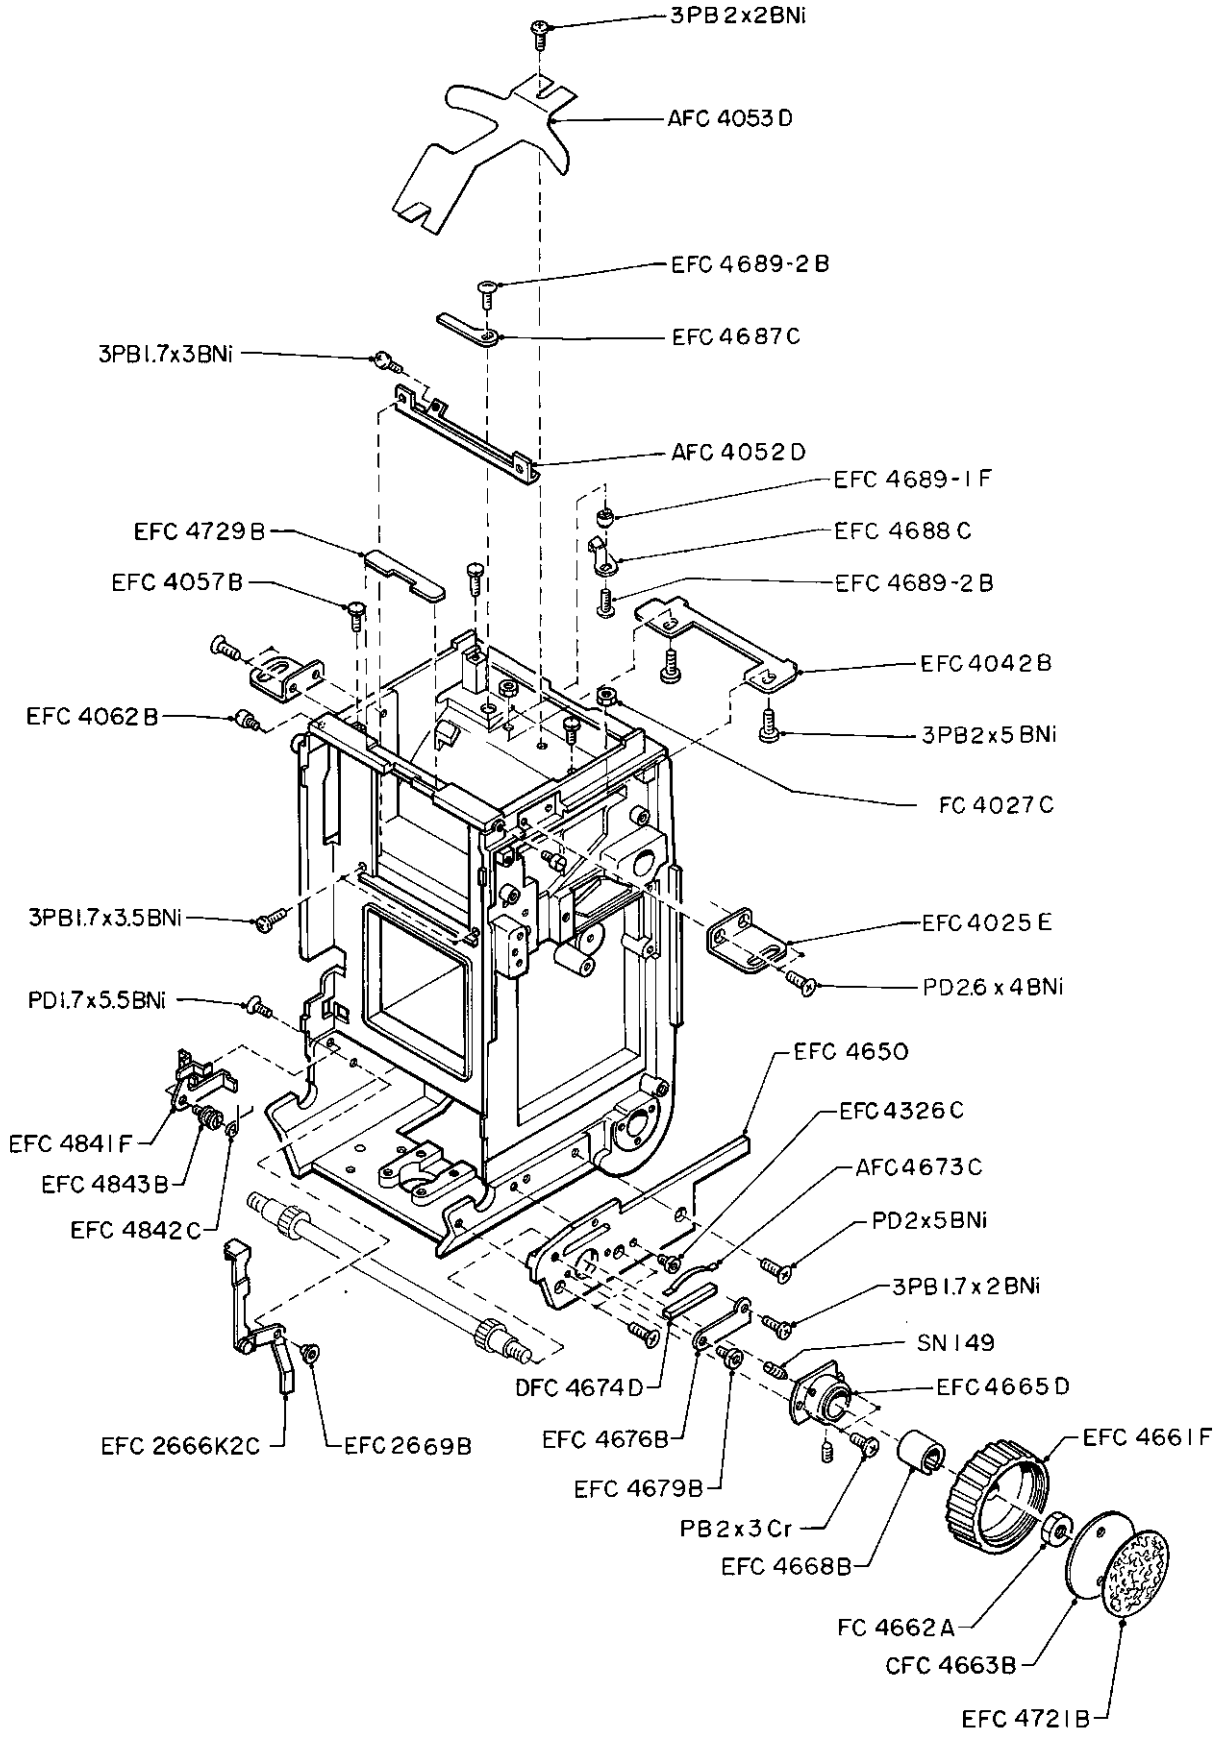
3PB 2x2BNi
AFC 4053 D
EFC 4689-2 B
EFC 4687 C
3PB1.7x3BNi
AFC 4052 D
EFC 4689-1 F
EFC 4729 B
EFC 4688 C
EFC 4057 B
EFC 4689-2 B
EFC 4042 B
EFC 4062 B
3PB2x5 BNi
FC 4027 C
3PB1.7x3.5BNi
EFC 4025 E
PD1.7x5.5BNi
PD2.6 x 4BNi
EFC 4650
EFC 4326 C
EFC 4841 F
AFC 4673 C
EFC 4843 B
PD2x5BNi
EFC 4842 C
3PB 1.7 x 2 BNi
SN 149
DFC 4674 D
EFC 4665 D
EFC 4661 F
EFC 2666K2C
EFC 2669B
EFC 4676B
EFC 4679B
PB 2x3 Cr
EFC 4668B
FC 4662 A
CFC 4663B
EFC 4721 B

Back cover standard

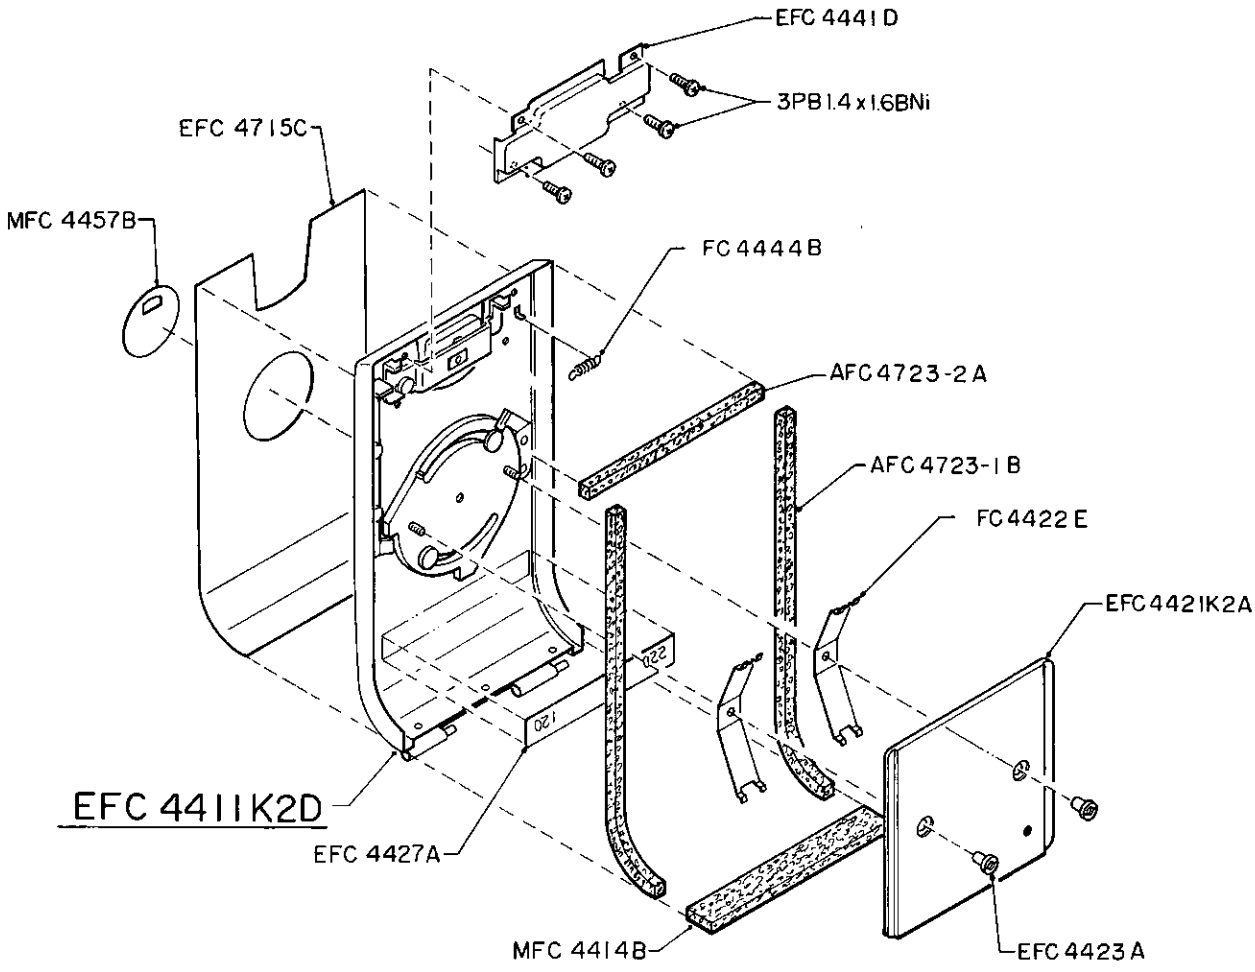

Distance scale Meter

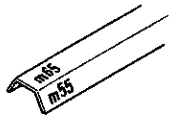

EFC 5311 B

180 55
m65
m80

EFC 5312 C

m105o.ps
m135
m250

EFC 5313A

m105
m135
m250

Distance scale Feet

EFC 5321 C

180 55	feet
65mm	feet
80mm	feet

EFC 5323A

105mm	feet
135mm	feet
250mm	feet

EFC 5324A

105o.ps	feet
135mm	feet
250mm	feet

Focusing hood model I

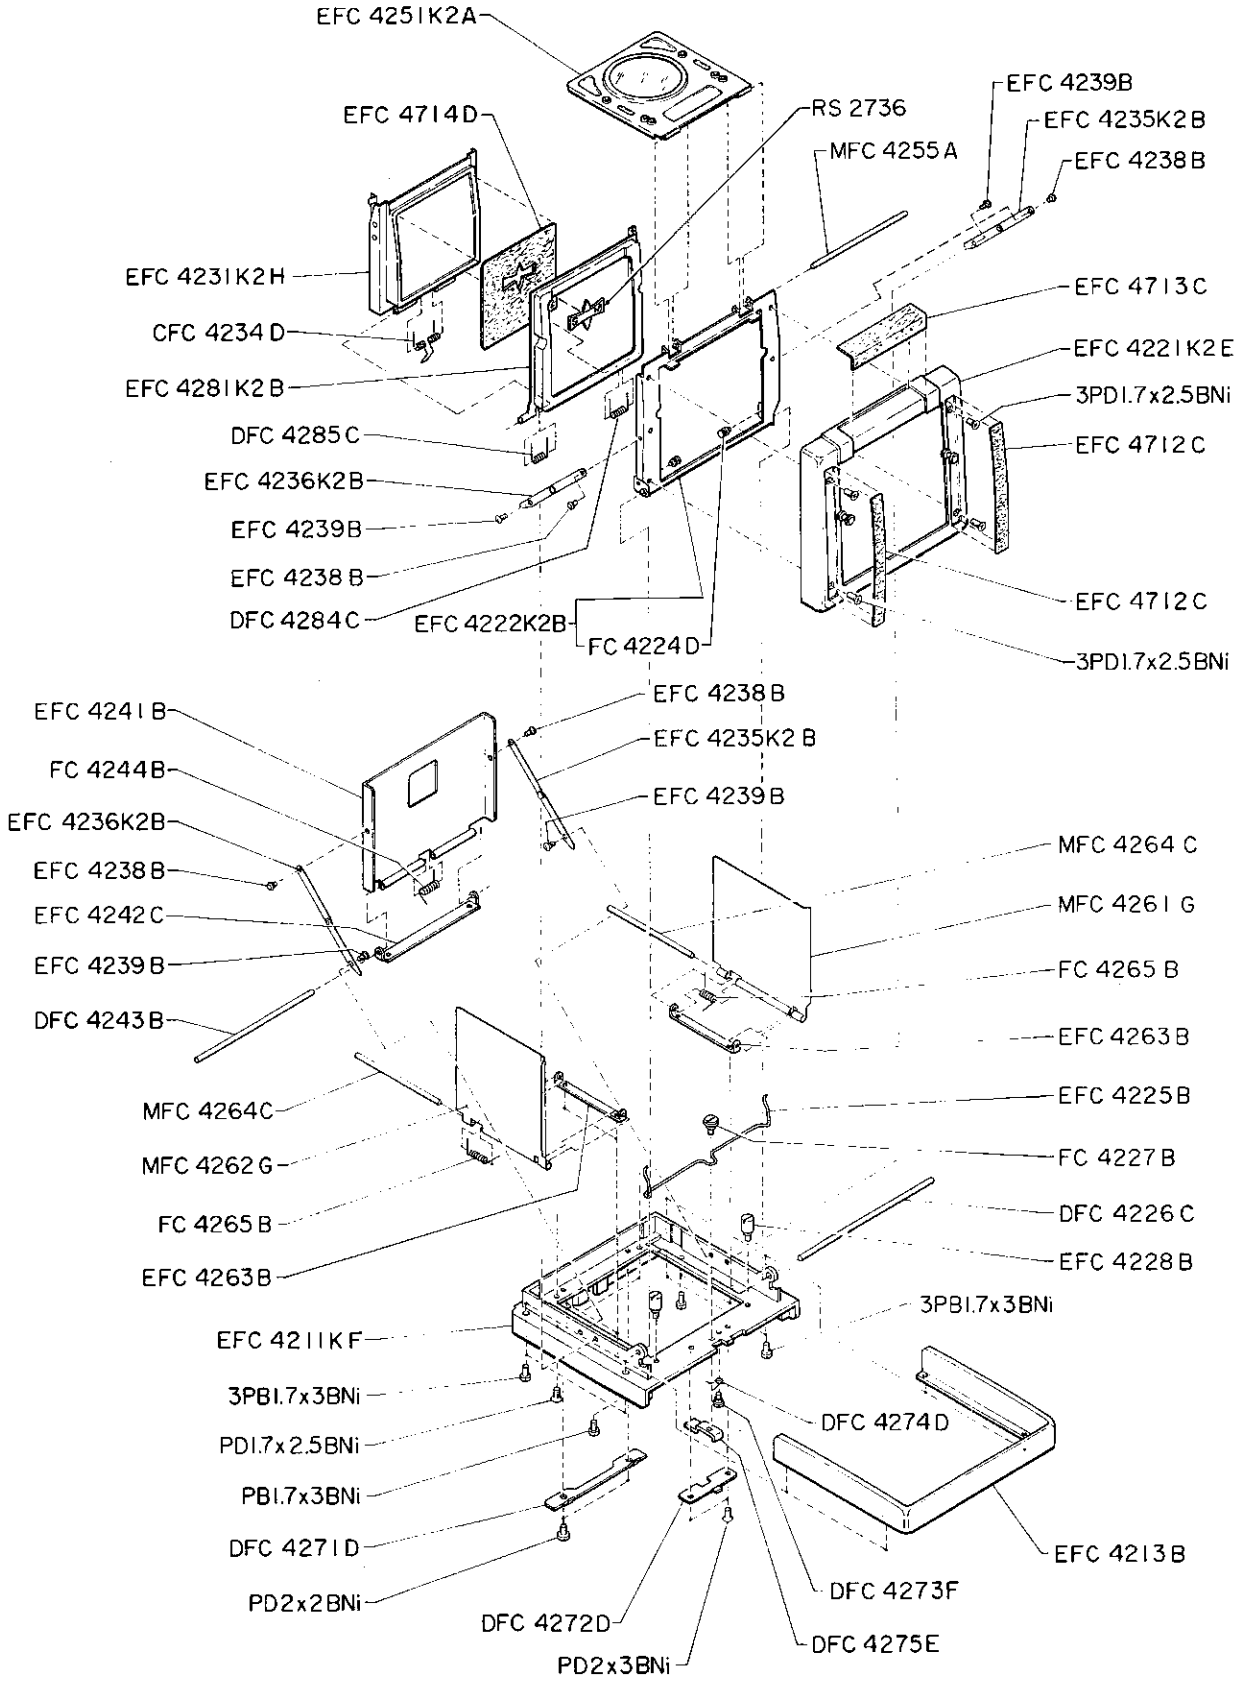

PARTS LIST

Mamiya C330 Professional

Mamiya

Parts No.	Description	Pcs.	Ref. Page
EFC2658K2C	Shutter button bracket assy.	1	20
EFC2666K2C	Joint	1	25
EFC2669B	Hob	1	25
EFC4012K2C	Hinge assy.	1	21
EFC4014E	Plate	2	21
EFC4016B	Reflection absorber paper	1	21
EFC4017C	Reflection absorber paper	2	21
EFC4021E	Tripod socket	1	21
EFC4022B	Leatherette	1	21
EFC4023E	Tripod socket adapter	1	21
EFC4024A	Screw	1	21
EFC4025E	Strap loop	2	25
EFC4028F	Botton cover	1	18
EFC4029D	Name plate	1	18
EFC4032E	Bracket	1	21
EFC4033I	Bracket	1	18
EFC4036A	Plate	1	18
EFC4042B	Catch plate	1	25
EFC4057B	Adjusting screw	3	25
EFC4061K2F	Frame focusing screw	1	21
EFC4062B	Screw	2	25
EFC4066A	Guide screw	2	21
EFC4067A	Level	1	21
EFC4071C	Cover	1	22
EFC4072C	Base	1	22
EFC4082C	Sleeve bush	1	21
EFC4088A	Cushion	2	21
EFC4089-1B	Cushion	2	21
EFC4089-2A	Cushion	4	21
EFC4091D	Dustproof glass	1	21
EFC4092C	Fresnel lens	1	21
EFC4093D	Glass holder	1	21
EFC4094D	Glass holder	1	21
EFC4095B	Fresnel holder	1	21
EFC4097K2D	Frame for fresnel lens	1	21

Parts No.	Description	Pcs.	Ref. Page
EFC4098A	Shoulder screw	4	21
EFC4111B	Lock crank shaft	1	22
EFC4112K2C	Lock crank assy.	1	22
EFC4113B	Shaft	1	18
EFC4116B	Knob	1	18
EFC4117C	Knob cover	1	18
EFC4118A	Screw	1	18
EFC4151K2G	Light-tight flap shaft	1	21
EFC4154C	Safety base	1	21
EFC4169B	Screw	2	22
EFC4171K2C	Base plate	1	22
EFC4173K2B	Red warning signal	1	22
EFC4177B	Lock plate	1	22
EFC4179A	Shoulder screw	1	22
EFC4181C	Lever	1	22
EFC4182A	Shoulder screw	1	22
EFC4183K2B	Slide plate	1	22
EFC4184C	Shoulder screw	1	22
EFC4186C	Linking bar	1	22
EFC4187C	Linking bar	1	22
EFC4188B	Spring	1	22
EFC4191K2C	Scale bar assy.	1	18
EFC4195E	Scale holder	1	24
EFC4196B	Scale holder	1	24
EFC4197A	Spring	1	24
EFC4198C	Scale cover	1	18
EFC4311K2C	Winding crank	1	17
EFC4317A	Screw	1	19
EFC4321B	Coupling base	1	17
EFC4326C	Boss	2	23,25
EFC4327B	Idle gear	1	19
EFC4328B	Hub	1	19
EFC4330K2C	Winding gear assy.	1	19
EFC4341K2C	Winding base plate	1	19
EFC4343C	Pawl	1	20

Parts No.	Description	Pcs.	Ref. Page
EFC4344H	Anchor	1	20
EFC4445B	Spring	1	20
EFC4351C	Shoulder screw	1	19
EFC4352A	Counter	1	19
EFC4353K2B	Counter dividing device	1	19
EFC4361C	Counter rest	1	20
EFC4366A	Friction washer	1	19
EFC4368A	Take-up gear	1	19
EFC4371K2B	Release lever	1	20
EFC4372A	Gear	1	19
EFC4376B	Flanged screw	1	20
EFC4377D	Gear shaft hub	1	20
EFC4378D	Spring	1	20
EFC4386K2D	Winding stop lever	1	19
EFC4388G	Guide screw	1	19
EFC4391K2E	Winding stop rest lever	1	20
EFC4392C	Guide screw	1	20
EFC4393D	Spring	1	20
EFC4395C	Stopper	1	19
EFC4396B	Shoulder screw	1	19
EFC4511L	Front panel	1	24
EFC4514D	Front cover	1	24
EFC4531K2D	Wire spring	1	24
EFC4533B	Packing strip	2	24
EFC4541K2H	L Shape slider assy.	1	20
EFC4545E	Shoulder screw	1	20
EFC4546-1A	Collar	1	20
EFC4551C	Name plate	1	24
EFC4561KC	Lagre bellows	1	23
EFC4564KA	Small bellows	1	24
EFC4611K2L	Right panel assy.	1	18
EFC4612C	Frame	1	18
EFC4613A	Distance scale window	1	18
EFC4614E	Accessory shoe	1	18
EFC4615F	Stopper	1	18

Parts No.	Description	Pcs.	Ref. Page
EFC4619A	Spring	1	18
EFC4621K2F	Left panel assy.	1	17
EFC4621KF	Left panel	1	17
EFC4622A	Window	1	17
EFC4623B	Frame	1	17
EFC4627B	Plate	1	17
EFC4628D	Shoe cover	1	18
EFC4632K2J	S P Knob assy. upper	1	22
EFC4636K2C	S P Knob assy. Lower	1	22
EFC4639K2D	Lock unlock disc	1	18
EFC4645-1B	Knob	1	17
EFC4645-2C	Cover	1	17
EFC4646B	Spring	1	17
EFC4647K2B	Change-over lever	1	17
EFC4650	Rack plate unit	4	23,24,25
EFC4661F	Focusing knob	2	23,25
EFC4664E	Pinion shaft	1	23
EFC4665D	Pinion shaft hub	2	23,25
EFC4668B	Pipe	2	23,25
EFC4676B	Cover plate Right	1	25
EFC4678B	Cover plate Left	1	23
EFC4679B	Stud	2	23,25
EFC4681D	Change plate "120,220"	1	19
EFC4682B	Screw	1	19
EFC4683C	Spring	1	19
EFC4684F	Lever	1	19
EFC4685C	Shaft	1	19
EFC4686A	Spring	1	19
EFC4687C	Change lever	1	25
EFC4688C	Click lever	1	25
EFC4689-1F	Hub	1	25
EFC4689-2B	Screw	2	25
EFC4691K2C	Moving plate	1	22
EFC4692C	Shoulder screw	1	22
EFC4695A	Stopper	1	22

Parts No.	Description	Pcs.	Ref. Page
EFC4699A	Cover	1	18
EFC4711G	Leatheretter	1	17
EFC4716C	Leatheretter	1	18
EFC4717D	Leatheretter	1	17
EFC4718B	Leatheretter	2	22
EFC4719B	Leatheretter	1	18
EFC4721B	Leatheretter	2	23,25
EFC4722B	Leatheretter	1	17
EFC4727B	Leatheretter	1	17
EFC4729B	Plate	1	25
EFC4814K2C	Gear	1	20
EFC4816A	Screw	1	20
EFC4821K3C	Shutter cocking gear train	1	20
EFC4821K2C	Base plate	1	20
EFC4823K2G	Rack plate	1	20
EFC4825C	Screw	1	20
EFC4828K2B	Adjusting hub	1	20
EFC4841F	Safety lever	1	25
EFC4842C	Spring	1	25
EFC4843B	Screw	1	25
EFC4344C	Release lever	1	19
EFC4845C	Spring	1	19
EFC4846C	Screw	1	19
EFC4851K2E	Cocking link gear	1	20
EFC4855K2E	Cocking shaft	1	20
EFC4891K2E	Cocking ring	1	17
EFC4894D	Ring	1	17
EFC4895K2E	Rim plate	1	17
EFC4896A	Washer	1	17
EFC4911K2C	Parallax indicator	1	22
EFC4913K2C	Guide rail	1	22
EFC4916B	Spring	1	22
EFC4921C	Linking bar	1	22
EFC4922C	Stopper	1	22
EFC4926A	Linking bar guide	1	22

Parts No.	Description	Pcs.	Ref. Page
EFC4931K2C	Parallax gear No.2	1	22
EFC4933D	Shoulder screw	1	22
EFC4941B	Parallax gear No.1	1	22
EFC4942A	Base plate	1	22
EFC4944K2C	Change-over ring	1	18
EFC5311B	Scale meter(55,65,80,180)	1	26
EFC5312C	Scale meter(105D,DS,135,250)	1	26
EFC5313A	Scale meter(105,135,250)	1	26
EFC5321C	Scale feet(55,65,80,180)	1	26
EFC5323A	Scale feet(105,135,250)	1	26
EFC5324A	Scale feet(105D,DS,135,250)	1	26
AFC4052D	Bracket for mirrer	1	25
AFC4053D	Spring for mirrer	1	25
AFC4523D	Shoulder screw	1	24
AFC4673C	Brake spring	2	23,25
AFC4724A	Woolen yarn	1	24
CFC4315D	pin	1	17
CFC4322B	Friction spring	2	17
CFC4323K2E	Lid	1	17
CFC4325E	Friction piece	2	17
CFC4329C	Pointer	1	19
CFC4347B	Washer	1to3	17
CFC4363B	Screw	1	19
CFC4369C	Screw	1	19
CFC4389C	Spring	1	19
CFC4398C	Spring	1	19
CFC4536-1B	Plastic washer	2	20
CFC4547C	Screw	1	20
CFC4548B	Spring	1	20
CFC4549B	Anchor	1	24
CFC4663B	Disk	2	23,25
DFC4051B	Mirror	1	21
DFC4081B	Sleeve bush	1	21
DFC4318A	Screw	1	19
DFC4674D	Brake bar	2	23,25

Parts No.	Description	Pcs.	Ref. Page
DFC4915C	Anchor	1	22
DFC4918B	Anchor	1	22
DFC4943D	Leaf spring	1	22
DFC4951-1	Washer t=0.1	1to3	19
DFC4951-2	Washer t=0.05	1to3	19
DFC4951-3	Washer t=0.2	1to3	19
FC4027C	Nut	2	25
FC4031A	Film roller	2	21
FC4048E	Leaf spring	1	21
FC4094A	Screw	5	21
FC4134D	Spring	1	22
FC4135B	Anchor	1	22
FC4155K2L	Light-tight flap assy.	1	21
FC4159B	Screw	1	21
FC4524B	Spring	1	24
FC4662A	Nut	2	23,25
GFC4194F	Spring	1	19
HFC4034KD	T-Spring	1	21
HFC4365A	Stopper	1	19
HFC4381E	Friction milled wheel	1	20
MFC4191C	Pawl	1	19
MFC4192C	Shoulder screw	1	19
MFC4359A	Spring	1	19
MFC4362B	Screw	1	20
MFC4364D	Spring	1	20
MFC4382-1K2F	Friction wheel shaft	1	20
MFC4382-2B	Screw	1	20
MFC4384D	Spring	1	22
MFC4385B	Ancher	1	22
MFC4394B	Ancher	1	20
MFC4512D	Bottom cover	1	24
MFC4521KC	Safety lever	1	24
MFC4653C	Stopper	1	24
SN149	Set screw	4	23,25
PB1.7x2.5BNi	Screw for EFC4195E	2	24

Parts No.	Description	Pcs.	Ref. Page
PB1.7x2.5BNi	Screw for EFC4196B	2	24
	for EFC4377D	3	20
	for EFC4561KC	6	23
PB1.7x3.5BNi	Screw for EFC4511L	3	24
PB2x2BNi	Screw for EFC4188B	2	22
	for EFC4197A	1	24
	for EFC4828K2B	1	20
PB2x3BNi	Screw for EFC4913K2	1	22
	for EFC4942A	2	22
PB2x3Cr	Screw for EFC4650	2	24
	for EFC4665D(Right)	2	25
	for EFC4665D(Left)	2	23
PB2x3.5BNi	Screw for EFC4821K3C	3	20
PB2x4BNi	Screw for EFC4821K3C	1	20
PB2x4CR	Screw for EFC4632K2J	3	22
	for EFC4636K2C	3	22
PD1.7x2.5BNi	Screw for EFC4511L	1	24
PD1.7x4BNi	Screw for EFC4895K2E	5	17
PD1.7x5.5BNi	Screw for EFC2666K2C	1	25
PD2x2BNi	Screw for MFC4512D	3	24
PD2x2.5BNi	Screw for EFC4012K2C	2	21
	for EFC4071C	3	22
	for EFC4851K2E	2	20
PD2x3BNi	Screw for EFC4028F	6	18
	for EFC4032E	2	21
	for EFC4033I	2	21
	for EFC4614E	2	18
	for EFC4611K2L	2	18
	for EFC4612K2F	6	17
	for EFC4942A	1	22
PD2x4Cr	Screw for EFC4650(Right)	3	24
	for EFC4650(Left)	4	24
PD2x5BNi	Screw for EFC4021E	4	21
	for EFC4072C	1	22
	for EFC4614E	2	18

Parts No.	Description	Pcs.	Ref. Page
PD2x5BNi	Screw for EFC4650(Left)	3	23
	for EFC4650(Right)	3	25
PD2x7BNi	Screw for EFC4511L	3	24
	for EFC4611K2L	2	18
PD2.6x4BNi	Screw for EFC4025E	4	25
3PB1.4x2.5BNi	Screw for EFC4352A	3	19
3PB1.7x2BNi	Screw for FC4155K2I	3	21
	for HFC4365A	2	19
	for EFC4676B	1	25
	for EFC4678B	1	23
	for EFC4611K2L	3	18
3PB1.7x2.5BNi	Screw for EFC4186C	2	22
	for EFC4943D	2	22
3PB1.7x3BNi	Screw for AFC4052D	1	25
3PB1.7x3.5BNi	Screw for AFC4052D	2	25
	for EFC4511L	6	23
3PB1.7x4BNi	Screw for EFC4116B	2	18
3PB2x2BNi	Screw for AFC4053D	1	25
3PB2x2Cr	Screw for FC4048E	3	21
3PB2x4BNi	Screw for EFC4341K2C	2	19
3PB2x5BNi	Screw for EFC4042B	2	25
3PD1.4x2.5BNi	Screw for EFC4611K2L	1	18
	for EFC4612K2F	1	17
	for EFC4926A	1	22
3PD1.7x3BNi	Screw for CFC4323K2E	2	17
	for EFC4564KA	4	23
3PD1.7x3.5BNi	Screw for EFC2658K2C	2	20
	for EFC4321B	2	17
4B1.7x2.5	Screw for EFC4647K2B	1	17
2.5C1.7x2.5Cr	Screw for EFC4191K2C	2	18
E-17	E-ring	1	20
	E-ring	2	22
4W2x0.1	Washer	2	20
6W4x0.2	Washer	1	23

Back cover (EFC4400)

Parts No.	Description	Pcs.	Ref. Page
EFC4411K2D	Back cover assy.	1	26
EFC4421K2A	Pressure plate	1	26
EFC4423A	Nut	2	26
EFC4427A	Label	1	26
EFC4441D	Lath cover	1	26
EFC4715C	Leatherette	1	26
AFC4723-1B	Sealing sponge	2	26
AFC4723-2A	Sealing sponge	1	26
FC4422E	Peessure plate spring	2	26
FC4444B	Spring	1	26
MFC4414B	Light baffle	1	26
MFC4457B	Disk window	1	26
3PB1.4x1.6BNi	Screw for EFC4441D	4	26

Focusing Hood (EFC 4200)

Parts No.	Description	Pcs.	Ref. Page
EFC4211KF	F H base frame	1	27
EFC4213	Front cover	1	27
EFC4221K2E	Hood cover	1	27
EFC4222K2B	Front frame	1	27
EFC4225B	Spring	1	27
EFC4228B	Screw	2	27
EFC4231K2H	Sports finder frame	1	27
EFC4235K2B	Folding bar	2	27
EFC4236K2B	Folding bar	2	27
EFC4238B	Joint pin	4	27
EFC4239B	Screw	4	27
EFC4241B	Rear panel	1	27
EFC4242C	Bracket	1	27
EFC4251K2A	Magnifier	1	27
EFC4263B	Bracket	2	27
EFC4281K2B	Finder frame	1	27
EFC4712C	Leatherette	2	27
EFC4713C	Leatherette	1	27
EFC4714D	Leatherette	1	27
CFC4234D	Spring	1	27
DFC4226C	Shaft	1	27
DFC4243C	Shaft	1	27
DFC4271D	Plate holder	1	27
DFC4272D	Cover	1	27
DFC4273F	Shoulder screw	1	27
DFC4274D	Spring	1	27
DFC4275E	Holder	1	27
DFC4284C	Spring	1	27
DFC4285C	Spring	1	27
FC4224D	Spring anchor	2	27
FC4227B	Shoulder screw	1	27
FC4244B	Spring	1	27
FC4265B	Spring	2	27
MFC4255A	Shaft	1	27
MFC4261G	Hood plate right	1	27

Parts No.	Description	Pcs.	Ref. Page
MFC4262G	Hood plate left	1	27
MFC4264C	Shaft	2	27
RS2736	Mamiya mark	1	27
PB1.7x3BNi	Screw for EFC4263B	4	27
PB2x2BNi	Screw for DFC4271D	2	27
PD1.7x2.5BNi	Screw for EFC4242C	2	27
PD2x3BNi	Screw for DFC4272C	2	27
3PB1.7x3BNi	Screw for EFC4213B	4	27
3PB1.7x2.5BNi	Screw for EFC4221K2E	4	27

CLARIFICATION CHART

for

Mamiya C330 Professional *f*

and

Mamiya C330 Professional

Mamiya

Modification of Winding gear assy.

Type "A" Type "B" Type "C"

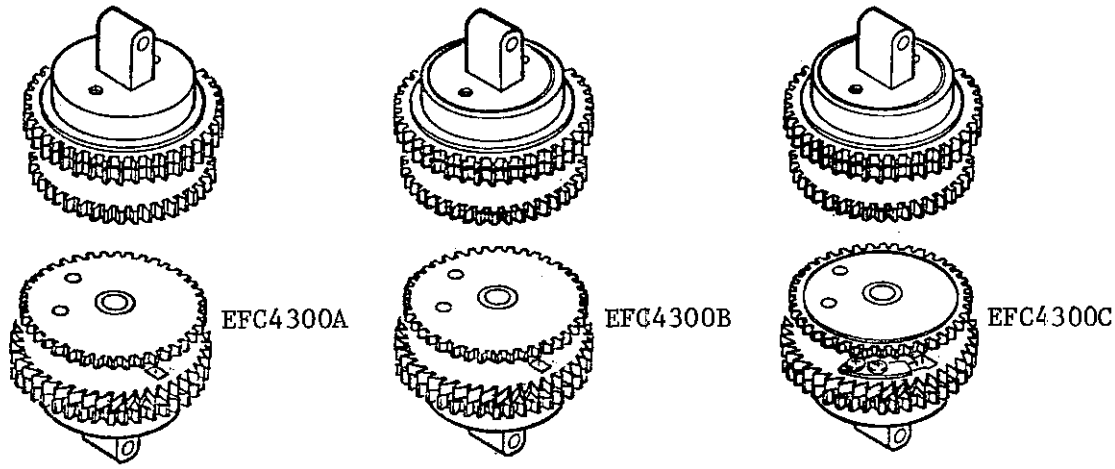

Type "C" is the latest one which has been strengthened by mixing cooper in its material.

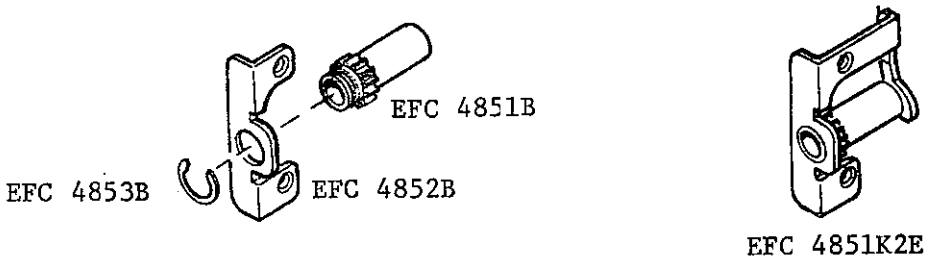

Replacement in pair····· Possible

Modification of Pinion shaft hub

Exclusive use for C330 | Exclusive use for C330f

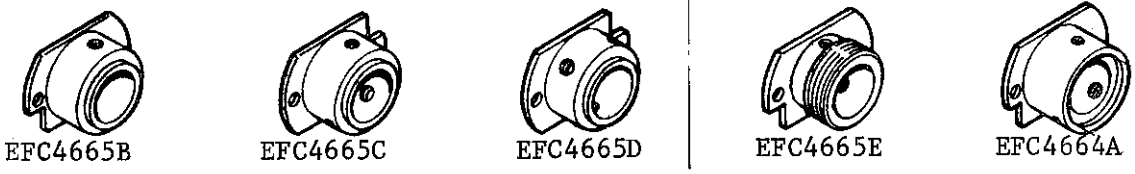

Modification of Click lever

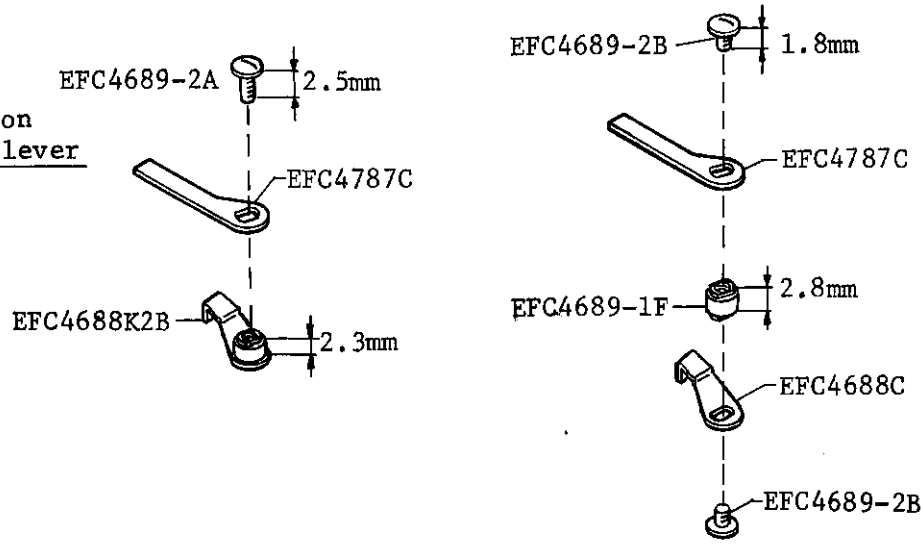

Modification of Focusing screen grass

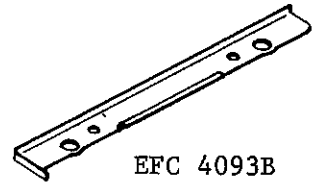

EFC 4093B

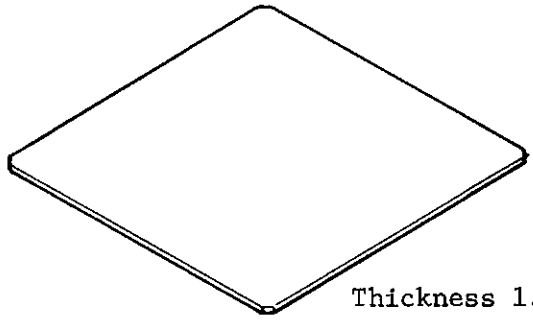

Thickness 1.5mm

EFC 4091C

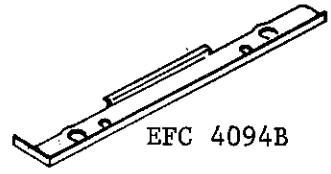

EFC 4094B



EFC 4095A

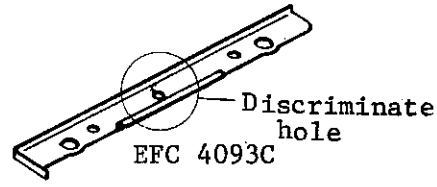

EFC 4093C

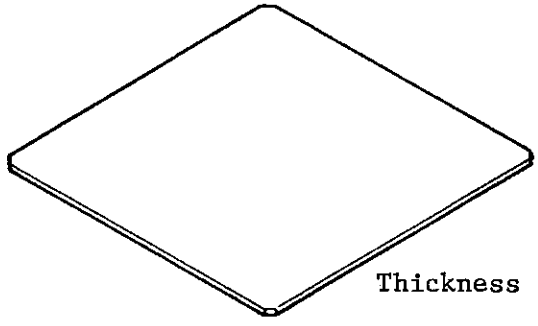

Thickness 1.3mm

EFC 4091D

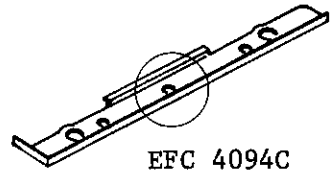

EFC 4094C



EFC 4095B

Modification of Right panel assy.

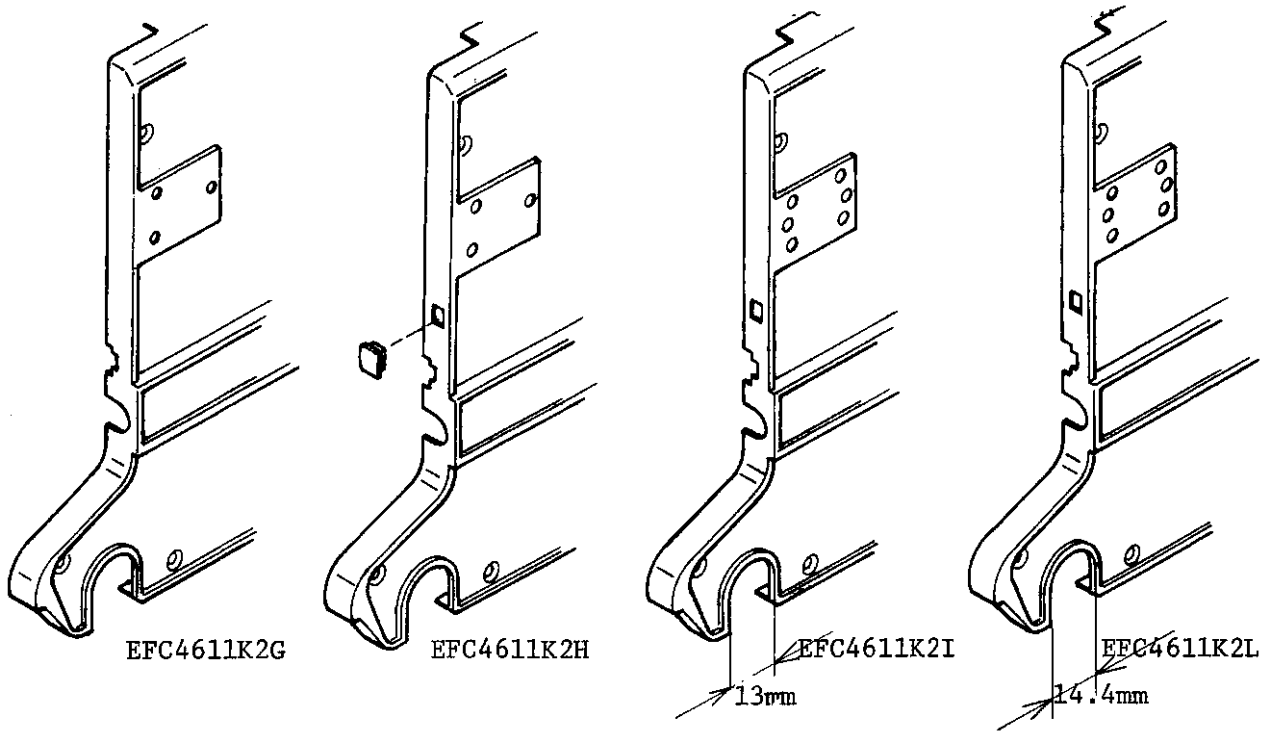

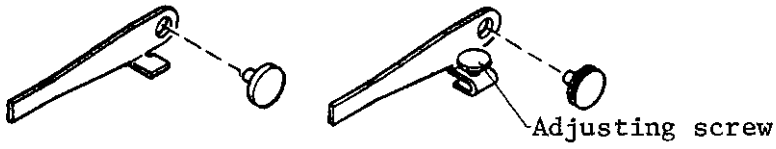

EFC 4697D EFC 4697E

EFC 4194A EFC 4694C

EFC 4691A EFC 4691C

EFC 4692B EFC 4692C

Modification of Accessory shoe

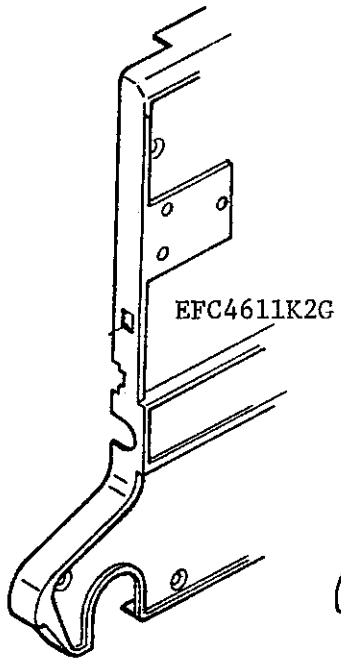

EFC4611K2G

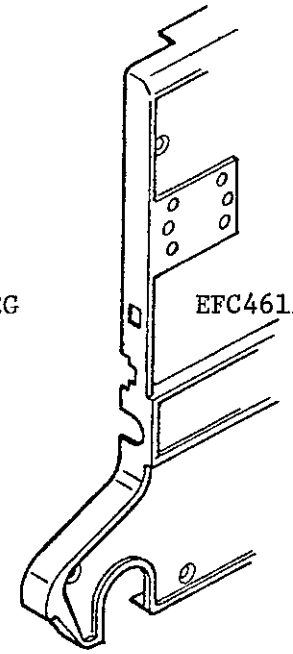

EFC4611K2I and EFC4611K2L

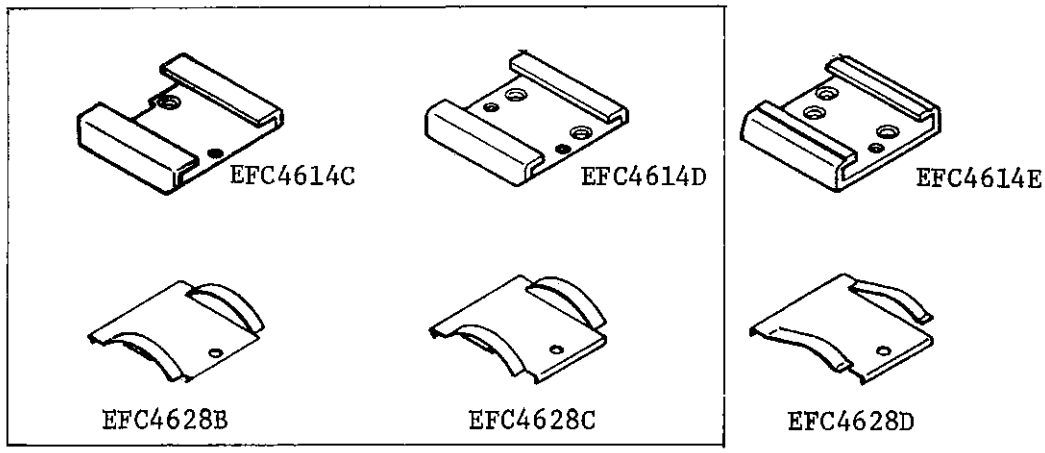

Two old shoes and covers in square are no more available the latest shoe EFC4614E with EFC4628D can be installed on old body.

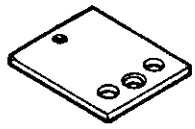

EFC4072B

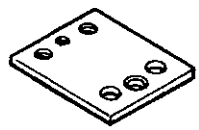

EFC4072C



DFC4615C



EFC4615F

New film counter linking mech.

Use for C330

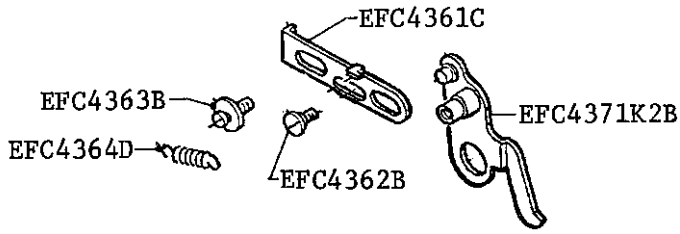

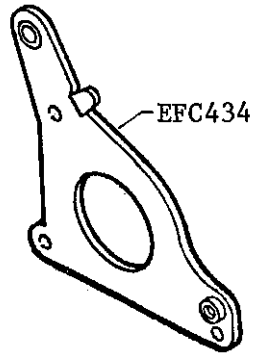

Exclusve Use for C330 f

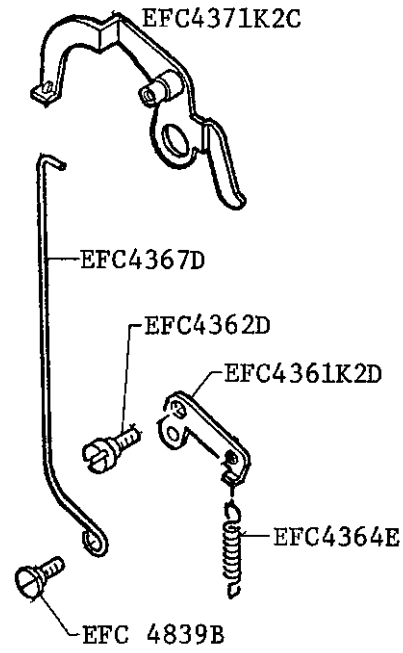

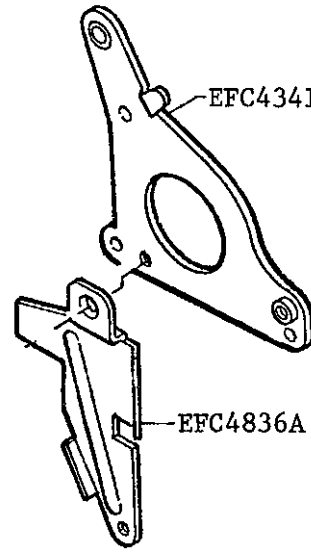

Exclusve use for C330

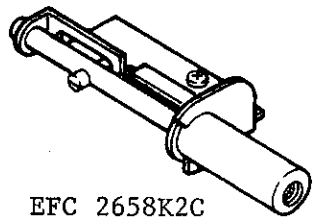

EFC 2658K2C

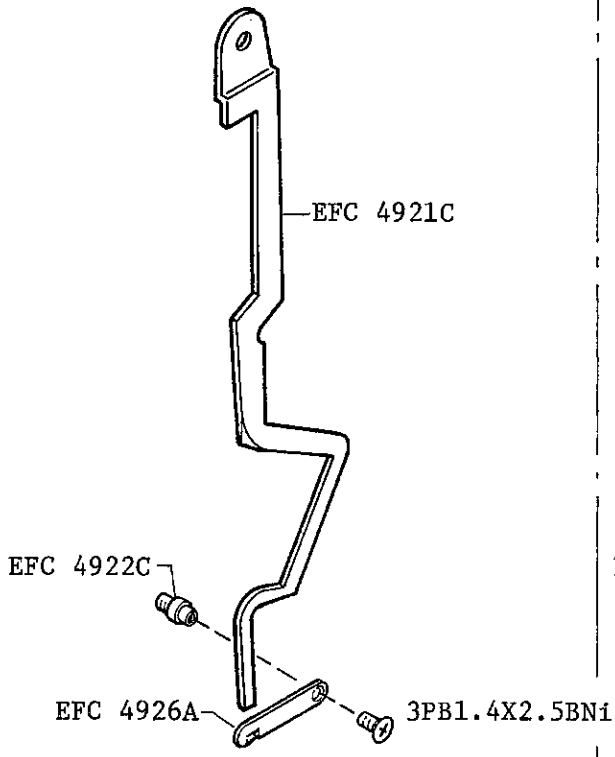

EFC 4029D

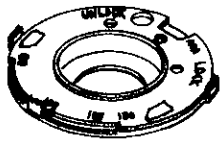

EFC 4639K2D

Exclusve use for C330f

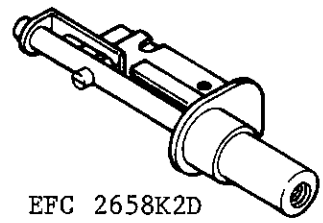

EFC 2658K2D

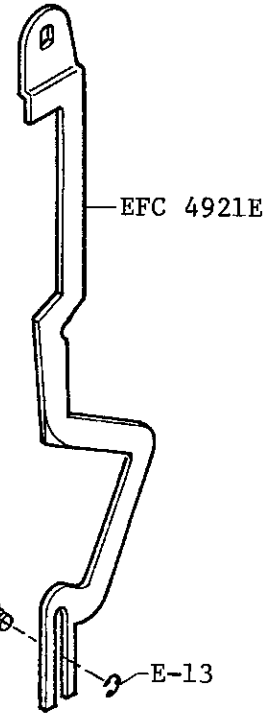

EFC 4029E

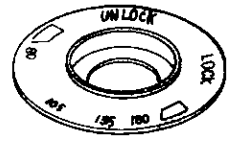

EFC 4639K2E

Use for C330

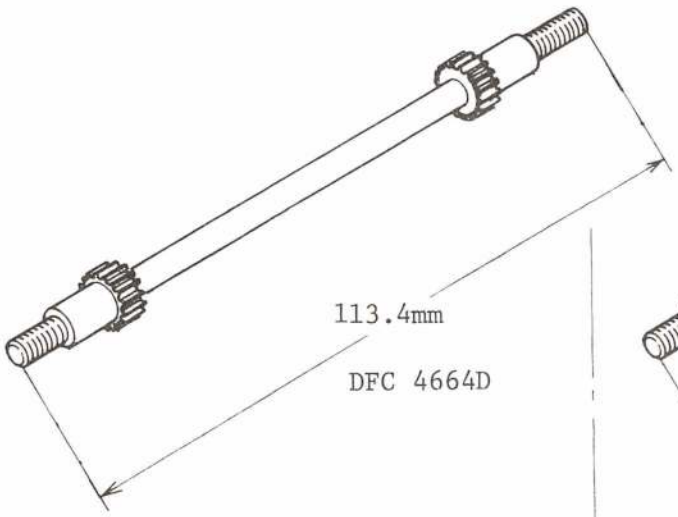

DFC 4664D

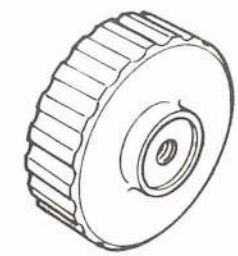

EFC 4661E

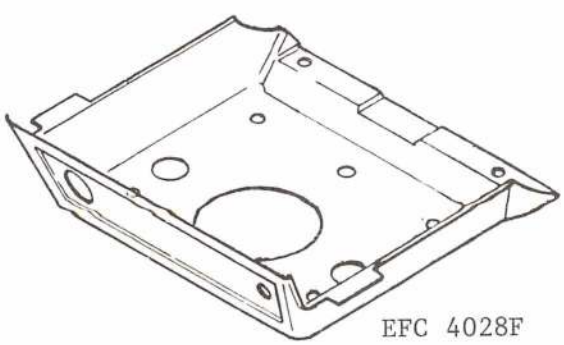

EFC 4028F

Use for C330f

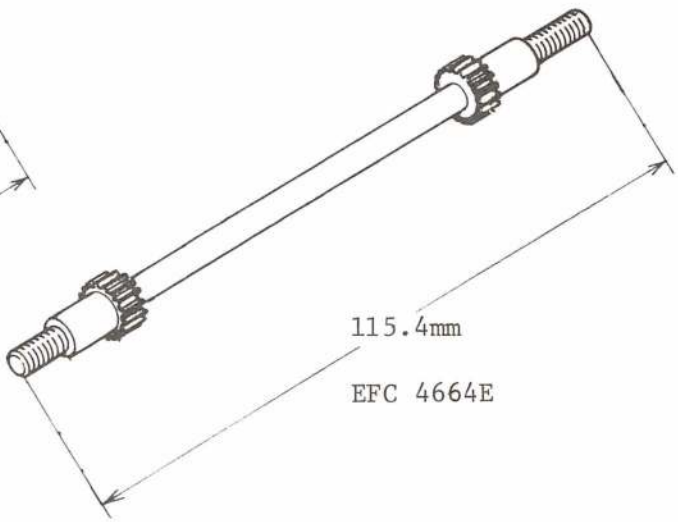

EFC 4664E

EFC 4661F

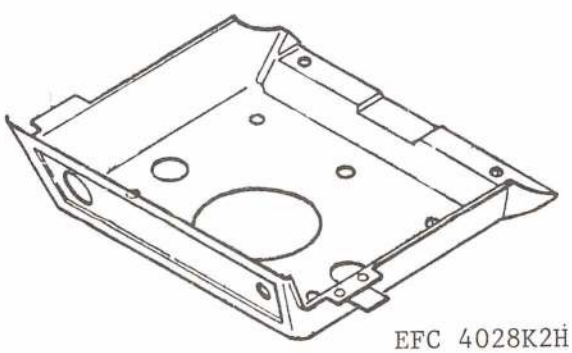

EFC 4028K2H

Three parts for C330 are no more available, therefore it is possible to replace them with parts for C330f as shown in right hand side drawings.

Printed in Japan
May-1978 ,P450